

This manual is not for sale.

It is free on the internet.

Other people scanned this material for free for the use of hobbyisys with the condition that it is not for sale.

It is unethical to sell it.

It may not be sold or bundled in any way with any product or service or access right for sale or lease.

If you paid for it, take your money back.

This page intentionally left blank

# I N S T R U C T I O N M A N U A L

---

**Panoramic\***

**PANALYZOR MODULE**

**MODEL CA-5**

**Serial No. \_\_\_\_\_**

**Instruction Manual No. 110-5046**

**SINGER**  
INSTRUMENTATION

*Precision electrical and electronic instruments for measurement*



**THE SINGER COMPANY • METRICS DIVISION**

# TABLE OF CONTENTS

| Paragraph                                |  | Page |
|--|--|------|
| <b>SECTION I — INTRODUCTION</b>          |  |      |
| 1-1                                      | Scope of Manual . . . . .  | 1-1  |
| 1-4                                      | Purpose and Use of Equipment . . . . .                                     | 1-1  |
| 1-7                                      | General Description . . . . .  | 1-1  |
| 1-14                                     | Specifications . . . . .   | 1-2  |
| 1-16                                     | Transistor, Diode and Crystal Complement . . . . .                         | 1-2  |
| <b>SECTION II — OPERATION</b>            |  |      |
| 2-1                                      | General . . . . .  | 2-1  |
| 2-3                                      | Installation . . . . .   | 2-1  |
| 2-5                                      | Operation . . . . .  | 2-1  |
| 2-6                                      | Operating Controls and Connectors . . . . .                                | 2-1  |
| 2-7                                      | Turn-on Procedures . . . . .   | 2-1  |
| 2-8                                      | Pre-operating Checks and Adjustments . . . . .                             | 2-1  |
| 2-9                                      | Sweep Width Calibration for Variable Sweep<br>Mode . . . . .               | 2-5  |
| 2-10                                     | General Operating Procedure . . . . .                                      | 2-5  |
| 2-11                                     | Narrow Band Analysis . . . . .   | 2-7  |
| 2-12                                     | Single Sideband Analysis . . . . .   | 2-9  |
| 2-13                                     | Turn-off Procedure . . . . .   | 2-9  |
| 2-14                                     | Packaging Instructions . . . . .   | 2-9  |
| 2-16                                     | Short-term Packaging . . . . .   | 2-10 |
| 2-17                                     | Long-term Packaging and Packaging for Shipment . . . . .                   | 2-10 |
| <b>SECTION III — THEORY OF OPERATION</b> |  |      |
| 3-1                                      | General . . . . .  | 3-1  |
| 3-3                                      | Simplified Block Diagram Analysis . . . . .                                | 3-1  |
| 3-7                                      | Detailed Theory of Operation . . . . .                                     | 3-2  |
| 3-9                                      | Input Attenuator Assembly A10 . . . . .                                    | 3-2  |
| 3-10                                     | First Mixer Assembly A9 . . . . .  | 3-2  |
| 3-11                                     | 500-kHz I-f Amplifier Assembly A5 . . . . .                                | 3-2  |
| 3-12                                     | Two-tone Generator and 2nd Mixer Assembly A3 . . . . .                     | 3-2  |
| 3-13                                     | 100-kHz Crystal I-f Amplifier Assembly A8 . . . . .                        | 3-7  |
| 3-14                                     | Log/Lin I-f Amplifier Assembly A7 . . . . .                                | 3-7  |
| 3-15                                     | Narrow Band Oscillator and Sawtooth Generator<br>Assembly A6 . . . . .     | 3-7  |
| 3-16                                     | Local Oscillator and Control Assembly A2 . . . . .                         | 3-8  |
| 3-17                                     | Calibration Oscillator and 5-kHz Marker Generator<br>Assembly A4 . . . . . | 3-8  |
| <b>SECTION IV — MAINTENANCE</b>          |  |      |
| 4-1                                      | General . . . . .  | 4-1  |
| 4-4                                      | Test Equipment Required . . . . .  | 4-1  |
| 4-6                                      | Preliminary Inspection . . . . .   | 4-1  |
| 4-8                                      | Component Locations . . . . .  | 4-1  |
| 4-9                                      | Preliminary Inspection Routine . . . . .                                   | 4-1  |

## TABLE OF CONTENTS (Cont'd)

| Paragraph                                |   | Page |
|--|---|------|
| <b>SECTION IV — MAINTENANCE (Cont'd)</b> |   |      |
| 4-10                                     | Minimum Performance Standards Checks . . . . .        | 4-1  |
| 4-12                                     | Power Supply Check . . . . .                          | 4-14 |
| 4-14                                     | Systematic Trouble Localization . . . . .             | 4-14 |
| 4-17                                     | Alignment Procedure . . . . .                         | 4-15 |
| 4-21                                     | Sweep Rate Adjustment . . . . .                       | 4-15 |
| 4-22                                     | Marker Frequency Adjustment . . . . .                 | 4-15 |
| 4-23                                     | Sweep Linearity Adjustment . . . . .                  | 4-19 |
| 4-24                                     | DC Balance Adjustment . . . . .                       | 4-19 |
| 4-25                                     | 100-kHz Crystal Filter Adjustment . . . . .           | 4-19 |
| 4-26                                     | Log/Lin Amplitude Adjustment . . . . .                | 4-20 |
| 4-27                                     | Preset and Variable Sweep Widths Adjustment . . . . . | 4-20 |
| 4-28                                     | If Gain and Bandwidth Adjustment . . . . .            | 4-21 |
| 4-29                                     | Two-Tone Test Balance Adjustment . . . . .            | 4-22 |
| 4-30                                     | Typical Voltage Measurements . . . . .                | 4-22 |

## SECTION V — SCHEMATIC DIAGRAMS

## SECTION VI — PARTS LIST

|      |   |     |
|------|---|-----|
| 6-1  | Introduction . . . . .                      | 6-1 |
| 6-3  | Ordering Information . . . . .              | 6-1 |
| 6-5  | How to Use the Parts List . . . . .         | 6-1 |
| 6-7  | Ref Symbol Column . . . . .                 | 6-1 |
| 6-8  | Description Column . . . . .                | 6-1 |
| 6-9  | Manufacturer's Part Number Column . . . . . | 6-1 |
| 6-10 | Mfr's Code Column . . . . .                 | 6-1 |
| 6-11 | Maint Qty Column . . . . .                  | 6-1 |

## LIST OF ILLUSTRATIONS

| Figure |  | Page |
|--------|--|------|
| 1-1    | Model CA-5 Panalyzer . . . . .   | iv   |
| 1-2    | Typical Resolution Versus Sweep Width . . . . .  | 1-3  |
| 1-3    | Typical Minimum Frequency Separation Required to<br>Measure Amplitude Ratios (Skirt Selectivity) . . . . .                       | 1-4  |
| 2-1    | Outline Dimension Drawing, Panalyzer . . . . .   | 2-1  |
| 2-2    | Operating Controls and Connectors . . . . .  | 2-4  |
| 2-3    | Typical CRT Marker Presentations for Variable<br>Sweep Width Mode . . . . .  | 2-6  |
| 2-4    | Ringing as an Indication of Optimum Resolution . . . . .   | 2-8  |
| 2-5    | Typical CRT Presentation of Two-tone Test . . . . .  | 2-9  |
| 2-6    | Packaging the Panalyzer . . . . .  | 2-11 |
| 3-1    | Panalyzer, Simplified Block Diagram . . . . .  | 3-3  |
| 3-2    | Panalyzer, Detailed Block Diagram . . . . .  | 3-5  |
| 4-1    | Panalyzer, Top View . . . . .  | 4-3  |
| 4-2    | Panalyzer, Bottom View . . . . .   | 4-4  |
| 4-3    | Panalyzer, Rear View . . . . .   | 4-5  |
| 4-4    | Minimum Performance Standards, Equipment<br>Setup . . . . .  | 4-6  |
| 5-1    | Panalyzer, Schematic of Interconnection . . . . .  | 5-3  |
| 5-2    | Input Attenuator Assembly A10, First Mixer Assembly<br>A9, and 500-kHz I-f Amplifier Assembly A5,<br>Schematic Diagram . . . . . | 5-5  |

## LIST OF ILLUSTRATIONS (Cont'd)

| Figure |   | Page |
|--------|---|------|
| 5-3    | Two-tone Generator and 2nd Mixer Assembly A3,<br>Schematic Diagram .....              | 5-7  |
| 5-4    | 100-kHz Crystal I-f Amplifier Assembly A8,<br>Schematic Diagram .....                 | 5-9  |
| 5-5    | Log/Lin Amplifier Assembly A7, Schematic<br>Diagram .....                             | 5-11 |
| 5-6    | Narrow Band Oscillator and Sawtooth Generator<br>Assembly A6, Schematic Diagram ..... | 5-13 |
| 5-7    | Local Oscillator and Control Assembly A2,<br>Schematic Diagram .....                  | 5-15 |
| 5-8    | Calibration Oscillator and 5-kHz Generator Assembly<br>A4, Schematic Diagram .....    | 5-17 |
| 5-9    | Gain and Bandwidth Control Assembly A1,<br>Schematic Diagram .....                    | 5-19 |
| 6-1    | Parts List Sample .....   | 6-2  |

## LIST OF TABLES

| Table |   | Page |
|-------|---|------|
| 1-1   | Specifications .....                            | 1-2  |
| 1-2   | Transistor, Diode, and Crystal Complement ..... | 1-4  |
| 2-1   | Operating Controls and Connectors .....         | 2-3  |
| 4-1   | Test Equipment Required .....                   | 4-1  |
| 4-2   | Preliminary Inspection Routine .....            | 4-2  |
| 4-3   | Minimum Performance Standards Checks .....      | 4-7  |
| 4-4   | Systematic Trouble Localization .....           | 4-16 |
| 4-5   | Voltage Measurements .....                      | 4-22 |
| 6-1   | Manufacturer's Code .....                       | 6-2  |
| 6-2   | Parts List .....                                | 6-5  |



Figure 1-1. Model CA-5 Panalyzer

## SECTION I INTRODUCTION

### 1-1. SCOPE OF MANUAL.

1-2. This instruction manual provides operating and maintenance instructions for the PANORAMIC\* Panalyzer, Model CA-5 (hereafter referred to as the Panalyzer) manufactured by The Singer Company, Metrics Division. Included in this manual are a general description of the Panalyzer, installation and operating instruction, theory of operation, maintenance information and data, schematic diagrams and a repair parts list. The Panalyzer is illustrated in figure 1-1.

1-3. The information contained in this manual refers to the standard version of the Panalyzer and is current only to the date of publication. Differences in equipment components, specifications, and performance resulting from The Singer Company's continuous production improvement program or individual customer design and application requirements are described in addendum sheets.

### 1-4. PURPOSE AND USE OF EQUIPMENT.

1-5. The Panalyzer is a plug-in unit designed to analyze and monitor complex and/or random signals when used in the PANORAMIC Model SSB-50 Single Sideband Analyzer System. Some typical applications of the Panalyzer are listed below:

- a. Single sideband studies.
- b. Hum sideband studies (e. g.,  $\pm 60$ - or  $\pm 50$ -Hz component readily analyzed down to  $-60$  dB).
- c. R-f cross modulation analysis.
- d. Adjacent channel interference investigation.
- e. Band occupancy studies.
- f. Residual carrier and sideband level measurements.
- g. Spurious oscillation or modulation detection.
- h. F-m deviation measurements.

1-6. Inquiries are invited regarding special applications of the Panalyzer to particular requirements. Such inquiries should be directed to the attention of the Applications Engineering Department.

\* A Trademark of THE SINGER COMPANY

### 1-7. GENERAL DESCRIPTION.

1-8. The Panalyzer is a completely solid-state narrow-band swept analyzer module with an input center frequency of 500 kHz. It operates in conjunction with the Model RF-8 Tuning Head and Model REC-2 Range Extending Converter in the SSB-50 Single Sideband Analyzer System to analyze signals in the 10 Hz to 40 MHz frequency range. The Panalyzer also generates the sawtooth waveform for the horizontal sweep deflection amplifiers in its associated main frame.

1-9. The module has five preset sweep ranges that can be selected by means of a FREQ SCALE-Hz/DIV switch: 150 Hz, 500 Hz, 3.5 kHz, 7 kHz, and 14 kHz; a 0-100 kHz variable sweep mode can also be selected by this control. In the preset positions of the FREQ SCALE-Hz/DIV switch, the resolution and sweep rate is automatically optimized. Continuous i-f bandwidth (resolution) control from 10 Hz to approximately 2 kHz is obtainable on the variable position of the control. An additional manual sweep mode enables an operator to position the CRT dot to any point of interest.

1-10. Tuning the Panalyzer to an input center frequency of 500 kHz is accomplished by the CENTER FREQ 1 control for the two lower preset sweep ranges (150 and 500 Hz) and the CENTER FREQ 2 COARSE and FINE controls for the remaining three presets sweep ranges and variable sweep range. For the variable sweep range, the FREQ SCALE control varies the sweep width from 0 to 100 kHz, and the SWEEP RATE control varies the sweep rate from 0.1 to 30 Hz.

1-11. Internal test signals are also provided within the Panalyzer to locate its center frequency; to set up the sweep width when operating in the variable sweep mode; and to check the odd-order distortion of the Panalyzer. The front-panel TEST SIGNAL-Hz control permits the selection of any or none of these test signals.

1-12. The Panalyzer provides either a linearly or logarithmically scaled d-c output. Signal sensitivity is less than 20 microvolts for full-scale linear output and less than 200 microvolts for the logarithmic output. Calibrated r-f (ATTENUATOR switches) and i-f (IF ATTENUATOR switch) attenuators for adjusting the deflection produced by strong signals are provided; an uncalibrated continuously variable GAIN control is also provided. Residual unwanted



**Section I  
Introduction**

in-band responses, including those due to hum and intermodulation distortion, are suppressed at least 60 dB.

1-13. The Panalyzer occupies a half-rack width in such units as the Model MF-5 Main Frame. Components are mounted on the rear of the front panel and on nine printed-circuit boards. Operating power for the Panalyzer is provided by the main frame in which it is installed, thereby eliminating the need for an integral power supply.

**1-14. SPECIFICATIONS.**

1-15. Table 1-1 lists the electrical and physical characteristics of the Panalyzer.

**1-16. TRANSISTOR, DIODE AND CRYSTAL COMPLEMENT.**

1-17. The transistor, diode and crystal complement of the Panalyzer is given in table 1-2.

**TABLE 1-1. SPECIFICATIONS**

|                                      |  |
|--------------------------------------|--|
| Input center frequency:              | 500 kHz.   |
| Bandpass region (after first mixer): | 450 to 550 kHz.  |
| Sweep width:                         | Preset: 150 Hz, 500 Hz, 3.5 kHz, 7 kHz, and 14 kHz with automatic optimum resolution.<br>Variable: 0 to 100 kHz, continuously adjustable.  |
| Sweep rate:                          | 0.1 Hz for 150- and 500-Hz preset sweep widths (may be increased to 1-Hz with front panel control); 1 Hz for 3.5-, 7-, and 14-kHz preset sweep widths; 0.1 to 30 Hz for 0 to 100 kHz variable sweep width; or manually controlled.   |
| I-f bandwidth (Resolution):          | 10 Hz to 2 kHz at -6 dB points. Automatically optimized for 5 preset sweep width ranges with 50-Hz skirt selectivity at -60 dB point on 150-Hz preset scan. (Resolution is the frequency separation of two signals of equal amplitude, the deflections of which intersect 3 dB down from their amplitude peaks. Figure 1-2 is a resolution graph for a CRT linear horizontal scan. Figure 1-3 presents the minimum frequency separation required to measure signals of unequal amplitude. These graphs show typical curves.) |
| Amplitude scale:                     | Linear: Calibrated 1 to 10 in 10 percent increments, accuracy $\pm 3\%$ .<br>Log: Calibrated 0 to -40 dB in 5 dB increments, accuracy $\pm 1$ dB from 0 to -30 dB, $\pm 2$ dB from -30 dB to -40 dB; extendable to -60 dB.   |
| Sensitivity full scale:              | Linear deflection: 20 microvolts minimum.<br>Logarithmic deflection: 200 microvolts minimum.   |
| Minimum detectable signal:           | 2 microvolts.  |
| Response flatness:                   | Overall: Better than $\pm 2$ dB, 2 MHz - 40 MHz.<br>In-band: Better than $\pm 0.5$ dB.   |
| Dynamic range:                       | All in-band (odd-order) intermodulation products at least 60 dB down.  |
| Image rejection:                     | Better than 40 dB for 500-kHz i-f  |

(Cont'd)

TABLE 1-1. SPECIFICATIONS (Cont'd)

|                              |   |
|------------------------------|---|
| Attenuators:                 | Input: 0 to 70 dB, in 1 dB steps; accuracy, 0.05 dB/dB, cumulative.<br>I-f: 20 dB ( $\pm 1/2$ dB).                                |
| Input impedance:             | 50 ohms direct or 10 megohms with optionally available PRB-50 Probe (panel jack available for powering the PRB-50).               |
| Self-test features:          |   |
| Calibrating oscillator:      | 500-kHz crystal-controlled oscillator for checking center frequency. Amplitude is continuously adjustable.                        |
| Internal marker:             | 5-kHz oscillator modulates 500-kHz crystal-controlled oscillator to provide 5-kHz markers for sweep width calibration to 100 kHz. |
| Two-tone test:               | Two crystal-controlled r-f tones (3 MHz and 3.002 MHz).   |
| Operating temperature range: | 0 to 55 degrees centigrade.   |
| Physical characteristics:    |   |
| Height:                      | 6-1/8 inches  |
| Width:                       | 8-1/4 inches  |
| Depth (behind panel):        | 10-1/4 inches   |
| Weight:                      | 9 pounds  |

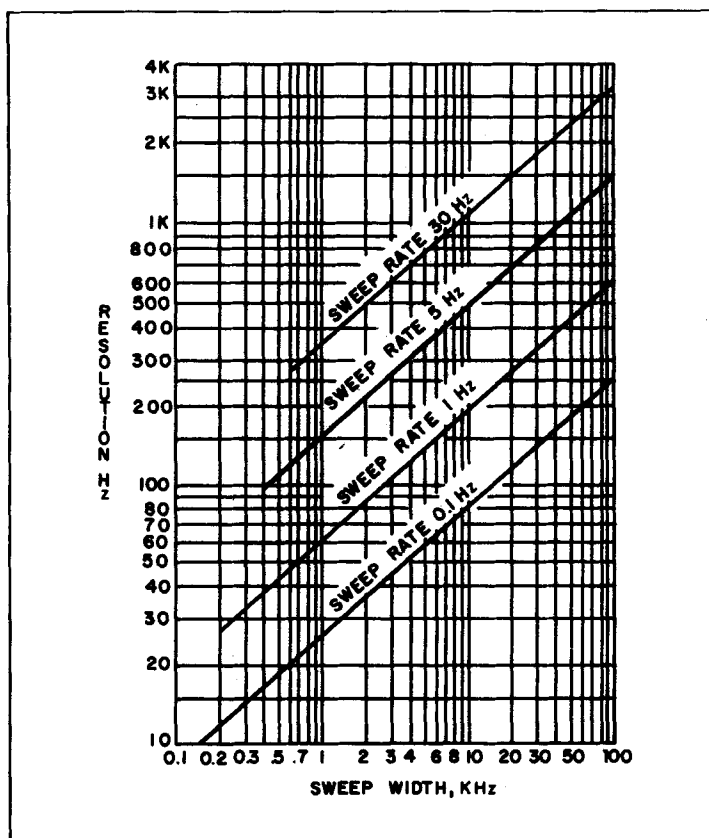


Figure 1-2. Typical Resolution Versus Sweep Width

Section I  
Introduction

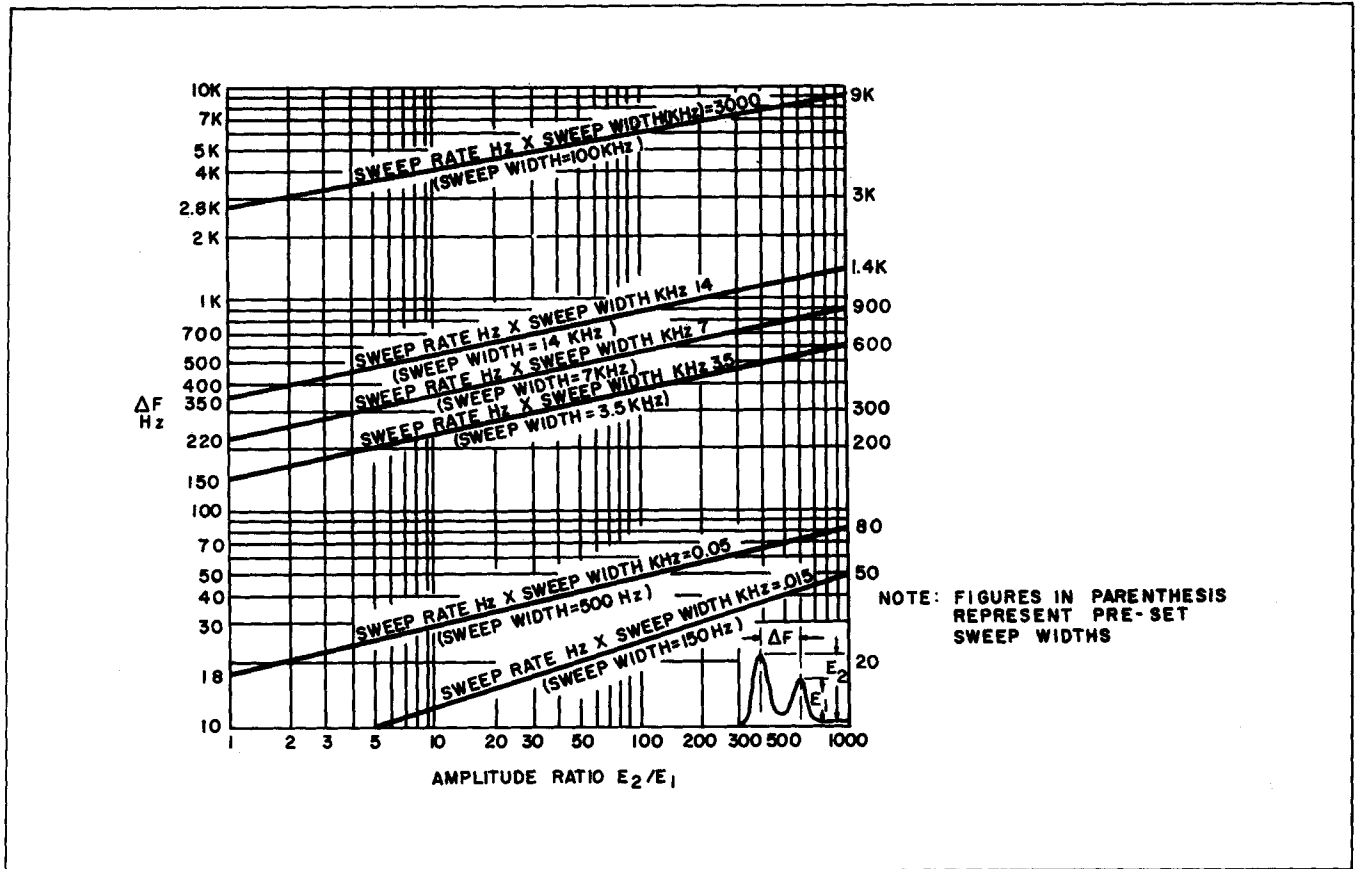


Figure 1-3. Typical Minimum Frequency Separation Required to Measure Amplitude Ratios (Skirt Selectivity)

TABLE 1-2. TRANSISTOR, DIODE, AND CRYSTAL COMPLEMENT

| Reference Designation Symbol | Type             | Function                   |
|------------------------------|------------------|----------------------------|
| Transistors                  |                  |                            |
| A2Q1, A2Q2                   | 2N3563           | Multivibrator              |
| A2Q3, A2Q5, A2Q6<br>A2Q4     | 2N3638<br>2N3642 | { Unity-gain<br>Amplifier  |
| A2Q7                         | 2N3638           | Emitter Follower           |
| A2Q8                         | 2N3642           | Emitter Follower           |
| A3Q1, A3Q2                   | 2N3638           | Push-Pull Emitter Follower |
| A3Q3                         | 2N3638A          | 3-MHz Osc.                 |
| A3Q4                         | 2N3638A          | 3.002-MHz Osc.             |
| A4Q1, A4Q2                   | 2N3638           | Dual Amplifier             |
| A4Q3                         | 2N3638A          | 500-kHz Osc.               |
| A4Q4                         | 2N3638           | Emitter Follower           |

(Cont'd)

TABLE 1-2. TRANSISTOR, DIODE, AND CRYSTAL COMPLEMENT (Cont'd)

| Reference Designation Symbol | Type                        | Function                  |               |
|------------------------------|-----------------------------|---------------------------|---------------|
| <b>Transistors (cont, d)</b> |                             |                           |               |
| A4Q5, A4Q6                   | 2N3638                      | 5-kHz Marker Gen.         |               |
| A5Q1                         | 2N3638                      | Emitter Follower          |               |
| A5Q2                         | 2N3565                      | Amplifier                 |               |
| A5Q3                         | 2N3642                      | Amplifier                 |               |
| A5Q4                         | 2N3642                      | Emitter Follower          |               |
| A6Q1                         | 2N3564                      | Clapp Osc.                |               |
| A6Q2                         | 2N3638                      | Amplifier                 |               |
| A6Q3                         | 2N3638                      | Emitter Follower          |               |
| A6Q4<br>A6Q5<br>A6Q6         | 2N3642<br>2N3638<br>2N1671B | } Sawtooth Gen.           |               |
| A7Q1                         | 2N3564                      |                           | I-f Amplifier |
| A7Q2                         | 2N3642                      |                           | I-f Amplifier |
| A7Q3, A7Q4                   | 2N3564                      | Log/Lin Amplifier         |               |
| A7Q5, A7Q7, A7Q8, A7Q9       | 2N3564                      | Log Amplifier             |               |
| A7Q6                         | 2N3642                      | Lin Amplifier             |               |
| A7Q10, A7Q11                 | 2N3565                      | Difference Amplifier      |               |
| A7Q12                        | 2N3638A                     | Video Amplifier           |               |
| A7Q13                        | 2N3642                      | Emitter Follower          |               |
| A8Q1, A8Q2                   | 2N3638                      | Dual Emitter Follower     |               |
| A8Q3, A8Q4, A8Q5             | 2N3638                      | Compound Emitter Follower |               |
| A8Q6                         | 2N3638                      | Amplifier                 |               |
| A8Q7, A8Q8, A8Q9             | 2N3638                      | Compound Emitter Follower |               |
| A8Q10, A8Q11, A8Q12          | 2N3638                      | Compound Emitter Follower |               |
| A8Q13, A8Q14, A8Q15          | 2N3638                      | Compound Emitter Follower |               |
| A9Q1                         | 2N2996                      | 1st Mixer                 |               |
| <b>Diodes</b>                |                             |                           |               |
| A2CR1, A2CR2                 | 1N906                       | Clamp                     |               |
| A2CR3                        | ZD2. 4B<br>(Diodes, Inc.)   | Constant Voltage Drop     |               |

(Cont'd)

**TABLE 1-2. TRANSISTOR, DIODE, AND CRYSTAL COMPLEMENT (Cont'd)**

| Reference Designation<br>Symbol                          | Type                      | Function              |
|--|---------------------------|-----------------------|
| <b>Diodes (cont'd)</b>                                   |                           |                       |
| A3CR1, A3CR2, A3CR3<br>A3CR4                             | FDH666<br>(Fairchild)     | Balanced Mixer Diodes |
| A6CR1  | V-900 (Solitron)          | Variable Capacitor    |
| A6CR3  | ZD4. 7B<br>(Diodes, Inc.) | Constant Voltage Drop |
| A7CR1, A7CR3, A7CR5,<br>A7CR7, A7CR9, A7CR11,<br>A7CR13  | 1N251                     | Diode Detector        |
| A7CR2, A7CR4, A7CR6,<br>A7CR8, A7CR10, A7CR11,<br>A7CR14 | 1N251                     | Clamp                 |
| A8CR1, A8CR2, A8CR3,<br>A8CR4, A8CR5, A8CR6              | 1N251                     | Resolution Control    |
| <b>Crystals</b>  |                           |                       |
| A3Y1   | -                         | 3-MHz Oscillator      |
| A3Y2   | -                         | 3.002-MHz Oscillator  |
| A4Y1   | -                         | 500-kHz Oscillator    |
| A8Y1, A8Y2, A8Y3   | -                         | 100-kHz Filter        |

## SECTION II OPERATION

### 2-1. GENERAL.

2-2. This section contains installation and operating instructions for the Panalyzer. The Panalyzer has been factory tested and aligned and is shipped in a ready-to-operate condition. However, no attempt should be made to install or operate the unit until the operator is thoroughly familiar with the contents of this section. Figure 2-1 is an outline dimension drawing of the Panalyzer.

### 2-3. INSTALLATION.

2-4. To install the Panalyzer in the Model MF-5 Main Frame, insert the Panalyzer in the cavity and firmly seat it in place. If any resistance is noted while inserting the Panalyzer, withdraw it and examine the connectors on the rear of the Panalyzer and the rear wall of the main frame cavity for proper alignment. When properly installed, the Panalyzer

front panel should be flush with the main frame panel. Tighten the front-panel fastener on the Panalyzer to mechanically secure it to the main frame.

### 2-5. OPERATION.

2-6. OPERATING CONTROLS AND CONNECTORS. The operating controls and connectors for the Panalyzer are described in table 2-1 and shown in figure 2-2.

2-7. TURN-ON PROCEDURES. The Panalyzer receives power from the Model MF-5 Main Frame. Therefore the turn-on procedures are given in the instruction manual for the main frame.

2-8. PRE-OPERATING CHECKS AND ADJUSTMENTS. Prior to operating the Panalyzer, perform the following checks and adjustments:

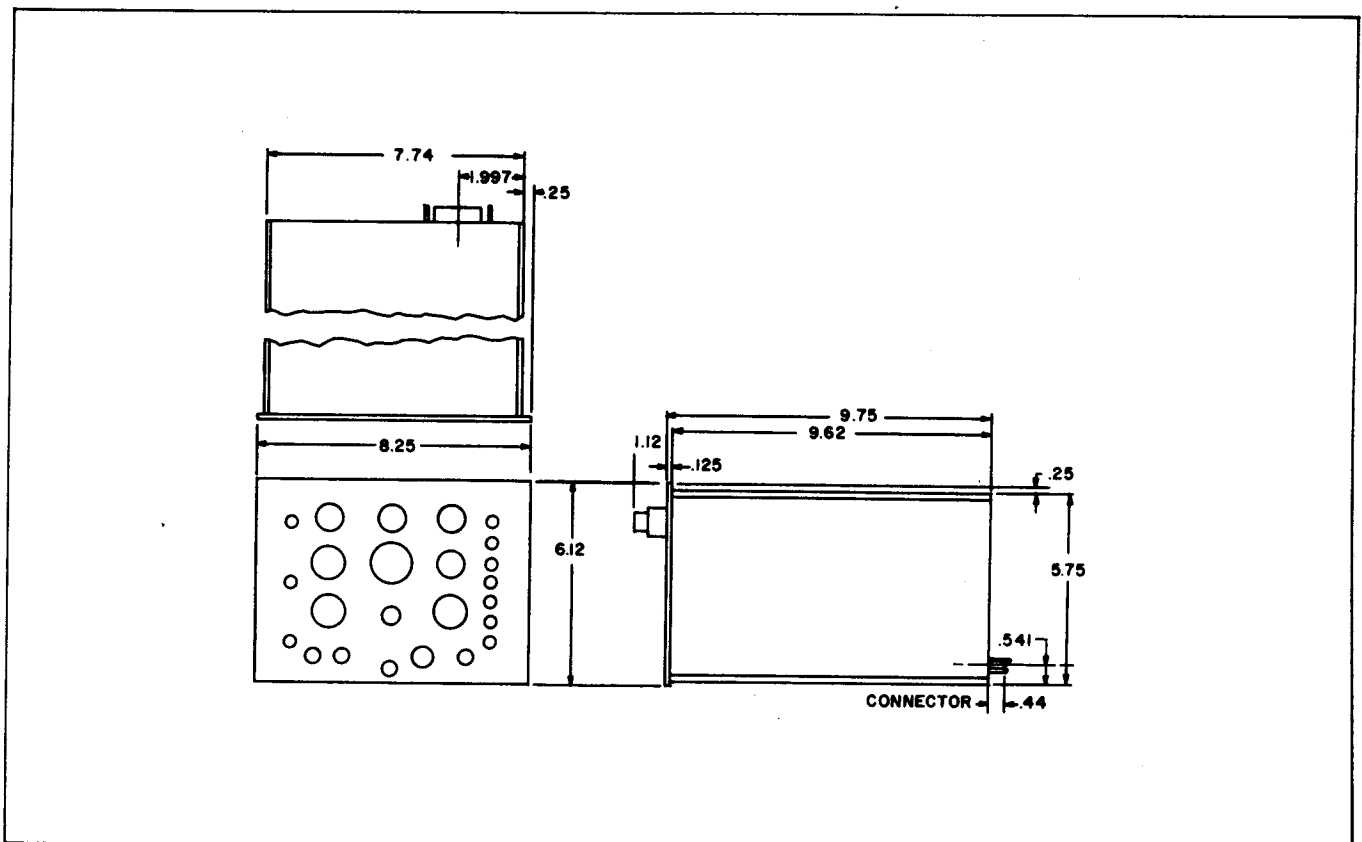


Figure 2-1. Outline Dimension Drawing, Panalyzer

TABLE 2-1. OPERATING CONTROLS AND CONNECTORS

| Index No.<br>(Figure 2-2) | Reference Designation | Name                      | Function   |
|---------------------------|-----------------------|---------------------------|--|
| 1                         | S2                    | VIDEO FILTER switch       | Provides two degrees of video filtering (MIN and MAX) to suppress such unwanted effects as noise, spurious beating between closely spaced signals, hum, etc., on the signal(s) displayed on the CRT. Usable only in the VAR position of the FREQ SCALE-Hz/DIV switch. Video filtering is automatically selected in the other positions of the switch.  |
| 2                         | S7                    | TEST SIGNAL-Hz switch     | Provides test signals to the Panalyzer. In the CF position of the switch, a 500-kHz test signal is applied to the input of the Panalyzer to locate its center frequency. In the 5K position of the switch, a 5-kHz signal (rich in harmonics) modulates the 500-kHz test signal to provide 5-kHz markers on the CRT for setting up sweep width. In the 3.0M and 3.002M position, a two-tone r-f test signal (3.0 and 3.0002 MHz) is mixed with a 3.5-MHz VFO input to display a two-tone signal on the CRT. This position of the switch is used to check the odd-order distortion products of the Panalyzer. |
| 3                         | R15                   | CENTER FREQ LEVEL control | Adjusts the level of the 500-kHz test signal applied to the Panalyzer.   |
| 4                         | R7                    | FREQ SCALE control        | Adjusts the sweep width of the Panalyzer from 0 to 100 kHz when the FREQ SCALE-Hz/DIV switch is set to VAR.  |
| 5                         | R13                   | IF BANDWIDTH control      | Adjusts the i-f bandwidth of the Panalyzer when the FREQ SCALE-Hz/DIV switch is set to VAR. CCW rotation of the control narrows the i-f bandwidth and CW rotation broadens the bandwidth.  |
| 6                         | S1                    | FREQ SCALE-Hz/DIV switch  | Provides five preset sweep widths (150 Hz, 500 Hz, 3.5 kHz, 7 kHz, and 14 kHz) or variable sweep width (0 to 100 kHz) in the Panalyzer. In the preset positions, the i-f bandwidth is automatically set for optimum resolution; and the sweep rate for the 150-Hz and 500-Hz preset sweep widths is 0.1 Hz, while the sweep rate for the other preset positions is 1 Hz. In the VAR position of the switch, the i-f bandwidth, sweep width, and sweep rate are variable.   |
| 7                         | S6                    | SWEEP RATE-Hz switch      | Selects either a 0.1 to 1.5-Hz or 1.5 to 30-Hz sweep rate range in the Panalyzer for the VAR position of the FREQ SCALE-Hz/DIV switch.   |
| 8                         | R11                   | VARIABLE control          | Operates in conjunction with the SWEEP RATE-Hz switch to vary the sweep rate on the CRT when the FREQ SCALE-Hz/DIV switch is set to VAR.   |

(Cont'd)

TABLE 2-1. OPERATING CONTROLS AND CONNECTORS (Cont'd)

| Index No.<br>(Figure 2-2) | Reference Designation     | Name   | Function  |
|---------------------------|---------------------------|--|---|
| 9                         | R4<br>R2                  | CENTER FREQ 2<br>COARSE AND FINE<br>controls | Determines the center frequency of the Pan-analyzer when the FREQ SCALE-Hz/DIV switch is set to either 350, 700, 1.4K or VAR.   |
| 10                        | A10S1<br>through<br>A10S7 | ATTENUATOR switches                          | Provide attenuation of 1, 2, 4, 8, 15, 20 and 20 dB at the input of the Panalyzer. When the switches are in the IN position, the indicated attenuation is inserted.   |
| 11                        | R1                        | GAIN control                                 | Adjusts the amplitude of the indication on the CRT. Maximum gain is obtained with the control set to the maximum CW position. This control should be operated near maximum for measurements requiring the full 60 dB dynamic range of the Panalyzer.                            |
| 12                        | J12                       | SIGNAL INPUT-<br>3 VRMS jack                 | Connects signal(s) to be analyzed to the Pan-analyzer.  |
| 13                        | J11                       | PROBE jack                                   | Provides operating power to the optionally available PRB-50 Probe when in use.  |
| 14                        | S6                        | SWEEP MODE switch                            | Selects either the normal sweep rate for the five preset sweep width positions of the FREQ SCALE-Hz/DIV switch, a faster sweep rate (1 Hz) for the 15-Hz and 50-Hz preset sweep widths of the FREQ SCALE-Hz/DIV switch, or a manual sweep for all the positions of this switch. |
| 15                        | J10                       | VFO INPUT jack                               | Connects the external VFO input to the Pan-analyzer.  |
| 16                        | J9                        | EXT CF MOD jack                              | Connects an external modulation (frequency markers) to the Panalyzer for the CF position of the TEST SIGNAL-Hz switch.  |
| 17                        | S4                        | IF ATTENUATOR<br>switch                      | Inserts either 20 dB or 0 dB of attenuation in the i-f amplifier of the Panalyzer. The switch must always be in the 0 dB position when making low level distortion measurements, thereby permitting the full 60 dB dynamic range of the Panalyzer to be used.                   |
| 18                        | R5                        | MANUAL SWEEP control                         | Permits manual control of the CRT sweep when the SWEEP MODE switch is set to MANUAL.  |
| 19                        | S3                        | AMPLITUDE SCALE<br>switch                    | Selects either LIN (linear) or LOG (logarithmic) voltage-amplitude scale of CRT display.  |
| 20                        | R10                       | CENTER FREQ 1<br>control                     | Determines the center frequency of the Pan-analyzer when the FREQ SCALE-Hz/DIV switch is either in the 15 or 50 position.   |



Section II  
Operation

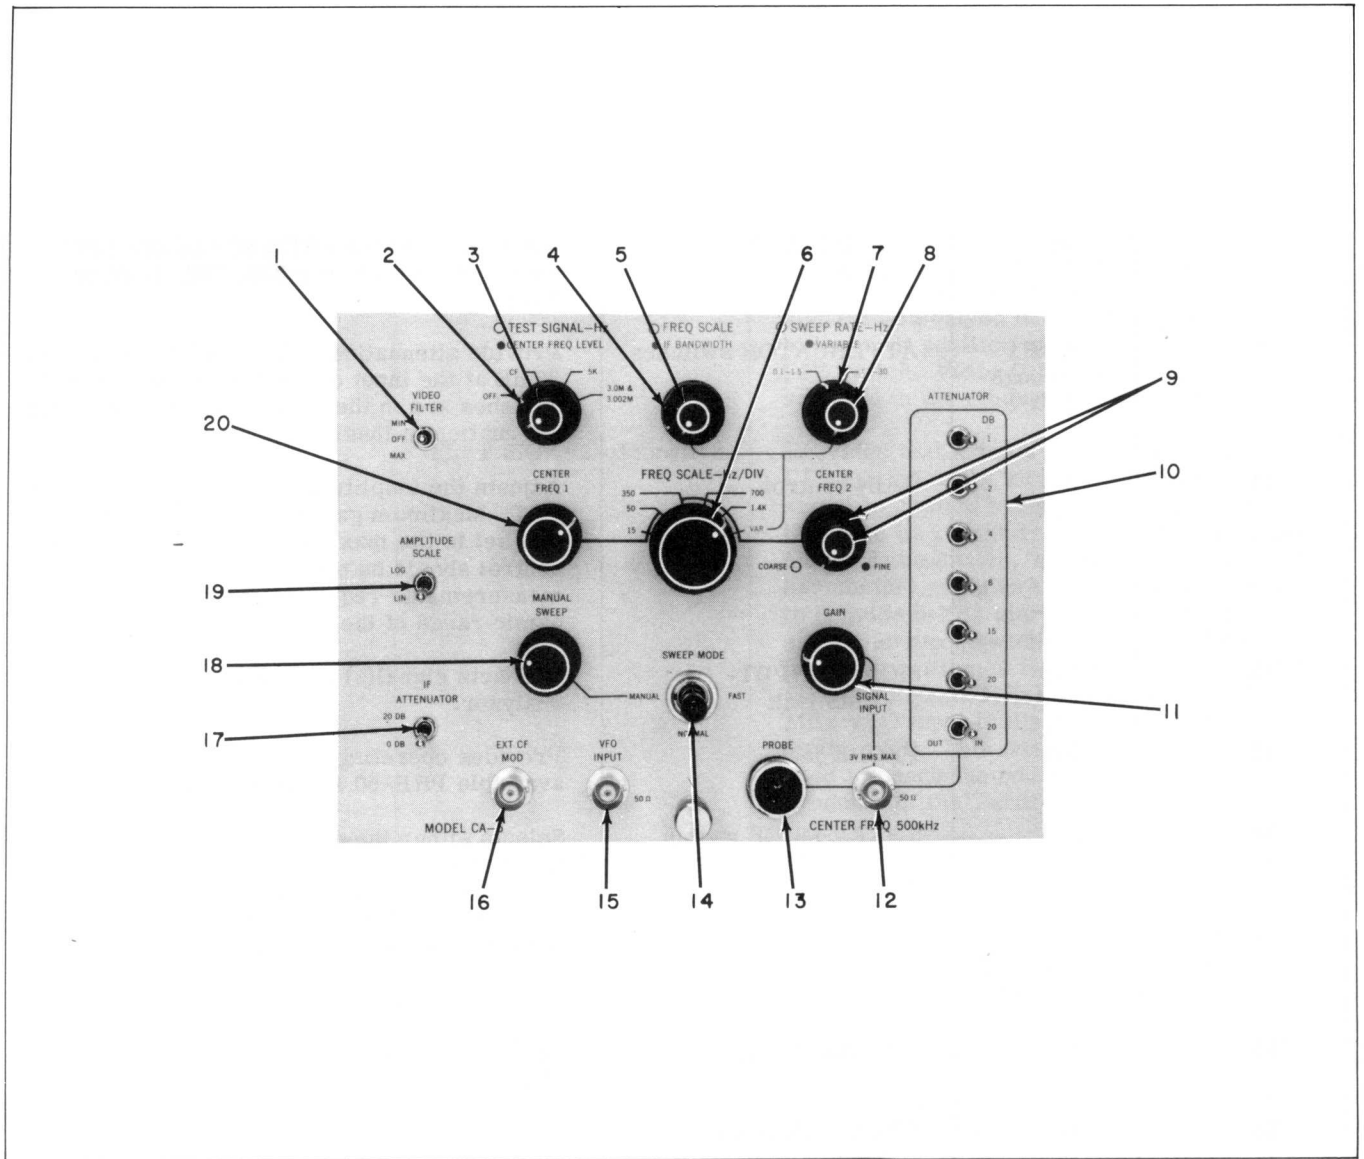


Figure 2-2. Operating Controls and Connectors

a. Set the front panel controls on the Panalyzer and MF-5 as indicated below.

|                           |                 |                         |          |
|---------------------------|-----------------|-------------------------|----------|
|                           |                 | <b>SWEEP RATE-Hz</b>    | 1. 5-30  |
|                           |                 | <b>switch</b>           |          |
|                           |                 | <b>VARIABLE control</b> | Fully CW |
|                           |                 | <b>TEST SIGNAL-Hz</b>   | OFF      |
|                           |                 | <b>control</b>          |          |
|                           |                 | <b>AMPLITUDE SCALE</b>  | LOG      |
|                           |                 | <b>switch</b>           |          |
|                           |                 | <b>IF ATTENUATOR</b>    | 20 db    |
|                           |                 | <b>switch</b>           |          |
|                           |                 | <b>VIDEO FILTER</b>     | OFF      |
|                           |                 | <b>switch</b>           |          |
| <b>FREQ SCALE-Hz/DIV</b>  | <b>VAR</b>      |                         |          |
| <b>switch</b>             |                 |                         |          |
| <b>FREQ SCALE control</b> | <b>Fully CW</b> |                         |          |
| <b>IF BANDWIDTH con-</b>  | <b>Fully CW</b> |                         |          |
| <b>trol</b>               |                 |                         |          |
| <b>GAIN control</b>       | <b>Fully CW</b> |                         |          |

Panalyzor (Cont'd)

|                                 |  |
|---------------------------------|--|
| SWEEP MODE<br>switch            | NORMAL   |
| ATTENUATOR<br>switches          | All in the OUT position  |
| <u>MF-5</u>                     |  |
| SCALE ILLUMINA-<br>TION control | Rotated CW until the CRT<br>graticule illuminates suf-<br>ficiently          |
| FOCUS control                   | Adjusted for sharpest<br>trace on the CRT                                    |
| BRIGHTNESS<br>control           | As desired   |
| VERT. POS<br>control            | Adjusted so that the<br>baseline trace coincides<br>with the frequency scale |
| HORIZ POS<br>control            | Adjusted to approxi-<br>mately center the base-<br>line trace on the CRT     |

b. Set the TEST SIGNAL-Hz switch to CF and adjust the CENTER FREQ LEVEL control until a full-scale signal pip is displayed on the CRT. (The GAIN control and ATTENUATOR switches may be used to reduce the CF signal level, if necessary.)

c. Rotate the FREQ SCALE control in a CCW direction until the pip opens up into a horizontal line. Adjust the CENTER FREQ 2 COARSE and FINE controls, as required, for maximum height of the trace.

d. Rotate the FREQ SCALE control to the fully CW position. Adjust the HORIZ POS control to center the pip. Set the FREQ SCALE-Hz/DIV switch to the 1.4K position and readjust the CENTER FREQ 2 controls, if necessary, to position the signal pip under the CF line.

e. Set the FREQ SCALE-Hz/DIV switch to 350. Readjust the CENTER FREQ 2 controls, if necessary, to position the signal pip under the CF line.

f. Set the FREQ SCALE-Hz/DIV switch to the 350, 700, 1.4K and then VAR position and note that the signal pip is approximately at the same point on the horizontal scale for each of these switch positions.

g. Set the FREQ SCALE-Hz/DIV switch to 15, the SWEEP MODE to MANUAL, and the CENTER FREQ LEVEL control to approximately its mid-position. Adjust the MANUAL SWEEP control until the dot on the CRT is under the CF line.

h. Carefully adjust the CENTER FREQ 1 control until the dot deflects upwardly and return to the baseline. Then, slowly adjust the CENTER FREQ 1

control in the opposite direction until the dot is at its maximum vertical deflection.

i. Adjust the CENTER FREQ LEVEL control or GAIN control for approximately a full-scale deflection of the CRT dot.

j. Set the SWEEP MODE control to FAST and slightly adjust the CENTER FREQ 1 control until the signal pip displayed on the CRT (which will be broadened and distorted) is about 2 divisions to the left of the CF line.

k. Set the SWEEP MODE switch to NORMAL and observe that the signal pip appears near the CF line.

l. Set the FREQ SCALE-Hz/DIV switch to 50 and observe that the signal pip is near the CF line. At the conclusion of this step, set the TEST SIGNAL-Hz switch to OFF.

2-9. SWEEP WIDTH CALIBRATION FOR VARIABLE SWEEP WIDTH MODE. The following procedure is recommended for setting up the sweep width when in the VAR position of the FREQ SCALE-Hz/DIV switch. The procedure assumes that the pre-operating checks and adjustments outlined in paragraph 2-8 have been performed.

a. Set the front panel controls on the Panalyzor as indicated in step a of paragraph 2-8, with the exception of SWEEP RATE -Hz, which should be 0.1 - 1.5.


b. Set the TEST SIGNAL-Hz control to the 5K position and adjust the CENTER FREQ LEVEL control until 5-kHz markers are visible on the CRT. Adjust the IF BANDWIDTH control to resolve the pips clearly. Then adjust the FREQ SCALE control until the desired sweep width is obtained. At maximum sweep width (100 kHz), each CRT frequency calibration mark is equal to 10 kHz and markers should appear as illustrated in fig. 2-3A. For a 50-kHz sweep width, each CRT calibration mark is equal to 5 kHz and markers should appear as shown in fig. 2-3B. Figure 2-3C illustrates a CRT presentation for a 25-kHz sweep width (each CRT calibration mark is equal to 2.5 kHz).

c. After the desired sweep width is obtained, set the TEST SIGNAL-Hz control to the OFF position.


2-10. GENERAL OPERATING PROCEDURE. The following is a general operating procedure for the Panalyzor. The procedure assumes that the pre-operating checks and adjustments outlined in paragraph 2-8 have been performed and that an external VFO signal is being applied to the VFO INPUT jack on the Panalyzor.




Do not apply a signal exceeding 3 volts (rms) to either the SIGNAL INPUT or VFO INPUT jack on the Panalyzor.

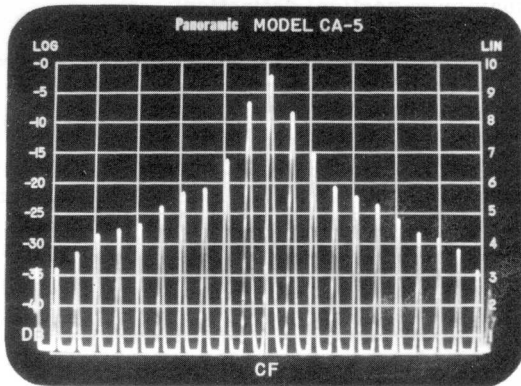

A. Sweep Width: 100 kHz

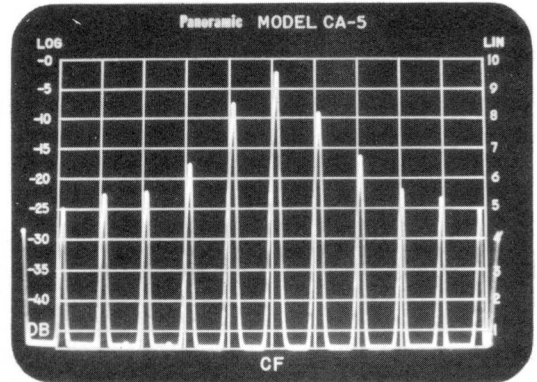

B. Sweep Width: 50 kHz

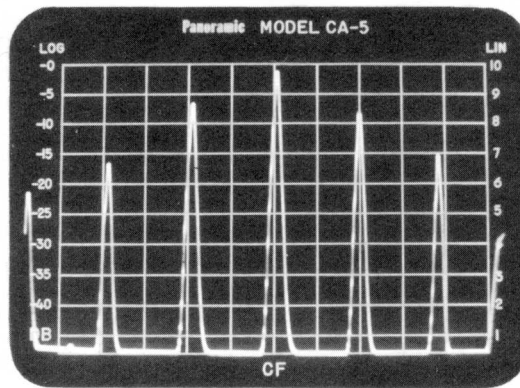

C. Sweep Width: 25 kHz

Figure 2-3. Typical CRT Marker Presentations for Variable Sweep Width Mode

**Note**

1. The frequency of the VFO signal must either be above or below the signal input to the Panalyzer by 500 kHz. A VFO signal that is 500 kHz above the signal input is preferable (to avoid the presence of image frequencies and spurious signal resulting from harmonics of the VFO signal) but not essential except for signal frequencies below 1.5 MHz. Above 1.50 MHz, no advantage is gained by using a VFO signal that is 500 kHz above the signal input, except that the displayed frequency will increase from left to right on the CRT.

2. Never use a VFO signal that is within the input-bandpass range (450 to 550 kHz) of the Panalyzer.

3. For frequencies below 2 MHz, use of the PANORAMIC Model REC-2 Range Extending Converter is recommended.

a. Set the front panel controls on the Panalyzer as indicated in step a of paragraph 2-8.

b. Couple the signal to be monitored to the SIGNAL INPUT jack, using either a 50-ohm coaxial cable (such as RG-58A/U) or the optionally available

PRB-50 Probe (when a high input impedance is required). Slowly search the spectrum with the external VFO until the signal appears at the center of the CRT screen. (It may be necessary to increase the output level of the applied VFO signal in order to locate the signal.)

**Note**

The external VFO frequency can be recognized as being either below or above the signal input frequency as follows: if the signal pip on the CRT moves from left to right as the VFO frequency is increased, the VFO frequency is below the signal input frequency; if the signal pip moves from right to left as the VFO frequency is increased, the VFO frequency is above the signal input frequency.

c. Once the signal is located, rotate the GAIN control in a CCW direction until the signal falls below full-scale deflection. (The ATTENUATOR switches may also be used to reduce the signal level.)

d. To determine the frequencies of signals displayed on the CRT, either: add the screen calibration of the given signal to the VFO frequency and subtract the input center frequency (500 kHz) of the Panalyzer from this total if the signal moves from right to left on the CRT as the VFO frequency is increased; or subtract the screen calibration of the given signal from the VFO frequency and add the input center frequency (500 kHz) to this difference if the signal moves from left to right as the VFO frequency is increased (i. e., Signal Freq. = VFO freq. ± Screen Calib. ± Input Center Freq.).

Example: With the Panalyzer set to maximum sweep width (100 kHz), a signal pip appears at the third frequency calibration mark (30 kHz) to the right of the CF mark on the CRT graticule. (On the 100 kHz sweep width, each frequency calibration mark is equal to a 10 kHz separation.) The VFO frequency is 2,450 kHz and when it is increased, the signal pip moves from right to left.

$$\begin{aligned} \text{Sig. Freq} &= 2,450 \text{ kHz} + 30 \text{ kHz} \\ &- 500 \text{ kHz} = 1,980 \text{ kHz} \end{aligned}$$

e. The relative amplitudes of signals are proportional to the relative heights of the corresponding CRT deflections (within the limits specified for flatness of response). To observe signals of comparable amplitude (10:1 or less), set the AMPLITUDE SCALE switch to LIN. The LOG position of this switch is used to examine signals that are widely divergent in amplitude, allowing simultaneous reading of amplitudes having a 40 dB range.

2-11. NARROW BAND ANALYSIS. When the signals displayed on the CRT are so closely spaced in frequency that at full sweep width (100 kHz) their corresponding deflections on the CRT tend to merge into each other or mask one another, it may be possible to separate or resolve the signals by either: sharpening the i-f bandwidth and reducing the sweep

width; reducing the sweep rate; or by doing both of the foregoing. The following procedure applies for the VAR position of the FREQ SCALE-Hz/DIV switch.

a. To increase the resolution capabilities by sharpening the i-f bandwidth and reducing the sweep width proceed as follows:

(1) Set the IF BANDWIDTH control maximum CW and center the band of signals of interest by adjusting the frequency of the external VFO.

(2) Spread the band of signals across the screen by turning the FREQ SCALE control in a CCW direction. Note that at reduced scanning width each frequency calibration mark represents a frequency separation equal to one-tenth of the reduced sweep width. Keep the band centered with the external VFO. (The CENTER FREQ 2 COARSE and FINE controls may be used for fine adjustments. However, avoid unnecessary changes of these control settings, since a loss of display may result when going to the 3.5-, 7-, and 14-kHz preset sweep widths.)

(3) Turn the IF BANDWIDTH control in a CCW direction until individual signals are most clearly resolved.

**Note**

1. Rotation of the IF BANDWIDTH control may result in increased or decreased pip height. When this occurs, return the pip amplitude to a suitable level with the GAIN control.


2. Optimum resolution can be recognized by the presence of "ringing" on one side of the signal pip as illustrated in figure 2-4. ("Ringing" can be seen more easily with the VIDEO FILTER switch set to OFF.) Turning the IF BANDWIDTH control in a CCW direction, after optimum resolution is obtained, will decrease the resolving capability and result in greatly reduced sensitivity.

b. To obtain better resolution by reducing the sweep rate, set the SWEEP RATE switch to either 0.1 - 1.5 or 1.5 - 30 (switch position selected determined by desired degree of frequency separation and nature of signals). Rotate the VARIABLE control in a CCW direction until optimum resolution is obtained.


c. To obtain better resolution by sharpening the i-f bandwidth and reducing both the sweep width and sweep rate, proceed as follows:

(1) Repeat step a above.


(2) Turn the IF BANDWIDTH and FREQ SCALE controls in a CCW direction and set the SWEEP RATE-Hz switch to either the 0.1 - 1.5 or 1.5 - 30 position. Rotate the VARIABLE control in a CCW direction until optimum resolution is obtained.

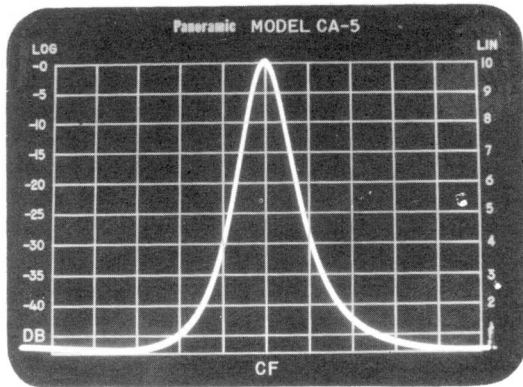


A. Narrow Sweep Width without Resolution (No Ringing)

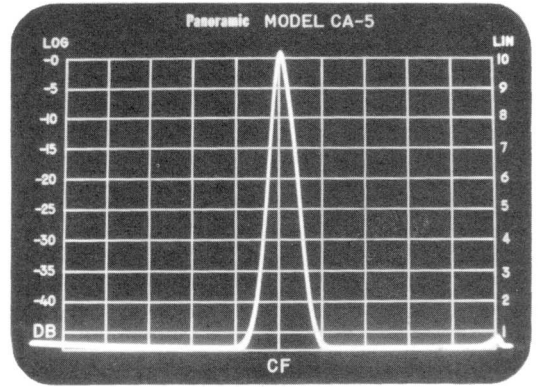


B. Wider Sweep Width without Resolution (No Ringing)

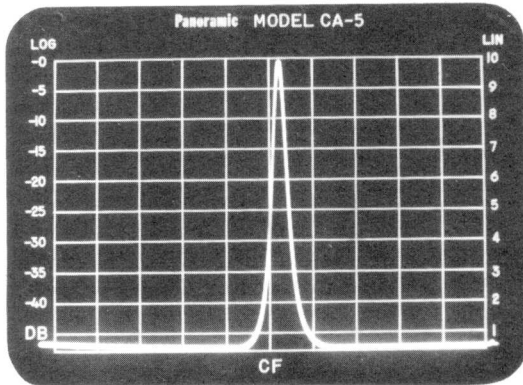


C. Under-resolved

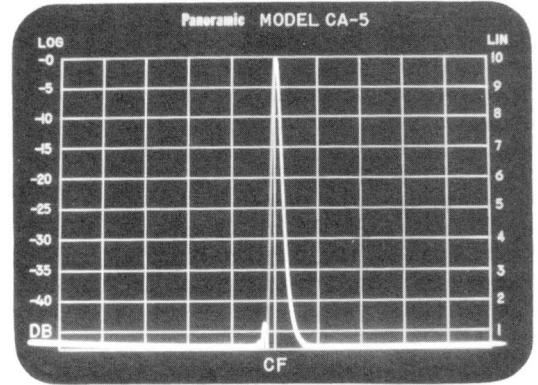

D. Optimum Resolution

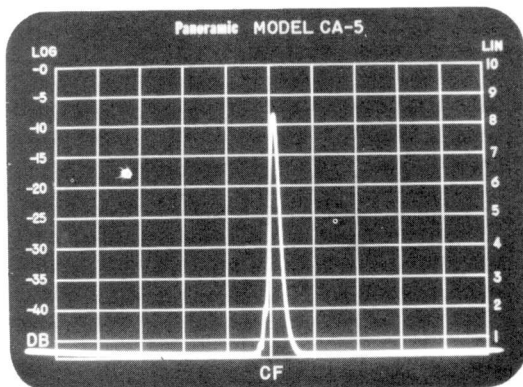

E. Over-resolved

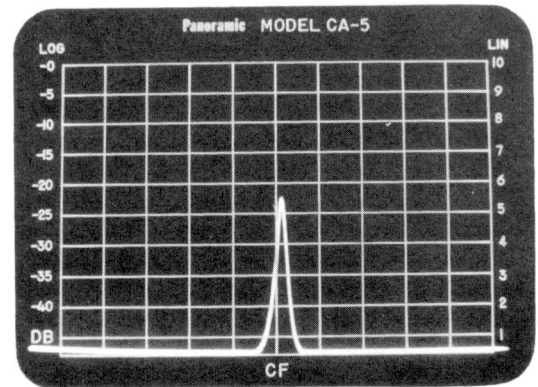

F. Completely Over-resolved

Figure 2-4. Ringing as an Indication of Optimum Resolution

**Note**

If it is necessary to observe a given bandwidth at one time and the signals involved are so closely spaced that they cannot be completely resolved, maximum resolution is recognized by the appearance of the best defined screen presentation. Further counter-clockwise rotation of the IF BANDWIDTH control will result in lessened resolution and loss of signal amplitude.

2-12. **SINGLE SIDEBAND ANALYSIS.** The following procedure describes how to use the Panalyzer to monitor signals from SSB transmitters, exciters, and receivers that are being checked out by the two-tone test method. The Panalyzer analyzes these signals for intermodulation products, harmonic distortions, hum and noise, other spurious signals, etc.

- a. Follow the operating procedures outlined in paragraph 2-10 and 2-11, as necessary, to display the monitored two-tone test signal on the CRT. Use a sweep width that is at least three times the separation between the two signals.
- b. With the IF ATTENUATOR set to 20 dB and the AMPLITUDE SCALE switch set to LOG, set the ATTENUATOR switches, as required, to bring the highest pip on the screen to just over full-scale deflection. Then, adjust the GAIN control to obtain exactly a full-scale deflection of the highest pip on the CRT graticule.
- c. Major in-band intermodulation components may now be read in reference to the level of the two

tones. The two-tone level is considered the 0 dB reference amplitude for comparison over a 40 dB range. The calibrations on the left side of the CRT graticule (0 to 40 dB, in 5-dB increments) are read directly in terms of dB down. To examine distortion products from 40 dB to 60 dB below the signal level, set the IF ATTENUATOR switch to 0 dB. The upper dB portion of the display is now deflected off screen and the -20 dB to -60 dB portion is now displayed. Add 20 dB to the indicated reading to obtain the correct amplitude of the signals.

- d. Odd-order distortion components are distributed symmetrically on either side of the main output signals and are located at separations equal to the frequency difference between them. The distortion components may be readily read as "dB down" from the reference levels. The third-order distortion components (first distortion pips) are usually the largest. Figure 2-5 illustrates a typical CRT presentation of a two-tone test.

2-13. **TURN-OFF PROCEDURE.** To turn off the Panalyzer, set the SCALE ILLUMINATION control on the MF-5 to the PWR OFF position.

**2-14. PACKAGING INSTRUCTIONS.**

2-15. The following packaging instructions provide information for short-term and long-term storage and shipment of the Panalyzer.

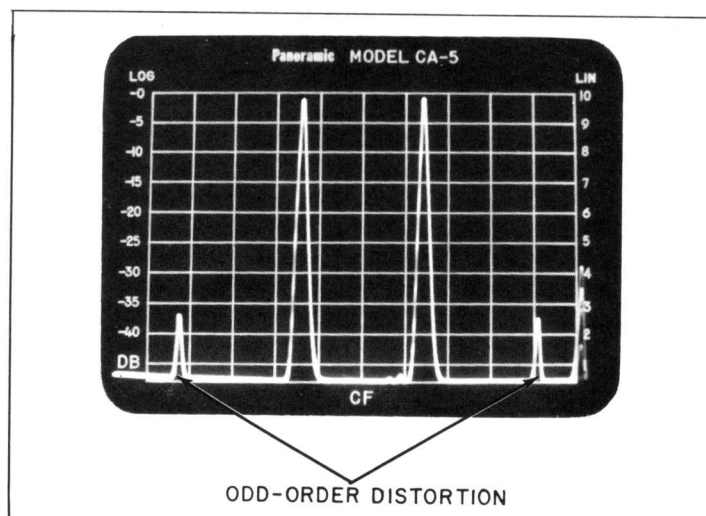


Figure 2-5. Typical CRT Presentation of Two-tone Test

## **Section II Operation**

**2-16. SHORT-TERM PACKAGING.** For short term packaging, the Panalyzer should be enclosed in a polyethylene bag and placed in a suitable carton for protection. The carton should be stored in a clean and moisture-free area. All accessories and literature should be

securely fastened to the equipment in order to prevent loss.

**2-17. LONG-TERM PACKAGING AND PACKAGING FOR SHIPMENT.** Figure 2-6 illustrates the packaging procedure for the Panalyzer.

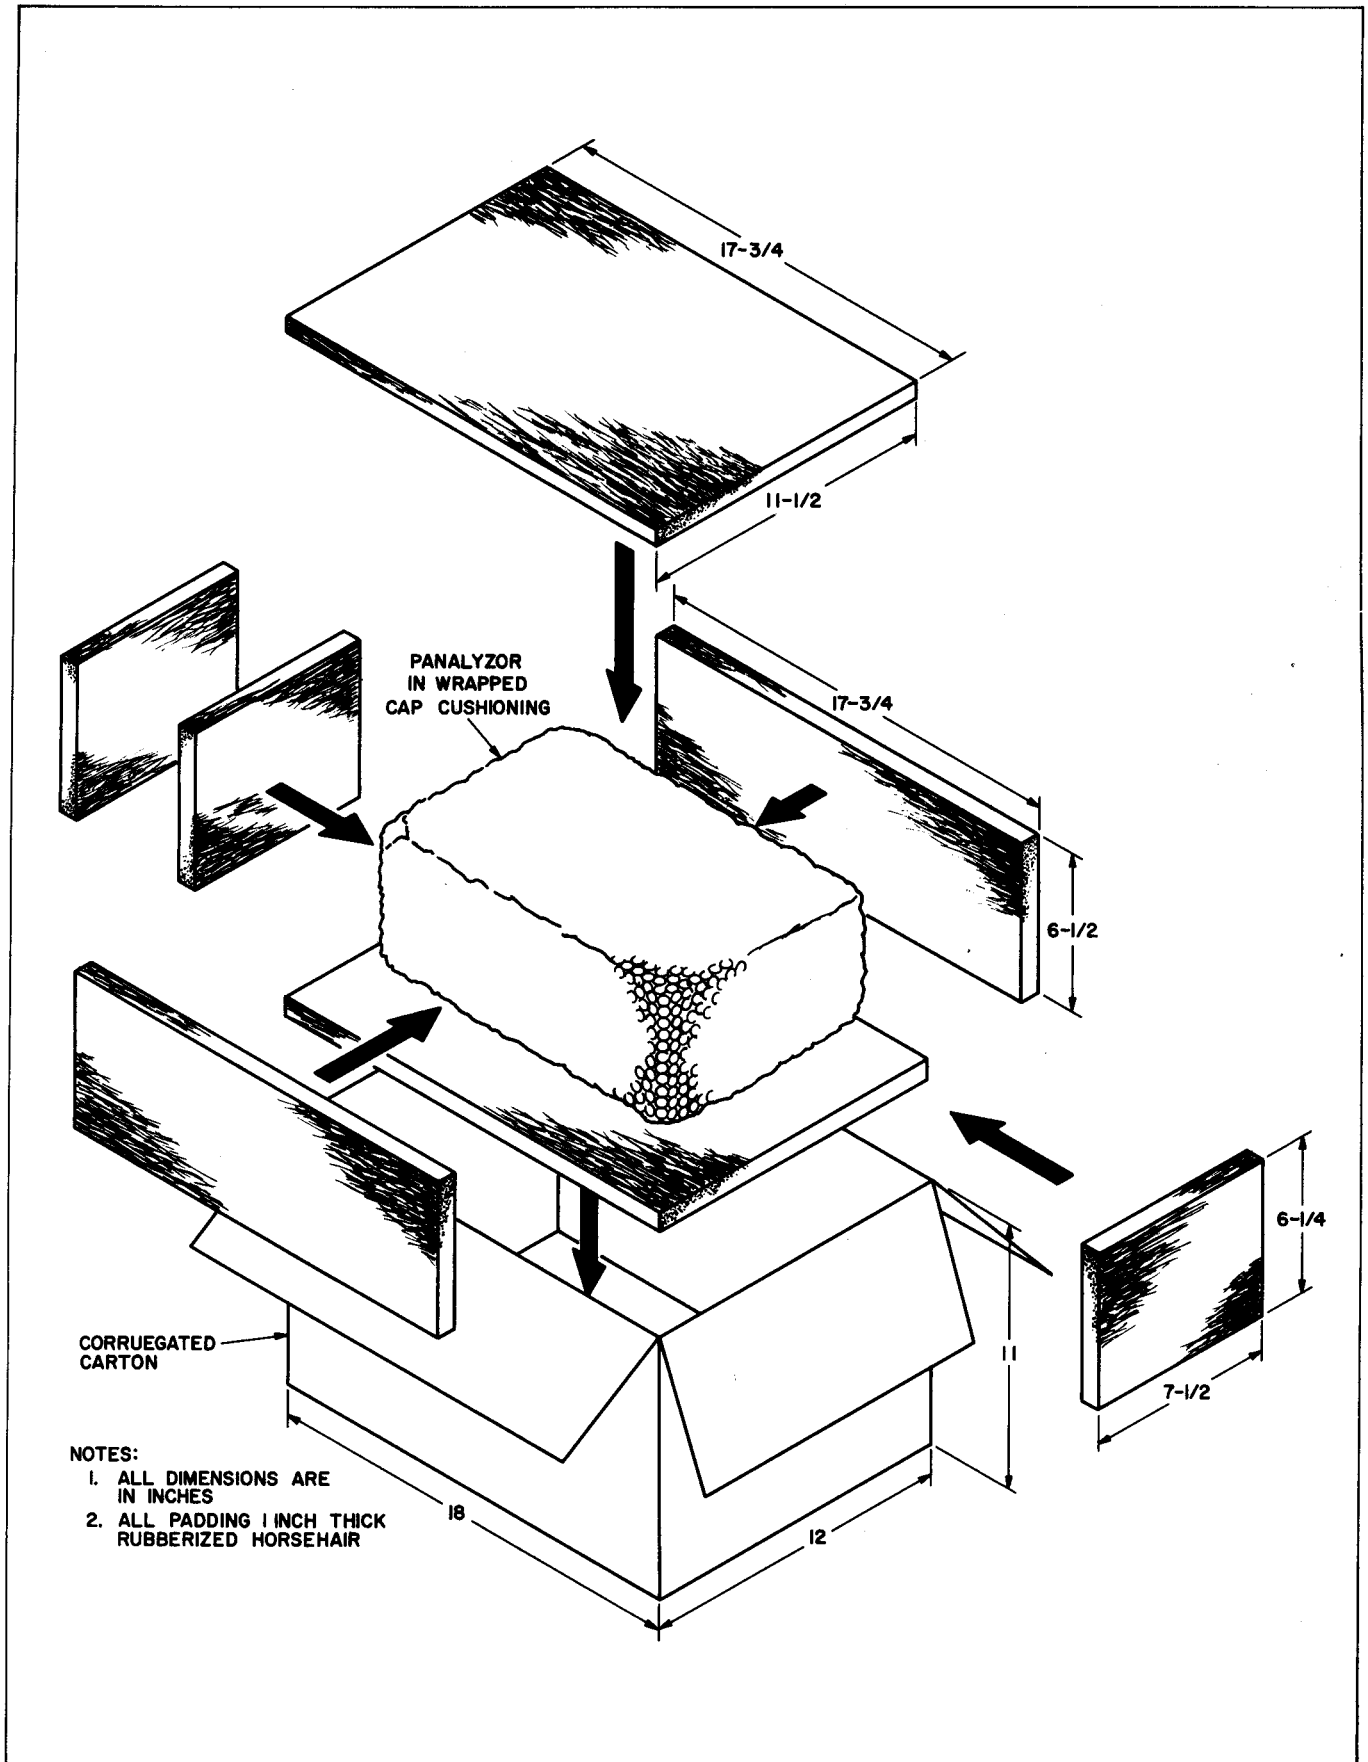


Figure 2-6. Packaging the Panalyzer



## SECTION III

### THEORY OF OPERATION

#### 3-1. GENERAL.

3-2. This section contains the theory of operation for the Panalyzer. The Panalyzer is a completely solid-state narrow-band swept analyzer with an input center frequency of 500 kHz. It is basically a double-conversion superheterodyne receiver which is automatically and repetitively tuned about its 500-kHz center frequency, with the output displayed as vertical deflections on the CRT of its associated main frame. Because the horizontal sweep of the CRT is synchronized to the frequency of the swept local oscillator of the receiver, the vertical deflections are automatically positioned along the frequency-calibrated horizontal axis of the CRT screen. Operating power for the Panalyzer is provided by its associated main frame.

#### 3-3. SIMPLIFIED BLOCK DIAGRAM ANALYSIS.

(See figure 3-1.)

3-4. The signal under analysis is applied through the SIGNAL INPUT-3 VRMS jack on the front panel of the Panalyzer to an input attenuator network. This network, which operates in conjunction with the ATTENUATOR switches on the front panel, inserts sufficient attenuation in the signal path to maintain an on-scale display on the main frame CRT. The output of the attenuator is applied to the first mixer, where it is heterodyned with an external VFO signal (whose frequency is either 500 kHz above or below the incoming signal) to obtain the 500-kHz input center frequency of the Panalyzer. (An external VFO signal is not required when the incoming signal is within the 450 to 550 kHz frequency range.) From the first mixer the signal is then applied to a 500-kHz i-f amplifier which amplifies the signal and provides the Panalyzer with an input bandpass region of 450 to 550 kHz. A GAIN control in the output of the 500-kHz i-f amplifier enables smooth vernier control of the input signal amplitude. The output of the 500-kHz i-f amplifier is applied to the balanced mixer, where it is combined with the swept output of the local oscillator. The local oscillator operates above the output signal frequency of the 500-kHz i-f amplifier and can be swept from 550 to 650 kHz. An input discrete frequency combines with the swept local oscillator output to provide a continuously varying difference frequency that is repetitively swept from a point somewhat below 100 kHz to a point somewhat above 100 kHz. The i-f output of the mixer is applied to the 100-kHz crystal i-f amplifier. The i-f bandwidth is automatically set for optimum resolution in the preset sweep width positions of the

FREQ SCALE-Hz/DIV (15, 50, 350, 700 and 1.4K) and is adjustable by the IF BANDWIDTH control, when the FREQ SCALE-Hz/DIV control is set to VAR. Reducing the i-f bandwidth reduces the portion of the local oscillator sweep that produces a signal within the bandpass of the 100-kHz crystal i-f amplifier; therefore the pip resulting from a discrete frequency input appears narrower on the main frame CRT, thereby improving the resolution between two signals that are close in frequency. The output of the 100-kHz crystal i-f amplifier is applied through the IF ATTENUATOR switch (which permits adjustment of the pip amplitudes on the CRT) to the log/lin amplifier. Within the log/lin amplifier the 100-kHz i-f signal is amplified and detected by linear or non-linear (log compression) circuits as determined by the AMPLITUDE SCALE switch. The log compression circuits produce a video output whose amplitude is logarithmically related to the amplitude of the applied i-f signal. The gain of the log/lin amplifier is varied to maintain a constant video output as the FREQ SCALE-Hz/DIV control is switched from one position to another. The video output signal of the log/lin amplifier is then applied to the vertical deflection circuits of the main frame; a smoothing filter is included in the output of the amplifier to suppress unwanted effects such as noise, spurious beating between closely spaced signals, hum, etc. The amount of smoothing (MIN or MAX) is controlled by the FREQ SCALE-Hz/DIV control for the five preset sweep ranges and by the VIDEO FILTER switch for the variable sweep mode.

3-5. The sawtooth generator produces the sawtooth waveform that is applied (via the sweep mode selection circuit) to the horizontal deflection circuits of the main frame and the local oscillator control circuit. The sweep rate of the sawtooth generator is normally fixed at 0.1 Hz for the 150- and 500-Hz preset sweep ranges and 1 Hz for the 3.5-, 7- and 14-kHz preset sweep ranges, as determined by the FREQ SCALE-Hz/DIV control. When in the VAR position of his control, the sweep rate is adjustable from 0.1 to 30 Hz by operation of the SWEEP RATE-Hz switch and VARIABLE control. The sweep mode selection circuit, in conjunction with the SWEEP MODE control, performs one of the following: allows the sawtooth waveform to be applied to the main frame and local oscillator control circuit during normal automatic scan operation; selects a 1 Hz sweep rate instead of the normally used 0.1 Hz sweep rate for the 150- and 500-Hz preset sweep ranges for speed-up operation on these ranges; or disables the sawtooth generator and permits use of the MANUAL control for manual scan operation. When in automatic scan operation

### Section III Theory of Operation

and with the **FREQ SCALE-Hz/DIV** control set to any position other than the 150- and 500-Hz preset sweep ranges, the sawtooth generator output is combined with a dc voltage from the **CENTER FREQ 2 COARSE** and **FINE** controls within the local oscillator control circuit, adjusting the dc level of the applied sawtooth voltage. In the 3-, 5-, 7- or 14-kHz preset sweep ranges, an adjustable portion of the resulting sawtooth voltage is then applied to the local oscillator; in the variable sweep range, the entire sawtooth voltage or a portion of it is applied to the local oscillator as determined by the **FREQ SCALE** control. The local oscillator, consisting of a voltage-controlled multivibrator, is then swept over a range of frequencies, the actual range being determined by the sweep width selected by the **FREQ SCALE-Hz/DIV** control. When the **FREQ SCALE-Hz/DIV** control is set to either the 150- or 500-Hz preset sweep range, the sawtooth generator output is applied through the local oscillator control circuit and a portion of it is then combined with a dc level from the **CENTER FREQ 1** control within the narrow band oscillator. The narrow band oscillator is then swept about its center frequency, over a limited range. The frequencies generated by the narrow-band oscillator synchronize the local oscillator so that it, too, is swept through the same limited range. Although its range of frequencies is limited, the narrow-band oscillator is used because of its greater stability which results in reduced jitter; this jitter would be quite noticeable with narrow sweep widths since small frequency differences result in large horizontal displacements.

3-6. Also included in the Panalyzer are the following self-test circuits: a 500-kHz crystal-controlled oscillator which applies a test signal to the Panalyzer to locate its center frequency; a 5-kHz marker generator which modulates the 500-kHz test signal to provide 5-kHz markers on the CRT for setting up sweep width; and a 3.0- and 3.002-MHz two-tone test generator for checking out the odd-order distortion of the Panalyzer. The output of a particular test circuit, which is selected by operation of the **TEST SIGNAL-Hz** control, is applied to the input side of the input attenuator. The **CENTER FREQ LEVEL** control adjusts the level of the 500-kHz test signal applied to the Panalyzer. An external audio signal can be used to modulate the 500-kHz test signal (via the **EXT CF MOD** jack), thereby providing frequency markers with a known separation.

#### 3-7. DETAILED THEORY OF OPERATION.

3-8. The detailed theory of operation is subdivided into nine parts, in which the individual electronic assemblies are described. This description is based on the detailed block diagram, figure 3-2, the interconnection diagram, figure 5-1, and the individual schematic diagrams, figures 5-2 through 5-9.

3-9. **INPUT ATTENUATOR ASSEMBLY A10** (see figure 5-2). The input attenuator consists of

seven pi-connected resistive attenuators (R3 through R5, R6 through R8, R9 through R11, R12 through R14, R15 through R17, R18 through R20, and R21 through R23) that can be inserted or bypassed, depending on the positions of switches S1 through S7. The seven attenuators can insert 1, 2, 4, 8, 15, 20, and 20 dB attenuation, respectively, so that when all seven are connected in cascade, a total attenuation of 70 dB is inserted in the input circuit. Resistors R1 and R2 connect the outputs of the 500-kHz calibration oscillator and 5-kHz marker circuits (paragraph 3-17), and the two-tone generator circuit (paragraph 3-13), respectively, to the input side of the attenuator network.

3-10. **FIRST MIXER ASSEMBLY A9** (see figure 5-2). The mixer comprises stage Q1. Mixing is accomplished within this stage by applying the output of the input attenuator to the base of Q1 and the external VFO signal from VFO INPUT jack J10 to the emitter. Since Q1 is being operated as a non-linear amplifier, the sum, difference (500 kHz) and two applied signals appear at its output.

3-11. **500-kHz I-F AMPLIFIER ASSEMBLY A5** (see figure 5-2). The 500-kHz i-f amplifier consists of a 500-kHz bandpass filter, emitter follower Q1, amplifiers Q2 and Q3, and emitter follower Q4. The 500-kHz bandpass filter provides a flat bandpass from 450 to 550 kHz, with a sharp cutoff above 550 kHz to reduce image response. Degenerative feedback is employed from emitter follower Q4 to amplifier Q2 (through R10 and R14) to stabilize the operation of the 500-kHz i-f amplifier. A filter network (C7 through C9 and L2) in the emitter circuit of Q4 prevents the local oscillator signal from being fed back to the i-f amplifier. The output of the i-f amplifier is continuously varied by the front-panel **GAIN** control R1.

3-12. **TWO-TONE GENERATOR AND 2ND MIXER ASSEMBLY** (see figure 5-3). The second mixer portion of assembly A3 consists of a balanced mixer and push-pull emitter follower Q1, Q2. The output from the 500-kHz i-f amplifier is applied directly to the balanced mixer, while the sweep local oscillator output is applied directly to the balanced mixer, while the sweep local oscillator output is applied to the mixer via the push-pull emitter followers. The balanced mixer employs four type FDH666 diodes (CR1 through CR4) in a balanced bridge configuration: When the 500-kHz i-f and local oscillator signals are applied to the mixer the non-linear characteristics of the mixer produce the sum and difference (100 kHz) of these signals, as well as the 500-kHz i-f signal. The local oscillator signal is effectively eliminated in the mixer output. The two-tone generator portion of assembly A3 comprises stages Q3 and Q4, both Pierce-type oscillator circuits. The oscillating frequencies of stages Q3 and Q4 are 3 and 3.002 MHz, respectively. When the **TEST SIGNAL-Hz** switch is set to the 3.0M and 3.002M position, both of these stages are energized and the resulting two-tone r-f output is applied through balancing potentiometer R15 to the signal input attenuator.

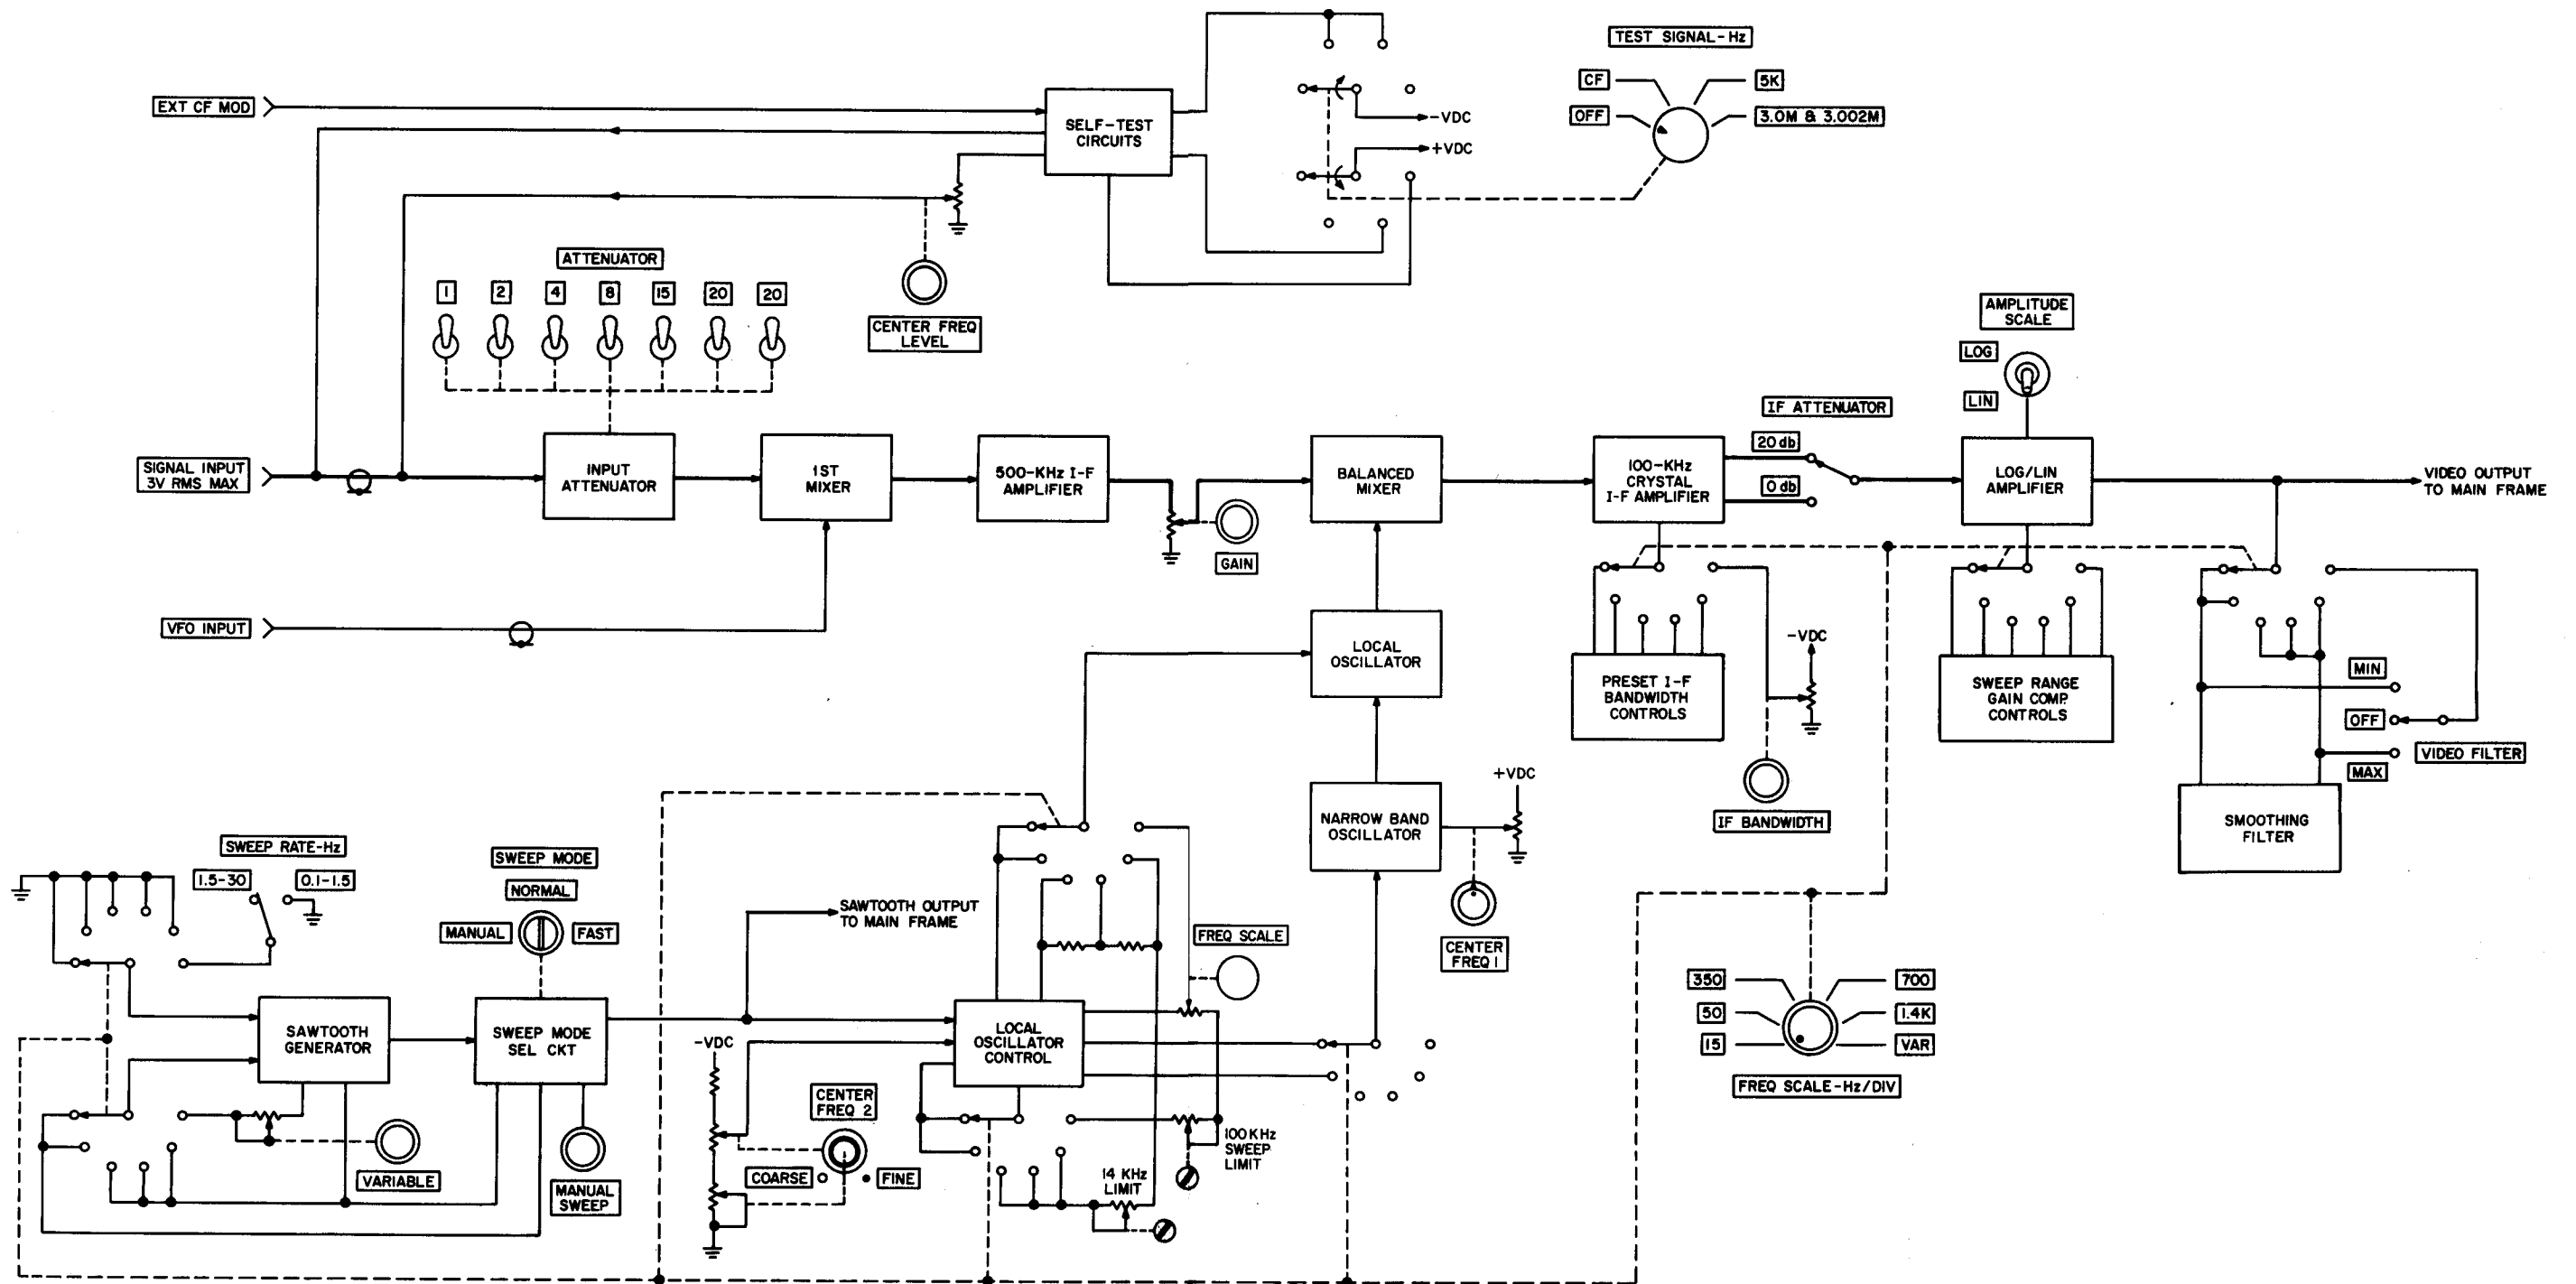


Figure 3-1. Simplified Block Diagram

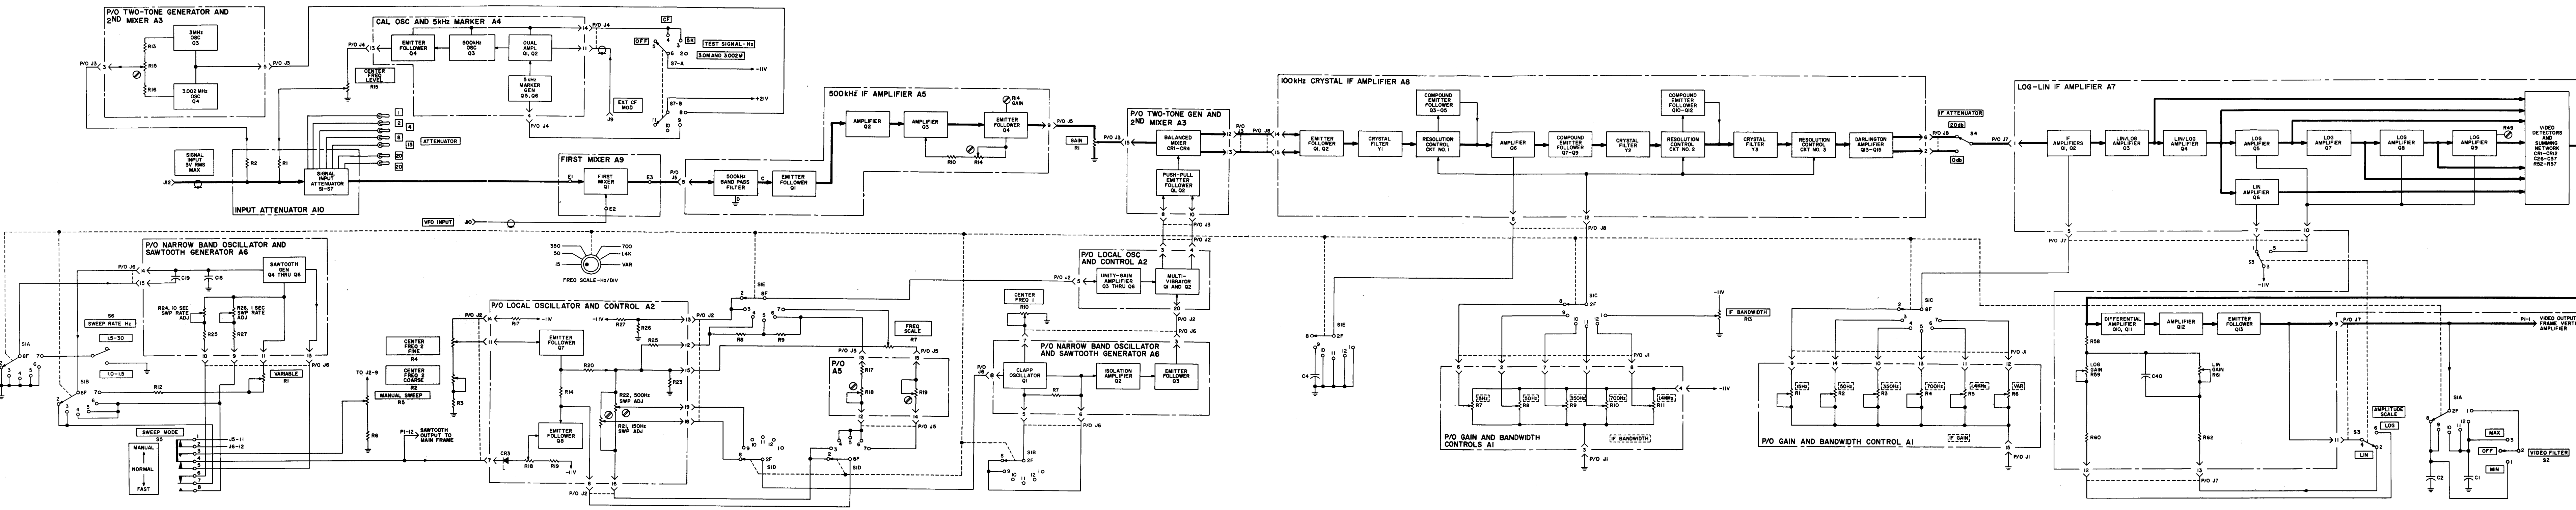


Figure 3-2. Detailed Block Diagram

**3-13. 100-kHz CRYSTAL I-F AMPLIFIER ASSEMBLY A8** (see figure 5-4). The 100-kHz crystal i-f amplifier consists of three stages of i-f crystal filtering and a Darlington-type amplifier output stage (Q13 through Q15). Since the crystal filtering stages are similar, only one will be discussed. The output of the balanced mixer is coupled through emitter followers Q1 and Q2 to 100-kHz crystal filter Y1 and capacitors C4 and C5. The emitter followers provide a low impedance source for driving the crystal, while capacitor C4 neutralizes the effects of current flowing through the crystal holder capacity. The filter bandwidth is controlled by varying the "Q" of resolution transformer T1. Diodes CR1 and CR2, connected to an auxiliary (loading) winding of T1, function as loading diodes. These diodes are d-c biased to vary their dynamic impedance and thus the "Q" of transformer T1. Thus, the i-f bandwidth is varied by control of the d-c bias on the loading diodes. This d-c bias is obtained from preset bandwidth potentiometers A1R7 through A1R11 and front-panel IF BANDWIDTH control R13, as determined by the FREQ SCALE-Hz/DIV switch. Compound emitter follower Q3 through Q5, connected to another auxiliary winding of T1, maintains the output level essentially constant when varying the i-f bandwidth. The output of the final 100-kHz crystal filter stage is amplified by Darlington-type amplifier Q13 through Q15 and two outputs are applied to front-panel IF ATTENUATOR switch S4. When the IF ATTENUATOR switch is set to the 0 db position, the full output voltage of the amplifier is applied to log/lin assembly A7; when the switch is set to 20 db, one-tenth of the output voltage is applied to assembly A7.

**3-14. LOG/LIN I-F AMPLIFIER ASSEMBLY A7** (see figure 5-5). The log/lin amplifier consists of two 100-kHz i-f amplifiers (Q1 and Q2), two log/lin amplifiers (Q3 and Q4), four log amplifiers (Q5 and Q7 through Q9), a lin amplifier (Q6), video detectors and summing network, a differential amplifier (Q10, Q11), a video amplifier (Q12), and an emitter follower (Q13). The output of 100-kHz i-f crystal amplifier assembly A8 is initially amplified by stages Q1 and Q2. The gain of stage Q2 is varied to maintain a constant output from assembly A7 when switching from one sweep width range to another. This is accomplished by inserting different preset potentiometers (A1R1 through A1R6) in the emitter by-pass circuit of Q2 for the different positions of the FREQ SCALE-Hz/DIV switch. The output of stage Q2 is further amplified by stages Q3 and Q4 before being simultaneously applied to log amplifier Q5 and lin amplifier Q6. Individual outputs from stages Q3 and Q4 are also applied to video detectors CR1/CR2 and CR3/CR4, respectively. When front-panel AMPLITUDE SCALE switch S3 is set to LOG, stages Q5 and Q7 through Q9 are energized and stage Q6 is deenergized. When this occurs, stages Q5, and Q7 through Q9 amplify the output of Q4 and their individual outputs are then applied in parallel to video detectors CR5/CR6, CR7/CR8, CR9/CR10, and CR11/CR12, respectively. The video detectors are voltage-doublers, for increased output level. The output of the video detectors are then added and the sum of these outputs

(appearing at the junction of R57, R58, and R70) is applied to differential amplifier Q10, Q11. When the AMPLITUDE SCALE switch is set to LIN, stage Q6 is energized and stage Q5, and Q7 through Q9 are deenergized. This causes the output of Q6 to be applied to detector CR13/CR14 and added to the outputs of stages Q3 and Q4. The negative-going video input to the differential amplifier is then amplified by stages Q10, Q11 and Q12 and applied through emitter follower Q13 to the vertical deflection amplifiers in its associated main frame. A portion of the video output is fed back (degenerative feedback) through either log gain adjust R59 or lin gain adjust R61 to the differential amplifier, establishing the overall gain of assembly A7. Minimum and maximum video filtering are automatically selected for the five preset sweep width ranges of the FREQ SCALE-Hz/DIV switch. Front-panel VIDEO FILTER control S2 selects the degree of filtering when the FREQ SCALE-Hz/DIV switch is set to VAR.

**3-15. NARROW BAND OSCILLATOR AND SAWTOOTH GENERATOR ASSEMBLY A6** (see figure 5-6). The sawtooth generator portion of assembly A6 consists of unijunction transistor Q6, linearity amplifier Q5, and emitter follower Q4. When in either of the five preset sweep width positions of the FREQ SCALE-Hz/DIV switch, capacitors C18 and C19 charge, with the voltage at which the unijunction transistor breaks down being determined by 10-second sweep rate adjust R24 (150 and 500-Hz preset sweep width) or 1-second sweep rate adjust R26 (3.5-, 7-, and 14-kHz preset sweep width). When the capacitors charge to this voltage, the unijunction transistor conducts and discharges the capacitors, completing one sawtooth cycle. Linearity amplifier Q5 and emitter follower Q4 provides the capacitors with a constant charging current, thereby obtaining a linear sawtooth sweep output from the sawtooth generator. When the FREQ SCALE-Hz/DIV switch is set to VAR, capacitor C19 is either switched in or out of the charging circuit, as determined by SWEEP RATE-Hz switch S6, and front-panel VARIABLE control R11 adjusts the sweep rate within the limits selected by switch S6. The sawtooth output is applied to assembly A2 and the horizontal deflection amplifiers of the associated main frame. When front-panel SWEEP MODE switch S6 is set to MANUAL, the sweep generator is disabled (by removal of its +21-volt supply) and a d-c voltage from front-panel MANUAL SWEEP control R5 is applied to assembly A6 and the main frame. The narrow band oscillator portion of assembly A6 consists of Clapp oscillator Q1, isolation amplifier Q2, and emitter follower Q3. When the FREQ SCALE-Hz/DIV switch is set to either the 150- or 500-Hz preset sweep width position, resistor R7 is shorted out, and oscillator Q1 is energized. The tuned circuit of Q1 contains varactor CR1, whose capacitance is a function of the instantaneous voltage applied. The voltage applied to CR1 is the sawtooth output obtained from assembly A2 (paragraph 3-16). In addition, the tuned circuit of Q1 contains inductor L1 and front-panel CENTER FREQ 1 control R10, which adjust the tuned circuit so that its center frequency corresponds to the

### Section III

#### Theory of Operation

center frequency of the local oscillator. The output of oscillator Q1 is applied through isolation amplifier Q2 and emitter follower Q3 to the local oscillator portion of assembly A2.

3-16. LOCAL OSCILLATOR AND CONTROL ASSEMBLY A2 (see figure 5-7). The local oscillator portion of assembly A2 consists of voltage-controlled multivibrator Q1, Q2. The multivibrator has a free running frequency of 600 kHz and it is swept about this frequency in accordance with either: the level of the sawtooth voltage applied to it from unity-gain amplifier Q3 through Q6 (FREQ SCALE-Hz/DIV switch is set to any position other than the 150- and 500-Hz preset sweeps); or the synchronizing frequencies applied to it from the narrow band oscillator (FREQ SCALE-Hz/DIV switch set to the 150- or 500-Hz preset sweep). When in the VAR position of the FREQ SCALE-Hz/DIV switch, the local oscillator can be swept from 550 to 650 kHz, as determined by the front-panel FREQ SCALE control R7. The control portion of assembly A2 consists of emitter followers Q7 and Q8 and unity-gain amplifier Q3 through Q6. Emitter Follower Q7 receives either a d-c control voltage from front-panel CENTER FREQ 1 FINE control R3 (FREQ SCALE-Hz/DIV switch set to any position other than the 150- and 500-Hz preset sweep widths) or zero input (FREQ SCALE-Hz/DIV switch set to 150- or 500-Hz preset sweep width); emitter follower Q8 receives the sawtooth output from the sawtooth generator. When the FREQ SCALE switch is set to either the 150- or 500-Hz preset sweep width position, the sawtooth output of Q8 is applied to the narrow band oscillator (via 150-Hz sweep adjust R21 or 500-Hz sweep

adjust R22) and a d-c voltage (obtained at the junction of R26 and R27) is applied to unity-gain amplifier Q3 through Q6. This permits control of the local oscillator frequency by the narrow band oscillator output. When the FREQ SCALE-Hz/DIV control is set to the 3.5-, 7-, and 14-kHz preset sweep width positions or variable sweep width position, the sawtooth output of Q8 is combined with the d-c output of Q7 and applied to the unity-gain amplifier for control of the local oscillator frequency.

3-17. CALIBRATION OSCILLATOR AND 5-kHz MARKER GENERATOR ASSEMBLY A4 (see figure 5-8). The calibration oscillator portion of assembly A4 consists of oscillator Q3 and emitter follower Q4. Stage Q3, a crystal oscillator operating at 500 kHz, is energized when the front-panel TEST SIGNAL-Hz switch is set to CF. The oscillator output is applied through emitter follower Q4 to the signal input attenuator. Front-panel CENTER FREQ LEVEL control R15 adjusts the level of the signal applied to the attenuator. The 5-kHz marker generator portion of assembly A4 comprises stages Q5 and Q6, a bridged-T resistance-capacitor oscillator, and dual amplifier Q1, Q2. When the TEST SIGNAL-Hz switch is set to 5K, both the calibration oscillator and 5-kHz marker generator are energized. The 5-kHz output of the oscillator is then applied through the Q2 section of the dual amplifier to stage Q3, modulating the 500-kHz calibration oscillator. An external marker generator can be used to modulate the 500-kHz calibration oscillator via the Q1 section of the dual amplifier (when using external modulation, the TEST SIGNAL-Hz switch must be set to the CF position).

## SECTION IV MAINTENANCE

### 4-1. GENERAL.

4-2. This section contains maintenance instructions for the Panalyzer. Procedures are given for visual inspection of the Panalyzer, for minimum performance test (to determine whether or not the module is operating within its specifications), for locating defective components in the module and for aligning the module. Voltage measurements are also included. No attempt should be made to repair internal components or make adjustments until the operator is thoroughly familiar with the information contained in this section.

4-3. With the exception of the minimum performance standards checks, all the procedures given in this section should be performed with the Panalyzer removed from the Main Frame, but connected electrically to it. The service cable provided with the Main Frame should be used for this purpose. In addition, some of the procedures require that one of the plug-in boards in the Panalyzer be removed from the module, but connected electrically to it. The extender boards provided with the Panalyzer should be used for this purpose.

### 4-4. TEST EQUIPMENT REQUIRED.

4-5. The test equipment required for the maintenance and alignment of the Panalyzer is listed in

table 4-1. Equipment having similar characteristics may be substituted for those listed in the table.

### 4-6. PRELIMINARY INSPECTION.

4-7. Preliminary inspection of the equipment is performed with the Panalyzer removed from the Main Frame and without operating power applied. This type of check is designed to detect conditions that might otherwise lead to a breakdown. Frequent causes of equipment failure are overheating of components due to improper ventilation, accumulation of dust and dirt and/or loose connections and fittings. Inspection is carried out with emphasis on finding evidence of these conditions.

4-8. COMPONENT LOCATIONS. The location of components mentioned in the inspection routines, alignment and troubleshooting procedures are illustrated in figures 4-1 through 4-3.

4-9. PRELIMINARY INSPECTION ROUTINE. Table 4-2 lists the preliminary inspection routine for the Panalyzer.

### 4-10. MINIMUM PERFORMANCE STANDARDS CHECKS.

4-11. The minimum performance checks provide a quick and convenient means of determining

TABLE 4-1. TEST EQUIPMENT REQUIRED

| Type of Equipment | Suggested Manufacturer Name and Model No. | Use  |
|-------------------|---|--|
| Frequency Counter | General Radio Model 1153-AP               | Frequency measurements                         |
| Oscilloscope      | Tektronix Model 531A with type B plug-in  | General waveform analysis                      |
| VTVM              | RCA Model WV-98C                          | Voltage measurements                           |
| Signal Generator  | Hewlett-Packard Model 606A                | Provides input signal for test and calibration |
| Test Oscillator   | Hewlett-Packard Model 651A                | Provides VFO input and external marker         |

(Cont'd)

**Section IV  
Maintenance**

**TABLE 4-1. TEST EQUIPMENT REQUIRED (Cont'd)**

| Type of Equipment       | Suggested Manufacturer Name and Model No. | Use   |
|-------------------------|---|---|
| Step Attenuator, 50-ohm | Kay Model 432-C                           | Functions with signal generator to set level and check attenuator calibration |
| Stop Watch              | Any Commercial Model                      | Checks sweep rate of Panalyzer  |

**TABLE 4-2. PRELIMINARY INSPECTION ROUTINE**

| Item                                 | Inspect For  | Corrective Action  |
|--------------------------------------|--|--|
| Module case and panels               | Dirt and corrosion   | Clean with cloth moistened with cleaning solvent (trichloroethylene or equivalent).  |
| Knobs, screws, connectors and clamps | Looseness  | Tighten.   |
| Wiring                               | Dirt, dust, and/or corrosion   | Clean with cloth, aerosol spray, syringe, or camel's hair brush using trichloroethylene or equivalent cleaning solvent.          |
| Solder joints                        | Loose or cold solder connections; corrosion                                  | Clean carefully and resolder.  |
| Capacitors                           | Leaks, bulges, signs of aging  | Replace.   |
| All connectors                       | Looseness, bent or corroded contacts, signs of aging                         | Clean contacts with cloth moistened with cleaning solvent (trichloroethylene or equivalent).                                     |
| Resistors                            | Cracks, chipping, blistering, discoloration, and other signs of overheating. | Replace.<br><br><p style="text-align: center;"><b>Note</b></p> Insure that overheating is not due to other defective components. |
| Switches                             | Looseness  | Tighten mounting hardware.   |



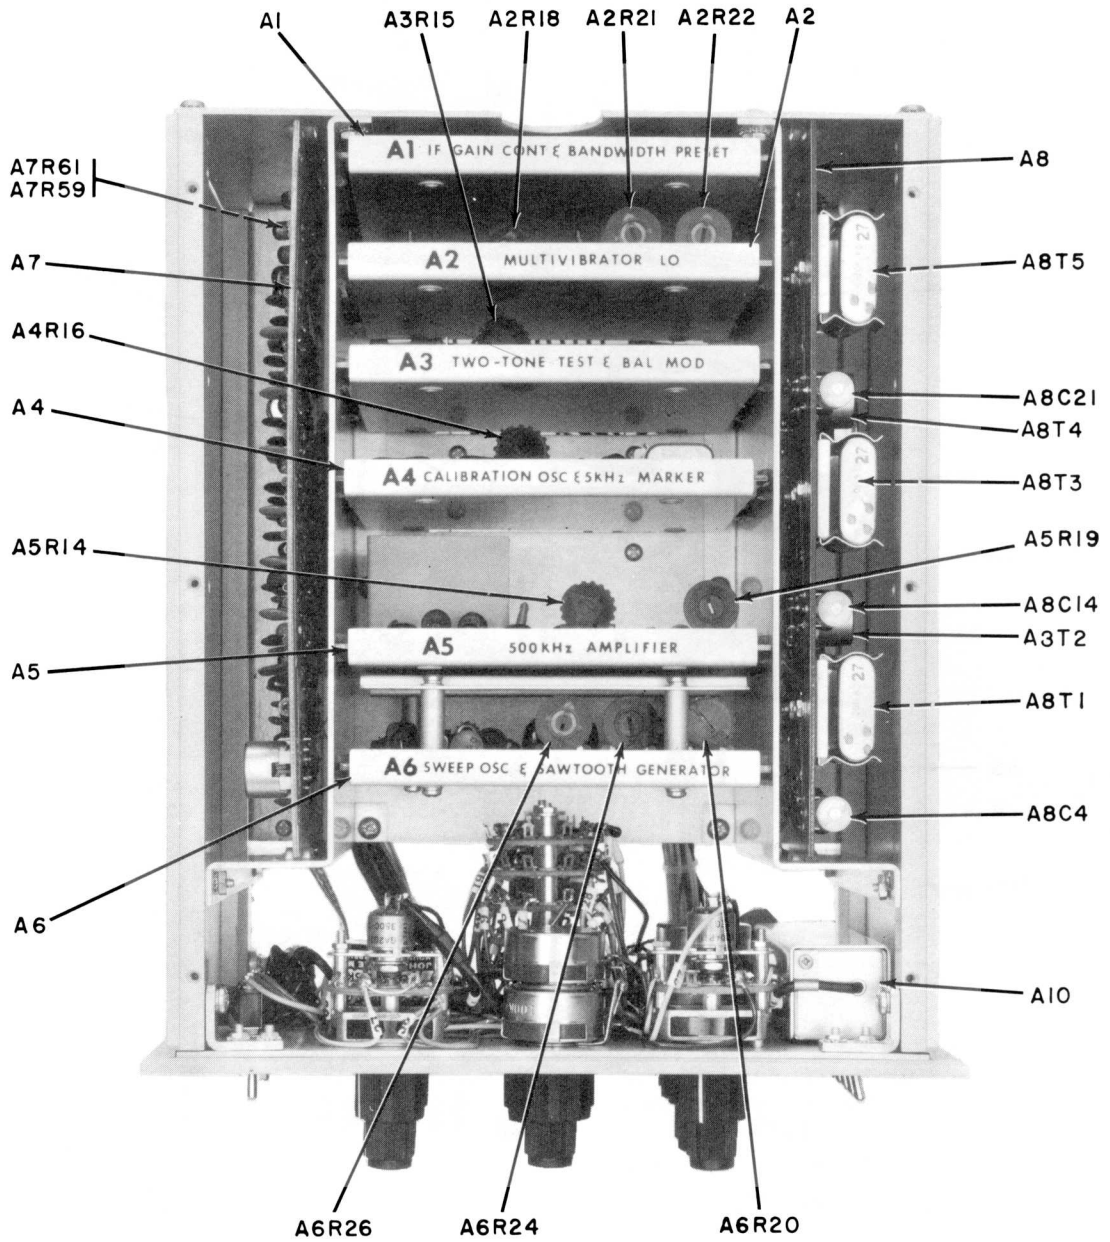


Figure 4-1. Panalyzer, Top View

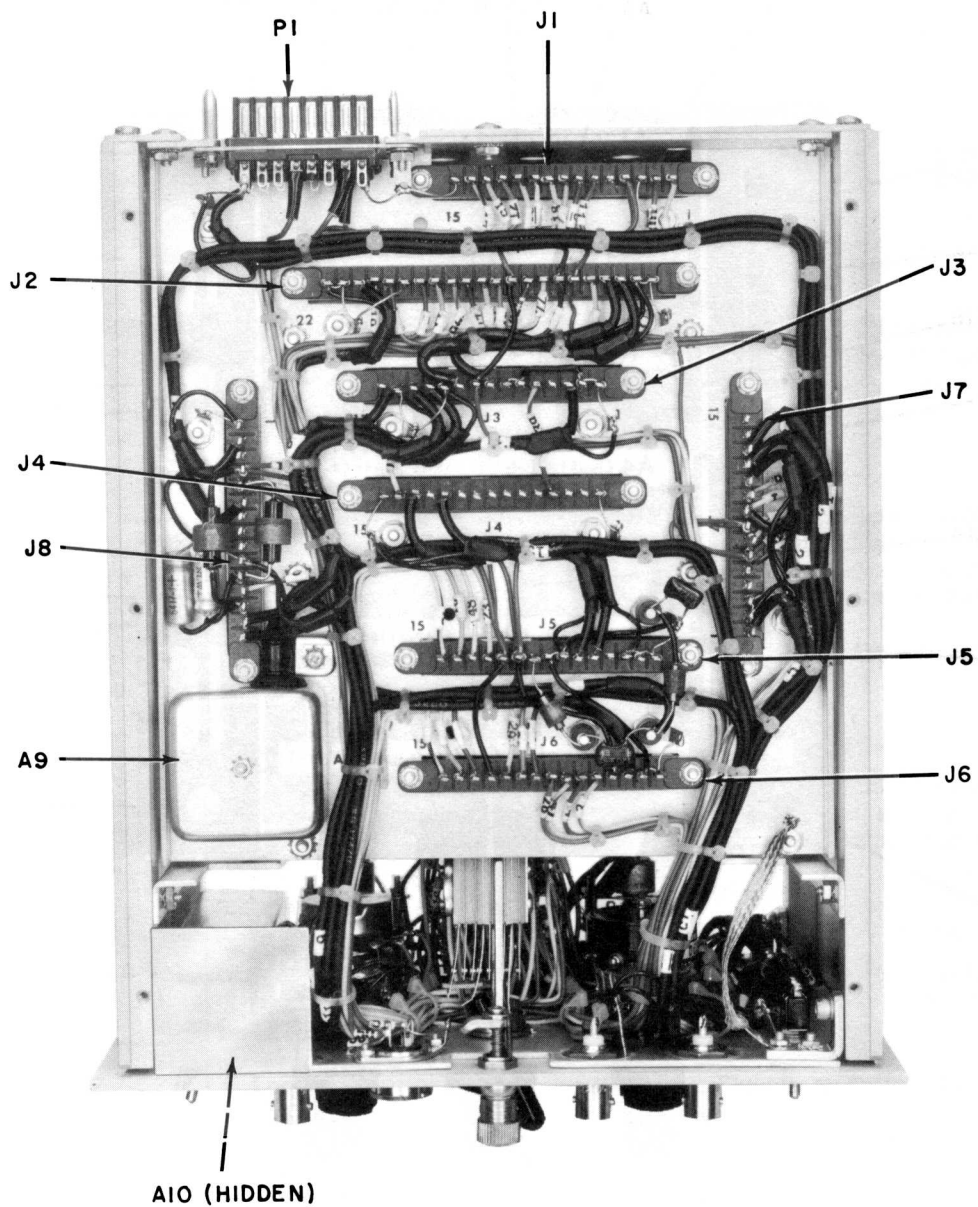


Figure 4-2. Panalyzer, Bottom View

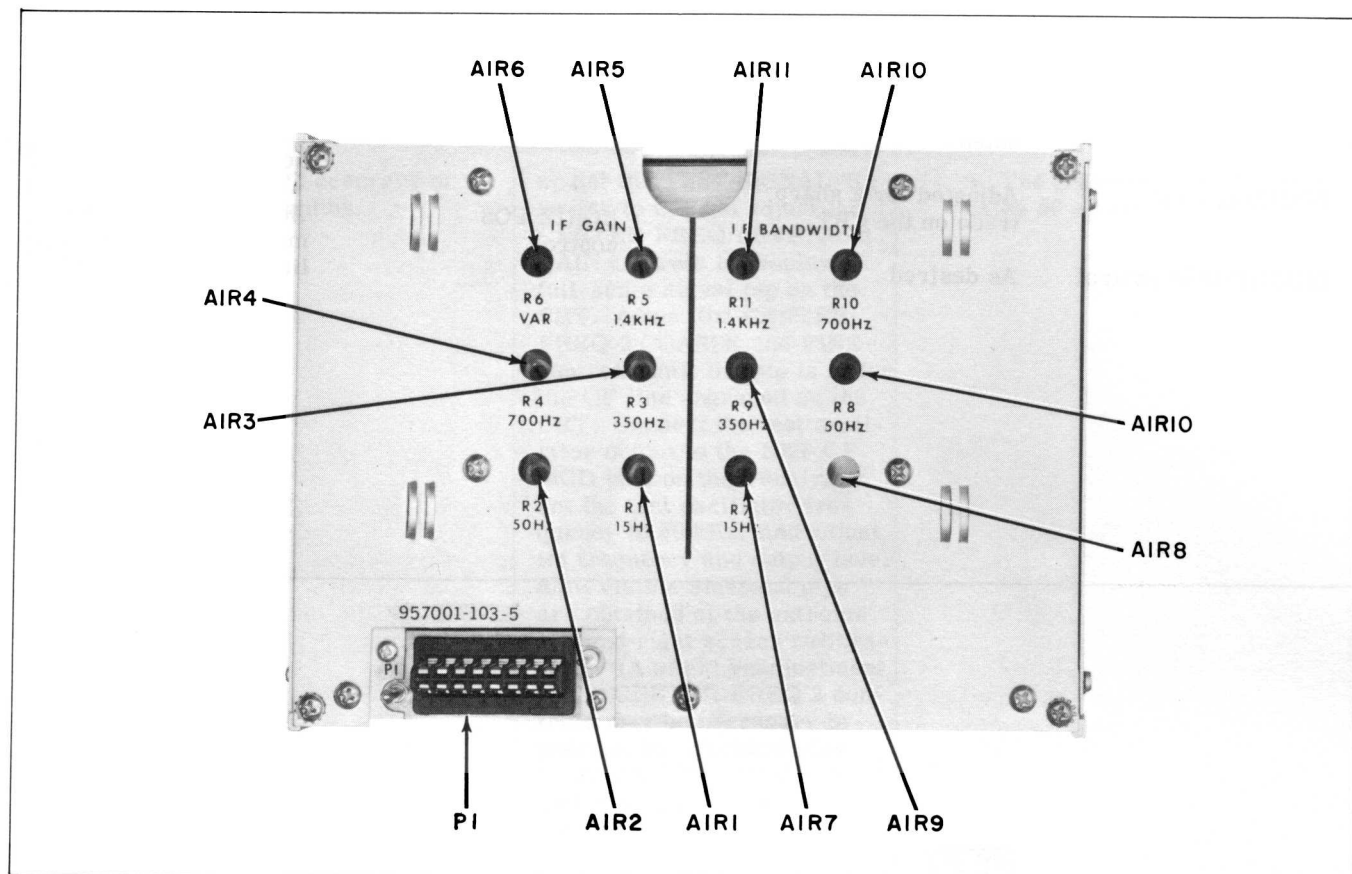


Figure 4-3. Panalyzer, Rear View

whether or not the Panalyzer is operating within its specifications. The quality of these checks presupposes that the Main Frame used in the test procedure is operating within acceptable limits; thus, procedures in the MF-5 manual should be performed prior to performing these checks. Figure 4-4 illustrates the equipment setup required to perform the minimum performance checks. Before performing these checks, set the front panel controls on the Panalyzer and Main Frame as indicated below and allow the equipment a 10-minute warmup period.

Panalyzer

|                        |                         |
|------------------------|-------------------------|
| SWEEP RATE-Hz switch   | 1.5 - 30                |
| VARIABLE control       | Fully CW                |
| TEST SIGNAL-Hz control | OFF                     |
| AMPLITUDE SCALE switch | LOG                     |
| IF ATTENUATOR switch   | 20 db                   |
| VIDEO FILTER switch    | OFF                     |
| SWEEP MODE switch      | NORMAL                  |
| ATTENUATOR switch      | All in the OUT position |

Panalyzer

|                          |          |
|--------------------------|----------|
| FREQ SCALE-Hz/DIV switch | VAR      |
| FREQ SCALE control       | Fully CW |
| IF BANDWIDTH control     | Fully CW |
| GAIN control             | Fully CW |

Section IV  
Maintenance

| <u>Main Frame</u>          |  | <u>Main Frame</u> |  |
|----------------------------|--|-------------------|--|
| SCALE ILLUMINATION control | Rotated CW until the CRT graticule illuminates | VERT. POS control | Adjusted so that the baseline trace coincides with the frequency scale |
| FOCUS control              | Adjusted for a sharp trace on the CRT          | HORIZ POS control | Adjusted to approximately center the baseline trace on the CRT         |
| BRIGHTNESS control         | As desired                                     |                   |  |

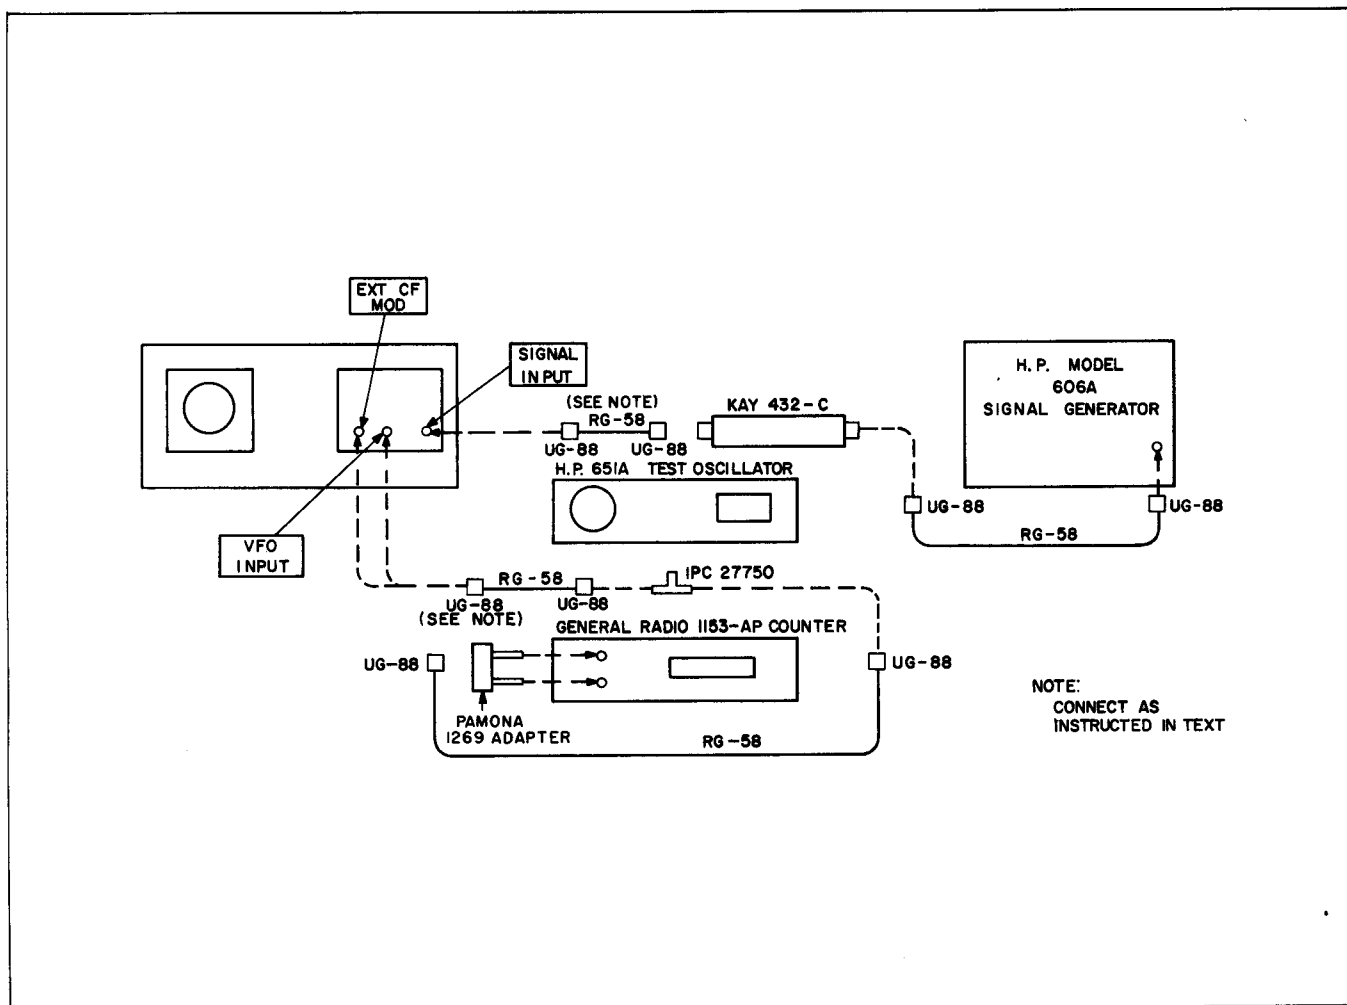


Figure 4-4. Minimum Performance Standards, Equipment Setup

TABLE 4-3. MINIMUM PERFORMANCE STANDARDS CHECKS

| Step | Purpose                            | Procedure   | Acceptable Indication   |
|------|------------------------------------|---|---|
| 1    | To check accuracy of sweep widths. | <p>a. Set the TEST SIGNAL-Hz switch to CF and adjust the CENTER FREQ LEVEL and GAIN controls to display a full-scale signal pip on the CRT. Adjust the CENTER FREQ 2 COARSE and FINE controls until the pip is under the CF line engraved on the CRT. Connect the test oscillator output to the EXT CF MOD jack on the Panalyzer. Set the test oscillator frequency to 50 kHz, and adjust its frequency and output level until visible sideband pips are obtained at the extreme left and right screen calibrations. (A slight readjustment of the CENTER FREQ 2 controls may be necessary to position the sideband pips correctly.) Record the indication on the frequency counter.</p> <p>b. Set the FREQ SCALE-Hz/DIV switch to the 1.4K position and repeat step a, using a test oscillator frequency of approximately 7 kHz.</p> <p>c. Set the FREQ SCALE-Hz/DIV switch to the 700 position and repeat step a, using a test oscillator frequency of approximately 3.5 kHz.</p> <p>d. Set the FREQ SCALE-Hz/DIV switch to the 350 position and repeat step a, using a test oscillator frequency of approximately 1.75 kHz.</p> <p>e. Set the FREQ SCALE-Hz/DIV switch to 50, and the SWEEP MODE switch to MANUAL. Adjust the MANUAL SWEEP control until the dot is under the CF line engraved on the CRT graticule. Slowly adjust the CENTER FREQ 1 control until the dot rises to a maximum. Return the SWEEP MODE switch to NORMAL and adjust the CENTER FREQ 1 control, as necessary, to place the signal pip under the CF line.</p> | <p>a. The frequency counter indicates 50 <math>\pm</math>5 kHz.</p> <p>b. Frequency counter indicates 7 kHz <math>\pm</math>700 Hz.</p> <p>c. Frequency counter indicates 3.5 kHz <math>\pm</math>350 Hz.</p> <p>d. Frequency counter indicates 1.75 kHz <math>\pm</math>175 Hz.</p> <p>e. Frequency counter indicates 250 <math>\pm</math>25 Hz.</p> |

(Cont'd)

TABLE 4-3. MINIMUM PERFORMANCE STANDARDS CHECKS (Cont'd)

| Step          | Purpose                                   | Procedure  | Acceptable Indication   |
|---------------|---|--|---|
| 1<br>(Cont'd) |   | <p>Set the test oscillator frequency to 250 Hz, and adjust its frequency and output level until visible sideband pips are obtained at the extreme left and right screen calibrations. (A slight readjustment of the CENTER FREQ 1 control may be necessary to position the sideband pips correctly.) Record the indication on the frequency counter.</p> <p>f. Set the FREQ SCALE-Hz/DIV switch to 15 position and repeat step e, using a test oscillator frequency of approximately 75 Hz.</p>  | <p>f. Frequency counter indicates <math>75 \pm 7.5</math> Hz.</p>   |
| 2             | To check accuracy of sweep rate.          | <p>a. With the FREQ SCALE-Hz/DIV switch set to the 15 position, and using a stop watch, record the time required for two sweeps on the CRT.</p> <p>b. Set the FREQ SCALE-Hz/DIV switch to the 1.4K position and record the time required for ten sweeps on the CRT.</p> <p>c. Connect the frequency counter input to the X OUT connector on the rear of the MF-5. Set the FREQ SCALE-Hz/DIV switch to VAR and rotate the FREQ SCALE control fully cw. Record the frequency counter indication</p> <p>d. Rotate the VARIABLE control fully CCW, and set the SWEEP RATE-Hz switch to the 0.1 - 1.5 position. Using the stop watch, record the time required for two sweeps on the CRT.</p> | <p>a. Stop watch indicates from 18 to 22 seconds.</p> <p>b. Stop watch indicates from 9 to 11 seconds.</p> <p>c. Frequency counter indicates 30 Hz, minimum.</p> <p>d. Stop watch indicates 20 seconds or more.</p> |
| 3             | To check accuracy of LIN amplitude scale. | <p>a. Disconnect the test oscillator from the EXT CF MOD jack and connect the signal generator (through the external attenuator which is set to 0 dB of attenuation) to the SIGNAL INPUT jack on the</p>   | <p>a. Signal pip height is from 8.7 to 9.3 divisions on the LIN amplitude scale.</p>  |

(Cont'd)

TABLE 4-3. MINIMUM PERFORMANCE STANDARDS CHECKS (Cont'd)

| Step                  | Purpose  | Procedure  | Acceptable Indication   |
|-----------------------|--|--|---|
| <p>3<br/>(Cont'd)</p> |  | <p>Panalyzor. Set the <b>FREQ SCALE</b> switch to 1.4K, the <b>AMPLITUDE SCALE</b> switch to LIN, the <b>SWEEP RATE-Hz</b> switch to 1.5-30, and the <b>TEST SIGNAL-Hz</b> switch to OFF. Rotate the <b>FREQ SCALE</b> and <b>VARIABLE</b> controls fully CW. Set the generator frequency to 500 kHz, at 200-uv output. Adjust the generator frequency and output level, as required, to obtain a full-scale signal pip at the center of the screen. Set in 1 dB of attenuation at the external attenuator and observe the signal pip height in LIN divisions on the CRT graticule.</p> <p>b. Repeat step a with the following amount of attenuation inserted in the external attenuation:</p> <ol style="list-style-type: none"> <li>(1) 2 dB</li> <li>(2) 3 dB</li> <li>(3) 4 dB</li> <li>(4) 5 dB</li> <li>(5) 6 dB</li> <li>(6) 8 dB</li> <li>(7) 10 dB</li> <li>(8) 14 dB</li> <li>(9) 20 dB</li> </ol> | <p>b. Signal pip height is within the ranges indicated below on the LIN amplitude scale:</p> <ol style="list-style-type: none"> <li>(1) From 7.7 to 8.3 divisions.</li> <li>(2) From 6.8 to 7.4 divisions.</li> <li>(3) From 6.1 to 6.7 divisions.</li> <li>(4) From 5.3 to 5.9 divisions.</li> <li>(5) From 4.7 to 5.3 divisions.</li> <li>(6) From 3.7 to 4.3 divisions.</li> <li>(7) From 3.0 to 3.6 divisions.</li> <li>(8) From 1.7 to 2.3 divisions.</li> <li>(9) From 0.7 to 1.3 divisions.</li> </ol> |
| <p>4</p>              | <p>To check accuracy of LOG amplitude scale.</p> | <p>a. Set in 0 dB of attenuation at the external attenuator and set the <b>AMPLITUDE SCALE</b> switch to LOG. The pip should be at the -20 DB mark on the LOG amplitude scale of the CRT graticule. Increase the signal generator output level by 20 dB and adjust the level, as necessary, to obtain a full-scale signal pip on the CRT. Set in 5 dB attenuation at the external attenuator and observe the signal pip height on the LOG scale of the CRT graticule. (The 1-dB steps of the external attenuator may be used for more accurate interpolation between 5 DB screen markings.)</p>  | <p>a. Signal pip is at the -4 to -6 DB mark on the LOG amplitude scale of the CRT graticule.</p>  |

(Cont'd)

TABLE 4-3. MINIMUM PERFORMANCE STANDARDS CHECKS (Cont'd)

| Step          | Purpose  | Procedure   | Acceptable Indication   |
|---------------|--|---|---|
| 4<br>(Cont'd) |  | <p>b. Repeat step a with the following amount of attenuation inserted in the external attenuator:</p> <p>(1) 10 dB<br/>(2) 15 dB<br/>(3) 20 dB<br/>(4) 25 dB<br/>(5) 30 dB<br/>(6) 35 dB<br/>(7) 40 dB</p>  | <p>b. Signal pip is at the following mark on the LOG amplitude scale:</p> <p>(1) -9 to -11 DB<br/>(2) -14 to -16 DB<br/>(3) -19 to -21 DB<br/>(4) -24 to -26 DB<br/>(5) -29 to -32 DB<br/>(6) -33 to -37 DB<br/>(7) -38 to -42 DB</p> |
| 5             | To check frequency response (flatness) of the Panalyzer. | Set the external attenuator to 0 dB, the AMPLITUDE SCALE switch to LIN, and the FREQ SCALE-Hz/DIV switch to VAR. Adjust the signal generator output level to obtain a full-scale signal pip on the CRT. While observing for the maximum and minimum pip amplitudes, adjust the signal generator frequency so as to move the signal pip between the left and right calibrated screen limits. Set the signal generator frequency to the frequency producing the maximum pip amplitude on the CRT and adjust the generator output level, as necessary, to obtain a full-scale pip on the CRT. Then set the signal generator to the frequency producing the minimum pip amplitude and observe the pip amplitude on the LIN scale. | The signal pip amplitude should be at least 9 divisions (LIN) for the frequency producing the minimum pip amplitude.  |
| 6             | To check image rejection of the Panalyzer.               | Set the signal generator frequency to 500 kHz (verify the frequency with the frequency counter, or by setting the TEST SIGNAL-Hz switch to CF to locate 500 kHz in the center of the screen). Adjust the generator output level until a full-scale signal pip is obtained on the CRT. Record the output level of the generator. Then set the signal generator frequency to 700 kHz and increase its level until a full-scale pip is obtained on the CRT; also record this output level of the generator. Divide the   | $\frac{E_{700 \text{ kHz}}}{E_{500 \text{ kHz}}} > 100$   |

(Cont'd)



TABLE 4-3. MINIMUM PERFORMANCE STANDARDS CHECKS (Cont'd)

| Step          | Purpose                                       | Procedure  | Acceptable Indication  |
|---------------|---|--|--|
| 6<br>(Cont'd) |   | <p>recorded signal generator output level at 700 kHz by the recorded output level at 500 kHz.</p>  |  |
| 7             | <p>To check i-f bandwidth and resolution.</p> | <p>a. Disconnect the signal generator from the SIGNAL INPUT jack. Set the TEST SIGNAL-Hz switch to CF, the AMPLITUDE SCALE switch to LIN, and the FREQ SCALE-Hz/DIV switch to 1.4K. Adjust the CENTER FREQ LEVEL, GAIN, and CENTER FREQ 2 controls for a full-scale signal pip on the CRT. Measure the width of the pip (in divisions) at 0.5 of full-scale deflection.</p> <p>b. Repeat step a with the FREQ SCALE-Hz/DIV switch set to the following:</p> <ul style="list-style-type: none"> <li>(1) 700</li> <li>(2) 350</li> <li>(3) 50</li> <li>(4) 15</li> </ul> <p style="margin-left: 100px;">Use the CENTER FREQ 1 control to center the pip</p> <p>c. Set the AMPLITUDE SCALE switch to LOG. Adjust the CENTER FREQ LEVEL and/or GAIN control(s) to obtain a full-scale pip. Set the IF ATTENUATOR switch to 0 dB and measure the width of the pip at the -40 DB screen calibration mark on the LOG amplitude scale.</p> <p>d. Repeat step c with the FREQ SCALE-Hz/DIV switch set to the following:</p> <ul style="list-style-type: none"> <li>(1) 50</li> <li>(2) 350</li> <li>(3) 700</li> <li>(4) 1.4K</li> </ul> <p>e. Set the AMPLITUDE SCALE switch to LIN, the TEST SIGNAL-Hz switch to OFF, the IF ATTENUATOR switch to 20 dB, the FREQ SCALE-Hz/DIV switch to VAR, and the SWEEP RATE-Hz switch to 1.5 - 30.</p> | <p>a. Width of signal pip, measured at 0.5 vertical graduation, should not be greater than 0.25 divisions.</p> <p>b. Width of signal pip should not be greater than:</p> <ul style="list-style-type: none"> <li>(1) 0.30 divisions</li> <li>(2) 0.45 divisions</li> <li>(3) 0.40 divisions</li> <li>(4) 0.7 divisions</li> </ul> <p>c. Width of signal pip, measured at -40 DB screen calibration mark, should not be greater than 6.0 divisions.</p> <p>d. Width of signal pip should not be greater than:</p> <ul style="list-style-type: none"> <li>(1) 3.0 divisions</li> <li>(2) 3.0 divisions</li> <li>(3) 2.2 divisions</li> <li>(4) 1.5 divisions</li> </ul> <p>e. The VARIABLE control should be at or above mid-position when the pips are resolved.</p> |

(Cont'd)

**Section IV  
Maintenance**

**TABLE 4-3. MINIMUM PERFORMANCE STANDARDS CHECKS (Cont'd)**

| Step          | Purpose  | Procedure   | Acceptable Indication  |
|---------------|--|---|--|
| 7<br>(Cont'd) |  | <p>Connect the test oscillator to the VFO INPUT jack and the signal generator to the SIGNAL INPUT jack. Using the counter, set the test oscillator frequency to 500.00 kHz (or as close as practicable) and the signal generator frequency to 502.80 kHz (or as close as practicable). Adjust the output level of the generator and oscillator so that they produce equal amplitude signal pips at full-scale deflection. (Do not disturb their frequency settings.) The tops of the pips may have a "double-humped" shape. If so, adjust the IF BANDWIDTH control CCW so that the pips are no longer "double-humped" but not so far as to reduce their amplitudes. Adjust the VARIABLE control, as necessary, to produce two adjacent pips that intersect at or below the 0.7 scale line (LIN). Note the rotational position of the VARIABLE control after this display is produced.</p> |  |
| 8             | <p>To check overall sensitivity of the Analyzer.</p> | <p>a. Set the FREQ SCALE-Hz/DIV switch to 1.4K, and all the ATTENUATOR switches to their OUT position. Rotate the GAIN control to its fully CW position. Set the signal generator frequency to 2 MHz, at a 200-uv output, and the test oscillator frequency to 2.5 MHz, at approximately a 0.3-volt output. Adjust the test oscillator frequency, as required, to center the signal pip on the CRT. Then adjust the signal generator output level until a full-scale pip is obtained on the CRT. Record the signal generator output level.</p> <p>b. Set the FREQ SCALE-Hz/DIV switch to 700 and repeat step a.</p> <p>c. Set the FREQ SCALE-Hz/DIV switch to 350 and repeat step a.</p>  | <p>a. The signal generator output level is 200 uv maximum.</p> <p>b. Same as step a.</p> <p>c. Same as step a.</p> |

(Cont'd)

TABLE 4-3. MINIMUM PERFORMANCE STANDARDS CHECKS (Cont'd)

| Step          | Purpose                                      | Procedure   | Acceptable Indication   |
|---------------|--|---|---|
| 8<br>(Cont'd) |  | <p>d. Set the <b>FREQ SCALE-Hz/DIV</b> switch to 50. Use the <b>CENTER FREQ 1</b> control to center the pip. Adjust the signal generator output level to obtain a full-scale signal pip on the CRT and record this level.</p> <p>e. Set the <b>FREQ SCALE-Hz/DIV</b> switch to 15 and repeat step d.</p> <p>f. Set the <b>FREQ SCALE-Hz/DIV</b> switch to VAR and the <b>VARIABLE</b> control fully CW. Adjust the <b>IF BANDWIDTH</b> control for a single-peaked pip on the CRT. Then adjust the signal generator output level to obtain a full-scale pip on the CRT. Record the signal generator output level.</p>   | <p>d. Same as step a.</p> <p>e. Same as step a.</p> <p>f. Same as step a.</p>   |
| 9             | To check accuracy of calibrated attenuators. | <p>a. Set the external attenuator to 70 dB and adjust the signal generator output level for a full-scale signal pip on the CRT. Set the 1 dB <b>ATTENUATOR</b> switch on the Panalyzer to its <b>IN</b> position and remove 1 dB from the external attenuator. Record the difference in dB between the attenuation inserted in the Panalyzer and the attenuation removed from the external attenuator (as indicated by the departure of the signal pip from full-scale <b>LIN</b>).</p> <p>b. Repeat step a, setting the following <b>ATTENUATOR</b> switches on the Panalyzer to the <b>IN</b> position and removing a corresponding amount of attenuation from the external attenuator:</p> <ol style="list-style-type: none"> <li>(1) 2 dB</li> <li>(2) 4 dB</li> <li>(3) 8 dB</li> <li>(4) 15 dB</li> <li>(5) 20 dB</li> <li>(6) 20 dB</li> </ol> <p>c. Set the <b>IF ATTENUATOR</b> switch to 0 dB and add 20 dB to the external attenuator.</p> | <p>a. The dB difference is 0.05 dB max.</p> <p>b. The dB difference is as follows:</p> <ol style="list-style-type: none"> <li>(1) 0.15 dB max.</li> <li>(2) 0.35 dB max.</li> <li>(3) 0.75 dB max.</li> <li>(4) 1.5 dB max.</li> <li>(5) 2.5 dB max.</li> <li>(6) 3.5 dB max.</li> </ol> <p>c. The dB difference is 0.5 dB max.</p> |

(Cont'd)

**Section IV  
Maintenance**

**TABLE 4-3. MINIMUM PERFORMANCE STANDARDS CHECKS (Cont'd)**

| Step          | Purpose                               | Procedure  | Acceptable Indication  |
|---------------|---------------------------------------|--|--|
| 9<br>(Cont'd) |                                       | Record the difference in dB between the attenuation removed from the Panalyzer and the attenuation added to the external attenuator.   |  |
| 10            | To check intermodulation distortions. | Disconnect the signal generator from the SIGNAL INPUT jack. Set the TEST SIGNAL-Hz switch to 3.0 M and 3.002 M, the AMPLITUDE SCALE switch to LOG and IF ATTENUATOR switch to 20 dB, and the FREQ SCALE-Hz/DIV switch 1.4K. Rotate the GAIN control fully CW and set the test oscillator frequency to 3.5 MHz, at a 0.3-volt output level. Tune the test oscillator until the two-tone pips are centered on the screen. Use the ATTENUATOR switches and GAIN control to set the two-tone pips at full-scale. Set the IF ATTENUATOR switch to 0 dB and observe the intermodulation distortion products. | Intermodulation products fall below the -40 DB mark on the CRT (-60 DB below two-tone signal level). |

**4-12. POWER SUPPLY CHECKS.**

4-13. Before proceeding with the systematic troubleshooting of the Panalyzer, the +21 vdc and -11 vdc input voltages from the Main Frame should be checked. This check will usually determine whether abnormal d-c voltages are causing the malfunction. To check these voltages, remove the Panalyzer from the Main Frame and connect d-c power to the module using the supplied service cable. Remove the bottom cover and use the VTVM to measure the +21 vdc supply voltage between P1-15 (positive) and chassis ground; and the -11 vdc supply voltage between P1-7 (negative) and chassis ground.

**4-14. SYSTEMATIC TROUBLE LOCALIZATION.**

4-15. Three possible troubles are presented in table 4-4 to illustrate a systematic approach to the isolation of trouble within the Panalyzer. This procedure is performed with the Panalyzer connected to the Main Frame via the supplied service cable. Note that full use is made of the maintenance information in the manual (e. g., detailed block diagram, schematic diagrams, and voltage chart). The three possible problems that will be considered are:

- a. No trace on CRT.
- b. Normal CRT trace, but low noise and signal.
- c. Normal CRT trace with normal noise, but no input signal or test signals.

4-16. Before proceeding with the troubleshooting procedure of table 4-4, set the front panel controls on the Panalyzer as indicated below and allow the equipment a 10-minute warmup period.

|                              |          |
|------------------------------|----------|
| FREQ SCALE-Hz/<br>DIV switch | VAR      |
| FREQ SCALE<br>control        | Fully CW |
| IF BANDWIDTH<br>control      | Fully CW |
| GAIN control                 | Fully CW |
| SWEEP RATE-Hz<br>switch      | 1.5 - 30 |
| VARIABLE control             | Fully CW |
| TEST SIGNAL-Hz<br>control    | OFF      |

|                        |                         |                           |                         |
|------------------------|-------------------------|---------------------------|-------------------------|
| AMPLITUDE SCALE switch | LIN                     | CENTER FREQ LEVEL control | Midposition             |
| IF ATTENUATOR switch   | 20 dB                   | AMPLITUDE SCALE switch    | LIN                     |
| SWEEP MODE switch      | NORMAL                  | IF ATTENUATOR switch      | 20 dB                   |
| ATTENUATOR switch      | All in the OUT position | VIDEO FILTER switch       | OFF                     |
| VIDEO FILTER switch    | OFF                     | SWEEP MODE switch         | NORMAL                  |
|                        |                         | ATTENUATOR switches       | All in the OUT position |

**4-17. ALIGNMENT PROCEDURE.**

4-18. Paragraphs 4-21 through 4-29 give a complete alignment procedure for the Panalyzer. Each of these procedures starts with the operator's controls set as indicated in paragraph 4-20 below so that any procedure can be performed independent of the rest. (If the complete alignment procedure is to be performed, perform the alignment in the sequence indicated.) It should be stressed that these procedures should be performed only when a minimum performance standard check is not satisfactory or a component has been replaced in an adjustable circuit.

4-19. The alignment procedures given are performed with the Panalyzer connected to the Main Frame via the supplied service cable. It is assumed that the Main Frame used is operating within its specifications. Therefore, the minimum performance checks given in the Main Frame instruction manual should be performed prior to starting the alignment of the Panalyzer.

4-20. Before performing the alignment procedure set the front panel controls on the Panalyzer and Main Frame as indicated below and allow the equipment a 10-minute warmup period.

Panalyzer

|                          |          |
|--------------------------|----------|
| FREQ SCALE-Hz DIV switch | VAR      |
| FREQ SCALE control       | Fully CW |
| IF BANDWIDTH control     | Fully CW |
| GAIN control             | Fully CW |
| SWEEP RATE-Hz switch     | 1.5 - 30 |
| VARIABLE control         | Fully CW |
| TEST SIGNAL-Hz control   | OFF      |

Main Frame

|                            |  |
|----------------------------|--|
| SCALE ILLUMINATION control | Rotated CW until the CRT graticule illuminates                       |
| FOCUS control              | Adjusted for a sharp trace on the CRT                                |
| BRIGHTNESS control         | As desired   |
| VERT. POS control          | Adjust so that the baseline trace coincides with the frequency scale |
| HORIZ POS control          | Adjust to approximately center the baseline trace on the CRT         |

4-21. SWEEP RATE ADJUSTMENT. To adjust the sweep rate, proceed as follows:

- a. Set the front panel controls on the Panalyzer and Main Frame as indicated in paragraph 4-20.
- b. Set the FREQ SCALE-Hz/DIV switch to 1.4K. Using a stop watch, measure the time required for 20 complete sweeps on the CRT.
- c. Adjust A6R26 so that the time required for 20 complete sweeps is from 18 to 22 seconds.
- d. Set the FREQ SCALE-Hz/DIV switch to 50. Using a stop watch, measure the time required for 2 complete sweeps on the CRT.
- e. Adjust A6R24 so that the time required for 2 complete sweeps is from 18 to 22 seconds.

4-22. MARKER FREQUENCY ADJUSTMENT. To adjust the frequency of the 5-kHz marker generator, proceed as follows:

- a. Set the front panel controls on the Panalyzer and Main Frame as indicated in paragraph 4-20.
- b. Set the TEST SIGNAL-Hz switch to 5K.

TABLE 4-4. SYSTEMATIC TROUBLE LOCALIZATION

| No. | Symptom  | Test Procedure   | If Indication Is Normal   | If Indication Is Abnormal   |
|-----|--|--|---|---|
| 1   | No trace on CRT.   | <p>a. Check for the presence of sawtooth waveform on pin 7 of J2 with an oscilloscope.</p> <p>b. Check for the presence of a sawtooth waveform on pin 13 of J6 with an oscilloscope.</p>   | <p>a. Troubleshoot the Main Frame as described in its instruction manual.</p> <p>b. Check SWEEP MODE switch S5.</p> | <p>a. Go to b.</p> <p>b. Troubleshoot sawtooth generator A6Q4, A6Q5, and A6Q6.</p>  |
| 2   | <p>Low noise and signal on CRT.</p> <p><b>Note</b><br/>Almost all the noise generated by the Panalyzer is amplified in the A7 and A8 modules; noise that is generated in the earlier stages receives its largest amplification in these modules. Thus, the problem could be caused by a low gain stage in either of these modules.</p> | <p>a. Rotate the VERT POS control on the Main Frame and observe that the baseline moves.</p> <p><b>Note</b><br/>For steps b through f, it is necessary to slightly rock the frequency of the signal generator to obtain a true baseline rise.</p> <p>b. Connect a 100-kHz, 180 microvolt signal to pin 1 of J7. Observe that the CRT baseline rises to approximately full scale.</p> <p>c. Connect a 100-kHz, 3 millivolt signal to pin 14 of J8. Observe that the CRT baseline rises to approximately full scale.</p> <p>d. Connect a 500-kHz, 3 millivolt signal to pin 15 of J3. Observe that approximately a full-scale signal ptp is obtained on the CRT.</p> | <p>a. Go to b.</p> <p>b. Go to c.</p> <p>c. Go to d.</p> <p>d. Go to e.</p>   | <p>a. Troubleshoot the Main Frame as described in its instruction manual.</p> <p>b. Troubleshoot the A7 module.</p> <p>c. Troubleshoot the A8 module.</p> <p>d. Troubleshoot the balanced mixer portion of the A3 module.</p> |

(Cont'd)

TABLE 4-4. SYSTEMATIC TROUBLE LOCALIZATION (Cont'd)

| No.           | Symptom  | Test Procedure  | If Indication Is Normal                                  | If Indication Is Abnormal   |
|---------------|--|---|--|---|
| 2<br>(Cont'd) |  | <p>e. Connect a 500-kHz, 120 microvolt signal to pin 5 of J5. Observe that approximately a full-scale signal pip is obtained on the CRT.</p> <p>f. Connect a 500-kHz, 100 microvolt signal to terminal E1 on the A9 module. Observe that approximately a full-scale pip is obtained on the CRT.</p> <p style="text-align: center;"><b>Note</b></p> <p>Wide variations in sensitivity may be experienced at this point. A range of 50 to 400 microvolts (if no VFO input is present) is not to be considered abnormal.</p> | <p>e. Go to f.</p> <p>f. Check input attenuator A10.</p> | <p>e. Troubleshoot the A4 module. Also check GAIN control R1.</p> <p>f. Troubleshoot the A9 module.</p> |
| 3             | <p>Normal noise on CRT, but no input signal or test signals.</p> <p style="text-align: center;"><b>Note</b></p> <p>The fact that the CRT trace and noise are normal indicates that the sawtooth generator and A7 and A8 modules are functioning properly. Thus, the defective component must be in or before the balanced mixer.</p> | <p>a. Set the FREQ SCALE control fully CCW. Check for the presence of a 6-volt, peak-to-peak 600 kHz square wave at pin 8 or 10 of J3 with an oscilloscope (through a high impedance probe).</p>  | <p>a. Go to b.</p>                                       | <p>a. Go to e.</p>  |

(Cont'd)

TABLE 4-4. SYSTEMATIC TROUBLE LOCALIZATION (Cont'd)

| No.           | Symptom | Test Procedure  | If Indication Is Normal   | If Indication Is Abnormal   |
|---------------|---------|---|---|---|
| 3<br>(Cont'd) |         | <p>b. Set the <b>FREQ SCALE</b> control fully CW. Inject a 500-kHz signal into pin 15 of J3, and check for a signal pip on the CRT.</p> <p>c. Inject the 500-kHz signal into pin 5 of J5, and check for a signal pip on the CRT.</p> <p>d. Inject a 500-kHz signal into terminal E1 of A9 module, and check for a signal pip on the CRT.</p> <p>e. Set the <b>FREQ SCALE</b> control fully CW and check for the presence of a sawtooth waveform at pin 5 of J2 with an oscilloscope (through a high impedance probe).</p> | <p>b. Go to c.</p> <p>c. Go to d.</p> <p>d. Troubleshoot the input attenuator A10.</p> <p>e. Troubleshoot unity-gain amplifier A2Q3 through A2Q6 and multivibrator A2Q1/Q2.</p> | <p>b. Troubleshoot the balanced mixer portion of the A3 module.</p> <p>c. Troubleshoot the A5 module.</p> <p>d. Troubleshoot the A9 module.</p> <p>e. Troubleshoot emitter followers A2Q7 and A2Q8, and associated circuitry.</p> |



c. Connect a frequency counter to pin 11 of connector J4.

d. Adjust A4R16 until the counter indicates 5 kHz.

**4-23. SWEEP LINEARITY ADJUSTMENT.** To perform the sweep linearity adjustment, proceed as follows:

a. Set the front panel controls on the Panalyzer and Main Frame as indicated in paragraph 4-20.

b. Connect an oscilloscope to pin 12 of plug P1 and observe the sawtooth waveform.

c. Adjust A6R20 for best linearity of the sawtooth waveform.

**4-24. DC BALANCE ADJUSTMENT.** To perform the d-c balance adjustment, proceed as follows:

a. Set the front panel controls on the Panalyzer and Main Frame as indicated in paragraph 4-20.

b. Set the TEST SIGNAL-Hz switch to CF and rotate the CENTER FREQ LEVEL control to provide an approximately full-scale pip.

c. Rotate the FREQ SCALE control maximum CCW and adjust the CENTER FREQ 2 COARSE control for a maximum baseline rise.

d. Rotate the FREQ SCALE control fully CW.

e. Adjust A2R18 until the signal pip is under the CF line engraved on the CRT graticule.

**4-25. 100-kHz CRYSTAL FILTER ADJUSTMENT.** To perform the 100-kHz crystal filter adjustment, proceed as follows:

a. Set the front panel controls on the Panalyzer and Main Frame as indicated in paragraph 4-20.

b. Set the TEST SIGNAL-Hz switch to CF and adjust the CENTER FREQ LEVEL control until approximately a full-scale signal pip is obtained on the CRT.

c. Adjust the CENTER FREQ 2 COARSE control to center the pip on the CRT.

d. Remove crystal A8Y3 from its socket. Rotate core in A8T1 completely counterclockwise. Adjust CENTER FREQ LEVEL control to obtain a full-scale pip.

e. Rotate the FREQ SCALE control so that the display occupies approximately one half of the base line.

f. Adjust capacitor A8C4 for most symmetrical pip skirts.

g. Adjust A8T1 for maximum bandwidth. Adjustment of A8T1 in the correct direction will cause the

signal pip to reduce in amplitude. The point of maximum bandwidth is when the signal pip goes thru an amplitude null. If the pip does not go thru a null, the value of factory selected capacitor A8C6 should be changed.

#### Note

If the core of transformer A8T1 is fully withdrawn, and an amplitude null cannot be achieved, reduce the value of A8C6 to the next lower standard value. Conversely, if the core of A8T1 is fully inserted, increase the value of A8C6 to the next higher value.

h. Remove crystal A8Y2. Readjust CENTER FREQ LEVEL control to obtain a full-scale pip. Rotate the FREQ SCALE control so that the display occupies approximately one-half of the baseline. Adjust A8C4 for best symmetry of the pip.

i. Adjust A8T1 for maximum bandwidth.

j. Plug in crystal A8Y2. Rotate core in A8T3 completely counterclockwise. Adjust CENTER FREQ LEVEL control to obtain a full-scale pip. Rotate the FREQ SCALE control so that the display occupies approximately one-half of the baseline.

k. Repeat steps f. and g. adjusting A8C14 and A8T3 instead of A8C4 and A8T1. If the pip does not go thru a null, the value of factory selected capacitor A8C16 should be changed.

#### Note

If the core of transformer A8T3 is fully withdrawn, and an amplitude null cannot be achieved, reduce the value of A8C16 to the next lower standard value. Conversely, if the core of A8T3 is fully inserted, increase the value of A8C16 to the next higher value.

l. Remove crystal A8Y1. Repeat steps h. and i. adjusting A8T3 and A8C14 instead of A8C4 and A8T1.

m. Plug in crystal A8Y3. Rotate core in A8T5 completely counterclockwise. Adjust CENTER FREQ LEVEL control to obtain a full-scale pip. Rotate the FREQ SCALE control so that the display occupies approximately one-half of the baseline.

n. Repeat steps f. and g. adjusting A8C21 and A8T5 instead of A8C4 and A8T1. If the pip does not go thru a null, the value of factory selected capacitor A8C23 should be changed.

#### Note

If the core of transformer A8T5 is fully withdrawn, and an amplitude null cannot be achieved, reduce the value of A8C23 to the next lower standard value. Conversely, if the core of A8T5 is fully inserted, increase the value of A8C23.

o. Remove crystal A8Y2. Repeat steps h. and i. adjusting A8C21 and A8T5 instead of A8C4 and A8T1.

**Section IV  
Maintenance**

p. Plug in crystals A8Y1 and A8Y2. Readjust A8C4 and A8C21, as necessary, for best symmetry of the signal pip. Readjust A8T1 and A8T5, as necessary, for maximum bandwidth.

4-26. LOG/LIN AMPLITUDE ADJUSTMENT. To perform the log/lin amplitude adjustment, proceed as follows:

a. Set the front panel controls on the Panalyzer and Main Frame as indicated in paragraph 4-20.

b. Insert 40 dB of attenuation at the input of the Panalyzer by setting the two 20 dB ATTENUATOR switches to their IN position.

c. Set the AMPLITUDE SCALE switch to LOG, and the TEST SIGNAL-Hz switch to CF. Set CENTER FREQ LEVEL for a half scale pip.

d. Adjust A7R49 fully CCW and then adjust it approximately 1/4-turn in the CW direction.

e. Adjust A7R59 and A7R61 to their midposition.

f. Rotate the IF BANDWIDTH control until best symmetry of the signal pip is obtained on the CRT.

g. Adjust the CENTER FREQ LEVEL control so that the signal pip amplitude is -40 dB.

h. Remove the 40 dB of attenuation inserted in step b at the Panalyzer input.

i. Adjust A7R59 so that the amplitude of the signal pip is 0 dB.

j. Insert 40 dB of attenuation at the Panalyzer input and adjust the CENTER FREQ LEVEL control so that the signal pip amplitude is -40 dB.

k. Remove 40 dB of attenuation from the Panalyzer input and observe the pip height. If it is not 0 dB, readjust A7R59.

l. Repeat steps j and k until the signal pip amplitude is -40 dB with 40 dB of attenuation inserted at the Panalyzer input and 0 dB when the 40 dB of attenuation is removed from the Panalyzer input.

m. Insert 20 dB of attenuation (total) at the Panalyzer input. A signal pip amplitude of -20 dB should be obtained on the CRT. If not, note how much the pip amplitude is above or below -20 dB.

n. Insert a total of 40 dB of attenuation at the Panalyzer input. Adjust A7R49 to increase or decrease the pip height by the amount noted in step m (e.g., if the pip amplitude noted in step m was -18 dB, increase the pip height by 2 dB).

o. Repeat steps g through n.

p. Adjust the CENTER FREQ LEVEL control so that the signal pip amplitude is -20 dB.

q. Set the AMPLITUDE SCALE switch to LIN and observe that a full-scale pip is obtained on the CRT. If not, adjust A7R61 for exactly a full-scale pip.

r. Adjust A7L1 for a peak indication on the CRT.

4-27. PRESET AND VARIABLE SWEEP WIDTHS ADJUSTMENT. To perform the preset and variable sweep widths adjustment, proceed as follows:

a. Set the front panel control on the Panalyzer and Main Frame as indicated in paragraph 4-20.

b. Set the AMPLITUDE SCALE switch to LOG, and the TEST SIGNAL-Hz switch to CF. Adjust the CENTER FREQ LEVEL control to obtain a full-scale signal pip on the CRT.

c. Adjust the CENTER FREQ 2 COARSE control to place the signal pip under the CF line.

d. Reduce the sweep rate slightly, using the SWEEP RATE control.

e. Connect the test oscillator to the EXT CF MOD jack. Set the test oscillator frequency to 25 kHz. Adjust the output level of the test oscillator until sideband pips appear on the CRT; then set the test oscillator frequency to 50 kHz.

f. Adjust A5R19 until the sideband pips are located exactly on the calibrated screen limits. Re-adjust the CENTER FREQ 2 COARSE control, as necessary, to obtain this result.

g. Set the FREQ SCALE-Hz/DIV switch to 1.4K and set the test oscillator frequency to 7 kHz.

h. Repeat procedure in step f, adjusting A5R18 instead of A5R19.

i. Set the FREQ SCALE-Hz/DIV switch to 50 and the SWEEP MODE switch to MANUAL.

j. Adjust the MANUAL SWEEP control until the dot appears under the CF line.

k. Rotate the CENTER FREQ 1 control fully CCW, and then rotate it 1/2 turn in the CW direction.

l. Connect a frequency counter to pin 3 of connector J6.

m. Adjust A6L1 until the counter indicates 600 kHz. Disconnect the counter at the conclusion of this step.

n. Set the SWEEP MODE switch to NORMAL and the test oscillator frequency to 250 Hz. Adjust the CENTER FREQ LEVEL control until a full-scale pip is obtained on the CRT.

o. Center the pip under the CF line, using the CENTER FREQ 1 control. (This procedure is

simplified by setting the SWEEP MODE switch to MANUAL and using the MANUAL SWEEP control to place the dot in the center of the CRT frequency scale. Slowly adjust the CENTER FREQ 1 control until the dot rises to a maximum. Then return the SWEEP MODE switch to NORMAL and make any necessary readjustments of the CENTER FREQ 1 control to center the pip.)

p. Adjust A2R22 until the sideband pips are located exactly on the calibrated screen limits. Readjust the CENTER FREQ 1 control, as necessary, to obtain this result.

q. Adjust A6R3 for best frequency linearity of the CF pip and sideband pips. That is, the CF pip will be within one half division of the CF screen calibration when the sideband pips are exactly on the screen calibration limits.

r. Repeat steps p and q for optimum results.

s. Set the FREQ SCALE-Hz/DIV switch to 15 and the test oscillator frequency to 75 Hz. Adjust the CENTER FREQ LEVEL control until a full-scale pip is obtained on the CRT.

t. Repeat step o.

u. Repeat step p, adjusting A2R21 instead of A2R22.

4-28. IF GAIN AND BANDWIDTH ADJUSTMENT.  
To perform the i-f gain and bandwidth adjustment, proceed as follows:

a. Set the front panel controls on the Analyzer and Main Frame as indicated in paragraph 4-20.

b. Connect the test oscillator to the VFO INPUT jack and the signal generator to the SIGNAL INPUT jack. Set the test oscillator frequency to 3.5 MHz, at a 0.3-volt output level. Set the signal generator frequency to 3.0 MHz, at a 150-microvolt output level.

c. Adjust the signal generator frequency slightly until the signal pip appears under the CF line.

d. Adjust A5R14 fully CW. Adjust A1R6 for a full-scale signal pip on the CRT.

e. Adjust A5R14 until the pip amplitude drops 1 division (1 dB) on the LIN scale.

f. Set the FREQ SCALE-Hz/DIV switch to 1.4K, the AMPLITUDE SCALE switch to LOG, and the IF ATTENUATOR switch to 0 dB.

g. Carefully adjust A1R11 for the narrowest pip without excessive loss in gain. Ringing may appear on the left side of the pip at or near the proper setting of A1R11.

### Note

As A1R11 is rotated in a clockwise direction the pip at first will appear broad with greater amplitude. As the control is rotated, the pip becomes narrow and its amplitude decreases. In the 1.4K, 700 and 350 positions of the FREQ SCALE-Hz/DIV switch, after passing point of narrowest pip, the pip will again become broad, and its amplitude will decrease rapidly. In the 50 and 15 position of the FREQ SCALE-Hz/DIV switch, the pip will again become broad and amplitude will increase.

h. Adjust A1R5 for a full-scale signal pip on the CRT.

i. Set the FREQ SCALE-Hz/DIV switch to 700. Repeat steps g and h, using A1R10 and A1R4 instead of A1R11 and A1R5.

j. Set the FREQ SCALE-Hz/DIV switch to 350. Repeat steps g and h, using A1R9 and A1R3 instead of A1R11 and A1R5.

k. Set the FREQ SCALE-Hz/DIV switch to 50. Center the signal pip, using the CENTER FREQ 1 control. (This procedure is simplified by setting the SWEEP MODE switch to MANUAL and the MANUAL SWEEP control to place the dot in the center of the CRT frequency scale. Slowly adjust the CENTER FREQ 1 control until the dot rises to a maximum. Then return the SWEEP MODE switch to NORMAL and make any necessary readjustments of the CENTER FREQ 1 control to center the pip.)

l. Repeat steps g and h, using A1R8 and A1R2 instead of A1R11 and A1R5. (Momentarily set the SWEEP MODE switch to FAST to quickly obtain the signal pip at the center of the screen.)

m. Set the FREQ SCALE-Hz/DIV switch to 15 and repeat steps g and h, using A1R7 and A1R1 instead of A1R11 and A1R5.

n. Set the FREQ SCALE-Hz/DIV switch to 1.4K, the AMPLITUDE SCALE switch to LIN, and the IF ATTENUATOR switch to 20 dB. Readjust A1R5, if necessary, to obtain a full-scale signal pip on the CRT.

o. Set the FREQ SCALE-Hz/DIV switch to 700 and readjust A1R4, if necessary, to obtain a full-scale signal pip on the CRT.

p. Set the FREQ SCALE-Hz/DIV switch to 350 and readjust A1R3, if necessary, to obtain a full-scale signal pip on the CRT.

q. Set the FREQ SCALE-Hz/DIV switch to 50 and readjust A1R22, if necessary, to obtain a full-scale signal pip on the CRT.

**Section IV  
Maintenance**

r. Set the **FREQ SCALE-Hz/DIV** switch to 15 and readjust **A1R1**, if necessary, to obtain a full-scale signal pip on the CRT.

**4-29. TWO-TONE TEST BALANCE ADJUSTMENT.** To perform the two-tone test balance adjustment, proceed as follows:

a. Set the front panel controls on the Panalyzer and Main Frame as indicated in paragraph 4-20.

b. Connect the test oscillator to the **VFO INPUT** jack. Set the test oscillator frequency to 3.5 MHz, at an output level of 0.3 volts.

c. Set the **FREQ SCALE-Hz/DIV** switch to 1.4K and the **TEST SIGNAL-Hz** switch to 3.0 M and 3.002 M. Adjust the **GAIN** control so that the highest pip is approximately full-scale in the CRT.

d. Adjust **A3R15** until the pips of the two-tone display are of equal amplitude.

**4-30. TYPICAL VOLTAGE MEASUREMENTS.**

**4-31.** Voltage measurements for each of the transistor stages in the Panalyzer are given in table 4-5. These voltages were obtained by setting the front panel controls at the positions given below and measuring the voltages with an RCA Model WV-98C VTVM.

| <u>Control</u>            | <u>Position</u>         |
|---------------------------|-------------------------|
| IF ATTENUATOR switch      | 20 dB                   |
| TEST SIGNAL-Hz control    | OFF                     |
| CENTER FREQ LEVEL control | Fully CCW               |
| FREQ SCALE control        | Fully CW                |
| IF BANDWIDTH control      | Fully CW                |
| SWEEP RATE-Hz switch      | 1.5 - 30                |
| VARIABLE control          | Fully CW                |
| SWEEP MODE switch         | NORMAL                  |
| GAIN control              | Fully CW                |
| CENTER FREQ 2 control     | Midposition             |
| FREQ SCALE-Hz/DIV switch  | VAR                     |
| ATTENUATOR switches       | All in the OUT position |

| <u>Control</u>         | <u>Position</u> |
|------------------------|-----------------|
| VIDEO FILTER switch    | OFF             |
| AMPLITUDE SCALE switch | LIN             |

**TABLE 4-5. VOLTAGE MEASUREMENTS**

| Module             | Stage | Emitter | Base  | Collector |
|--------------------|-------|---------|-------|-----------|
| A2                 | Q1    | -10.5   | -11.0 | - 7.8     |
|                    | Q2    | -10.5   | -10.8 | - 7.5     |
|                    | Q3    | - 3.2   | - 3.7 | -10.8     |
|                    | Q4    | -10.8   | -10.2 | - 3.7     |
|                    | Q5    | - 2.5   | - 3.1 | -10.8     |
|                    | Q6    | - 2.5   | - 2.8 | -10.2     |
|                    | Q7    | 0       | + 0.6 | +21.0     |
|                    | Q8    | - 5.6   | - 6.4 | -10.8     |
| A3<br>(See Note 1) | Q1    | - 7.0   | - 7.4 | -10.4     |
|                    | Q2    | - 7.0   | - 7.6 | -10.4     |
|                    | Q3    | +16.0   | +15.0 | + 7.5     |
|                    | Q4    | +16.5   | +16.0 | + 7.0     |

(Cont'd)


TABLE 4-5. VOLTAGE MEASUREMENTS (Cont'd)

| Module             | Stage           | Emitter | Base   | Collector |
|--------------------|-----------------|---------|--------|-----------|
| A4<br>(See Note 2) | Q1              | 0       | -      | - 2.2     |
|                    | Q2              | 0       | + 2.7  | - 2.2     |
|                    | Q3              | - 0.50  | - 0.60 | - 2.2     |
|                    | Q4              | - 5.4   | - 6.0  | - 7.4     |
|                    | Q5              | +13.0   | +12.6  | + 7.8     |
|                    | Q6              | + 7.8   | + 7.2  | + 0.58    |
| A5                 | Q1              | - 4.5   | - 5.1  | - 9.4     |
|                    | Q2              | + 1.4   | + 2.0  | + 4.1     |
|                    | Q3              | + 3.5   | + 4.1  | + 9.1     |
|                    | Q4              | + 8.6   | + 9.1  | +15.5     |
| A6                 | Q1 (See Note 3) | -10.2   | - 9.6  | - 6.6     |
|                    | Q2 (See Note 3) | - 0.9   | - 1.5  | - 4.8     |
|                    | Q3 (See Note 3) | - 4.5   | - 3.8  | -10.8     |
|                    | Q4              | + 4.0   | + 4.5  | +20.5     |
|                    | Q5              | +21.0   | +20.5  | + 4.5     |
|                    | Q6              | + 4.5   | +11.5  | -         |
| A7                 | Q1              | -10.0   | - 9.4  | 0         |
|                    | Q2              | -10.0   | - 9.4  | 0         |
|                    | Q3              | - 8.8   | - 8.2  | - 6.4     |
|                    | Q4              | - 8.8   | - 8.2  | - 5.8     |
|                    | Q5 (See Note 4) | - 8.8   | - 8.2  | - 5.5     |
|                    | Q6              | - 8.9   | - 8.3  | +19.0     |
|                    | Q6 (See Note 4) | +21.0   | +21.0  | +21.0     |
|                    | Q7 (See Note 4) | - 9.0   | - 8.2  | - 5.2     |
|                    | Q8 (See Note 4) | - 8.7   | - 8.0  | - 6.0     |
|                    | Q9 (See Note 4) | - 8.7   | - 8.0  | - 3.2     |
|                    | Q10             | - 0.5   | + 0.04 | +18.5     |
|                    | Q11             | - 0.5   | 0      | +21.0     |
|                    | Q12             | +21.0   | +20.5  | + 0.7     |
| Q13                | + 0.1           | + 0.7   | +20.5  |           |
| A8                 | Q1              | - 2.5   | - 3.1  | - 6.3     |
|                    | Q2              | - 2.5   | - 3.1  | - 6.4     |
|                    | Q3              | + 6.1   | + 5.6  | + 2.6     |
|                    | Q4              | + 7.0   | + 6.2  | + 2.6     |
|                    | Q5              | +10.0   | + 9.3  | + 6.8     |
|                    | Q6              | - 0.8   | - 1.4  | - 8.6     |
|                    | Q7              | - 8.0   | - 8.6  | -10.4     |
|                    | Q8              | - 7.4   | - 8.0  | - 8.5     |
|                    | Q9              | - 3.8   | - 4.5  | - 7.4     |
|                    | Q10             | + 6.0   | + 5.4  | + 2.6     |
|                    | Q11             | + 6.8   | + 6.0  | + 2.6     |
|                    | Q12             | +10.2   | + 9.4  | + 6.7     |
|                    | Q13             | + 6.0   | + 5.5  | + 2.6     |
|                    | Q14             | + 6.8   | + 6.2  | + 2.6     |
|                    | Q15             | +10.0   | + 9.4  | + 6.8     |
| A9                 | Q1              | 0       | - 0.2  | - 7.3     |

**Note**

1. TEST SIGNAL-Hz control set to 3.0M and 3.002M.
2. TEST SIGNAL-Hz control set to 5K.
3. FREQ SCALE-Hz/DIV control set to 50.
4. AMPLITUDE SCALE switch set to LOG.

**SECTION V**  
**SCHEMATIC DIAGRAMS**

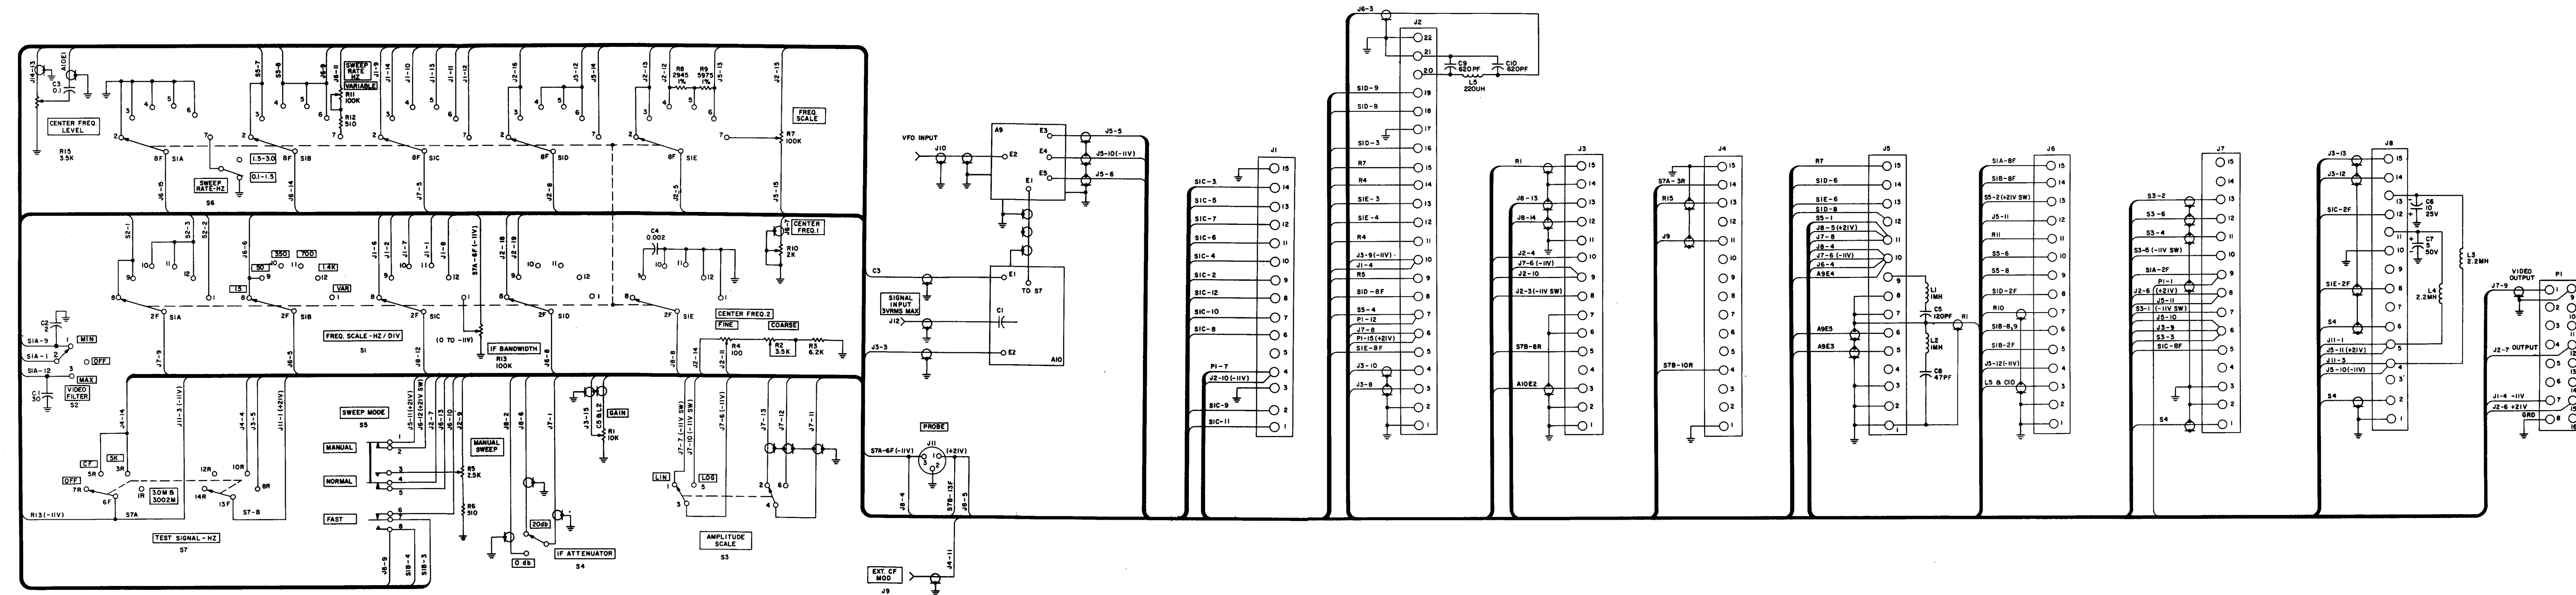

NOTES:  
UNLESS OTHERWISE SPECIFIED,  
1. ALL RESISTOR VALUES ARE IN OHMS, 1/4 W, ±5%.  
2. ALL CAPACITORS ARE IN MICROFARADS.  
3. [ ] INDICATES FRONT PANEL MARKING

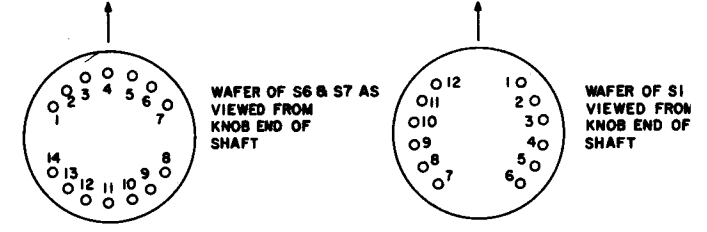


Figure 5-1. Panalyzer, Schematic of Interconnection


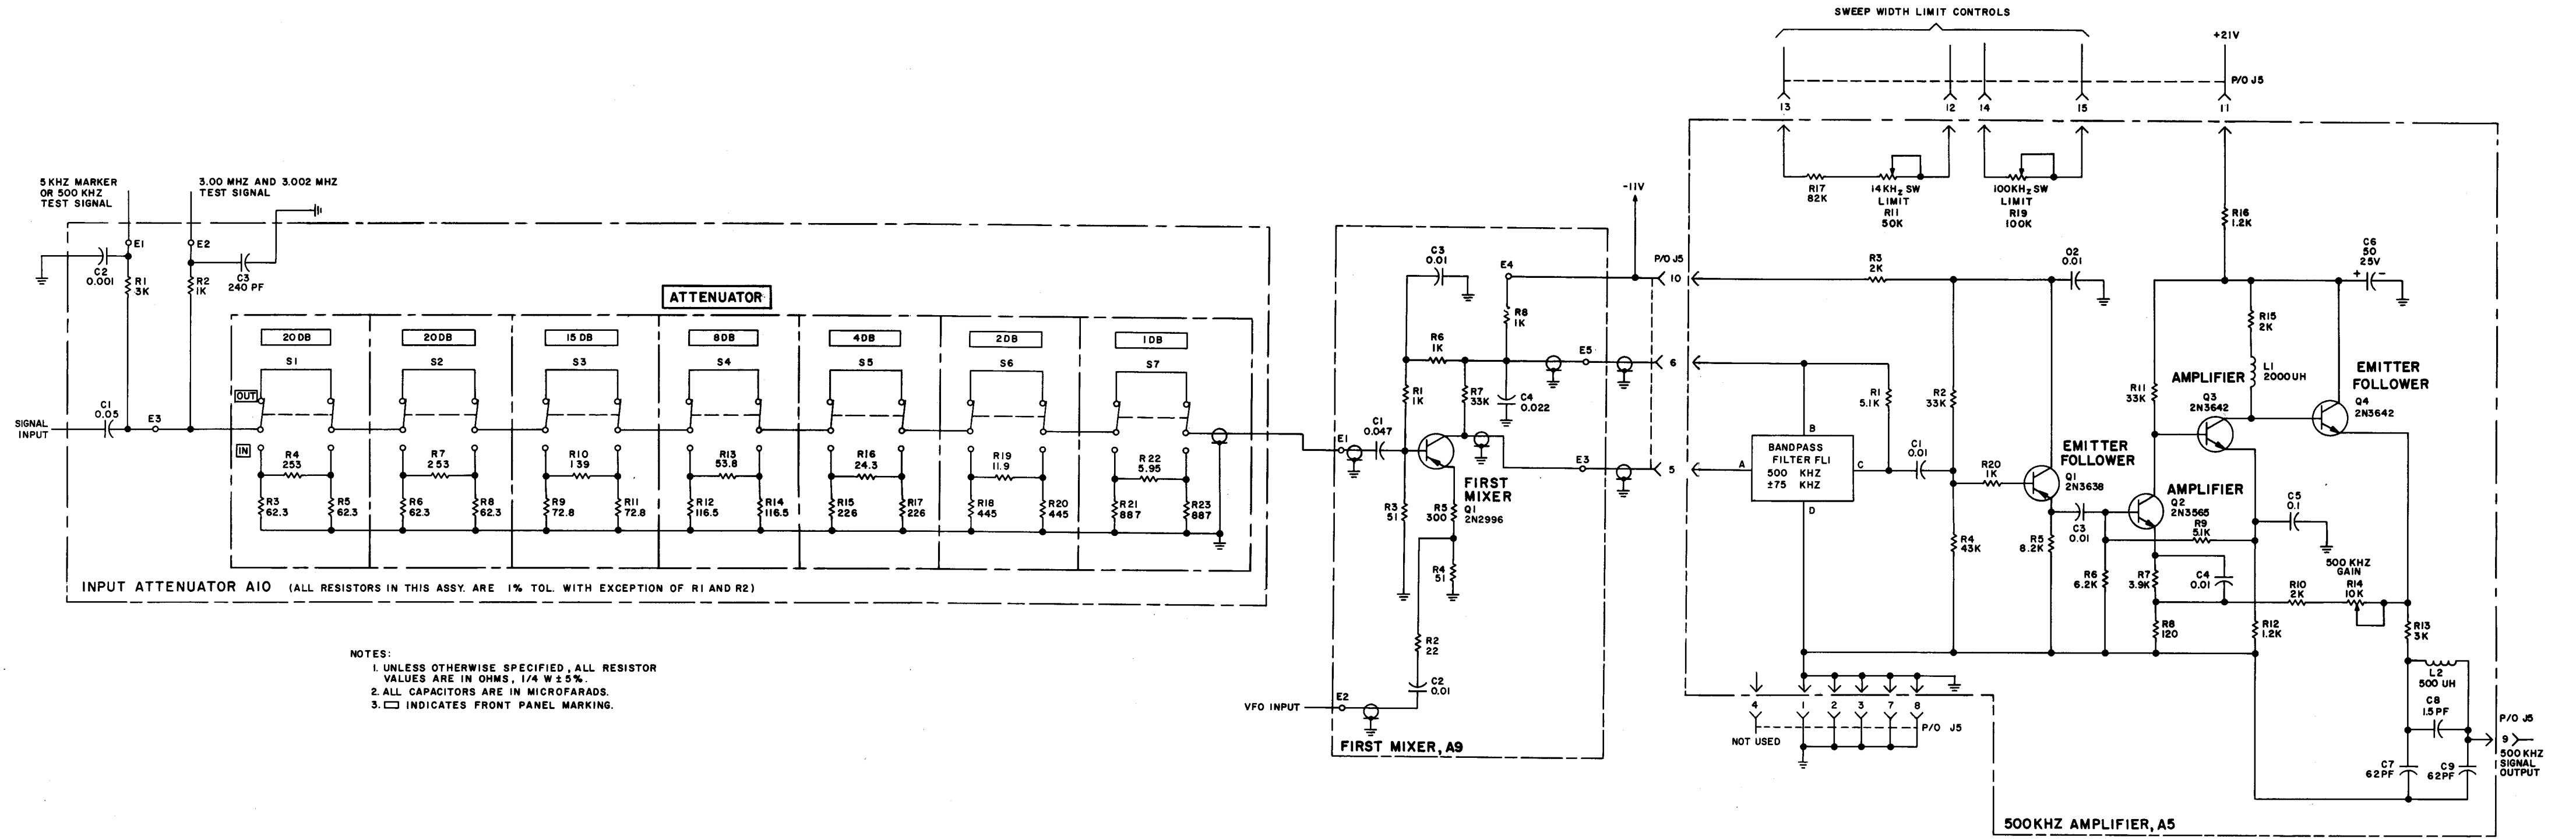



Figure 5-2. Input Attenuator Assembly A10, First Mixer Assembly A9, and 500-kHz I-F Amplifier Assembly A5, Schematic Diagram



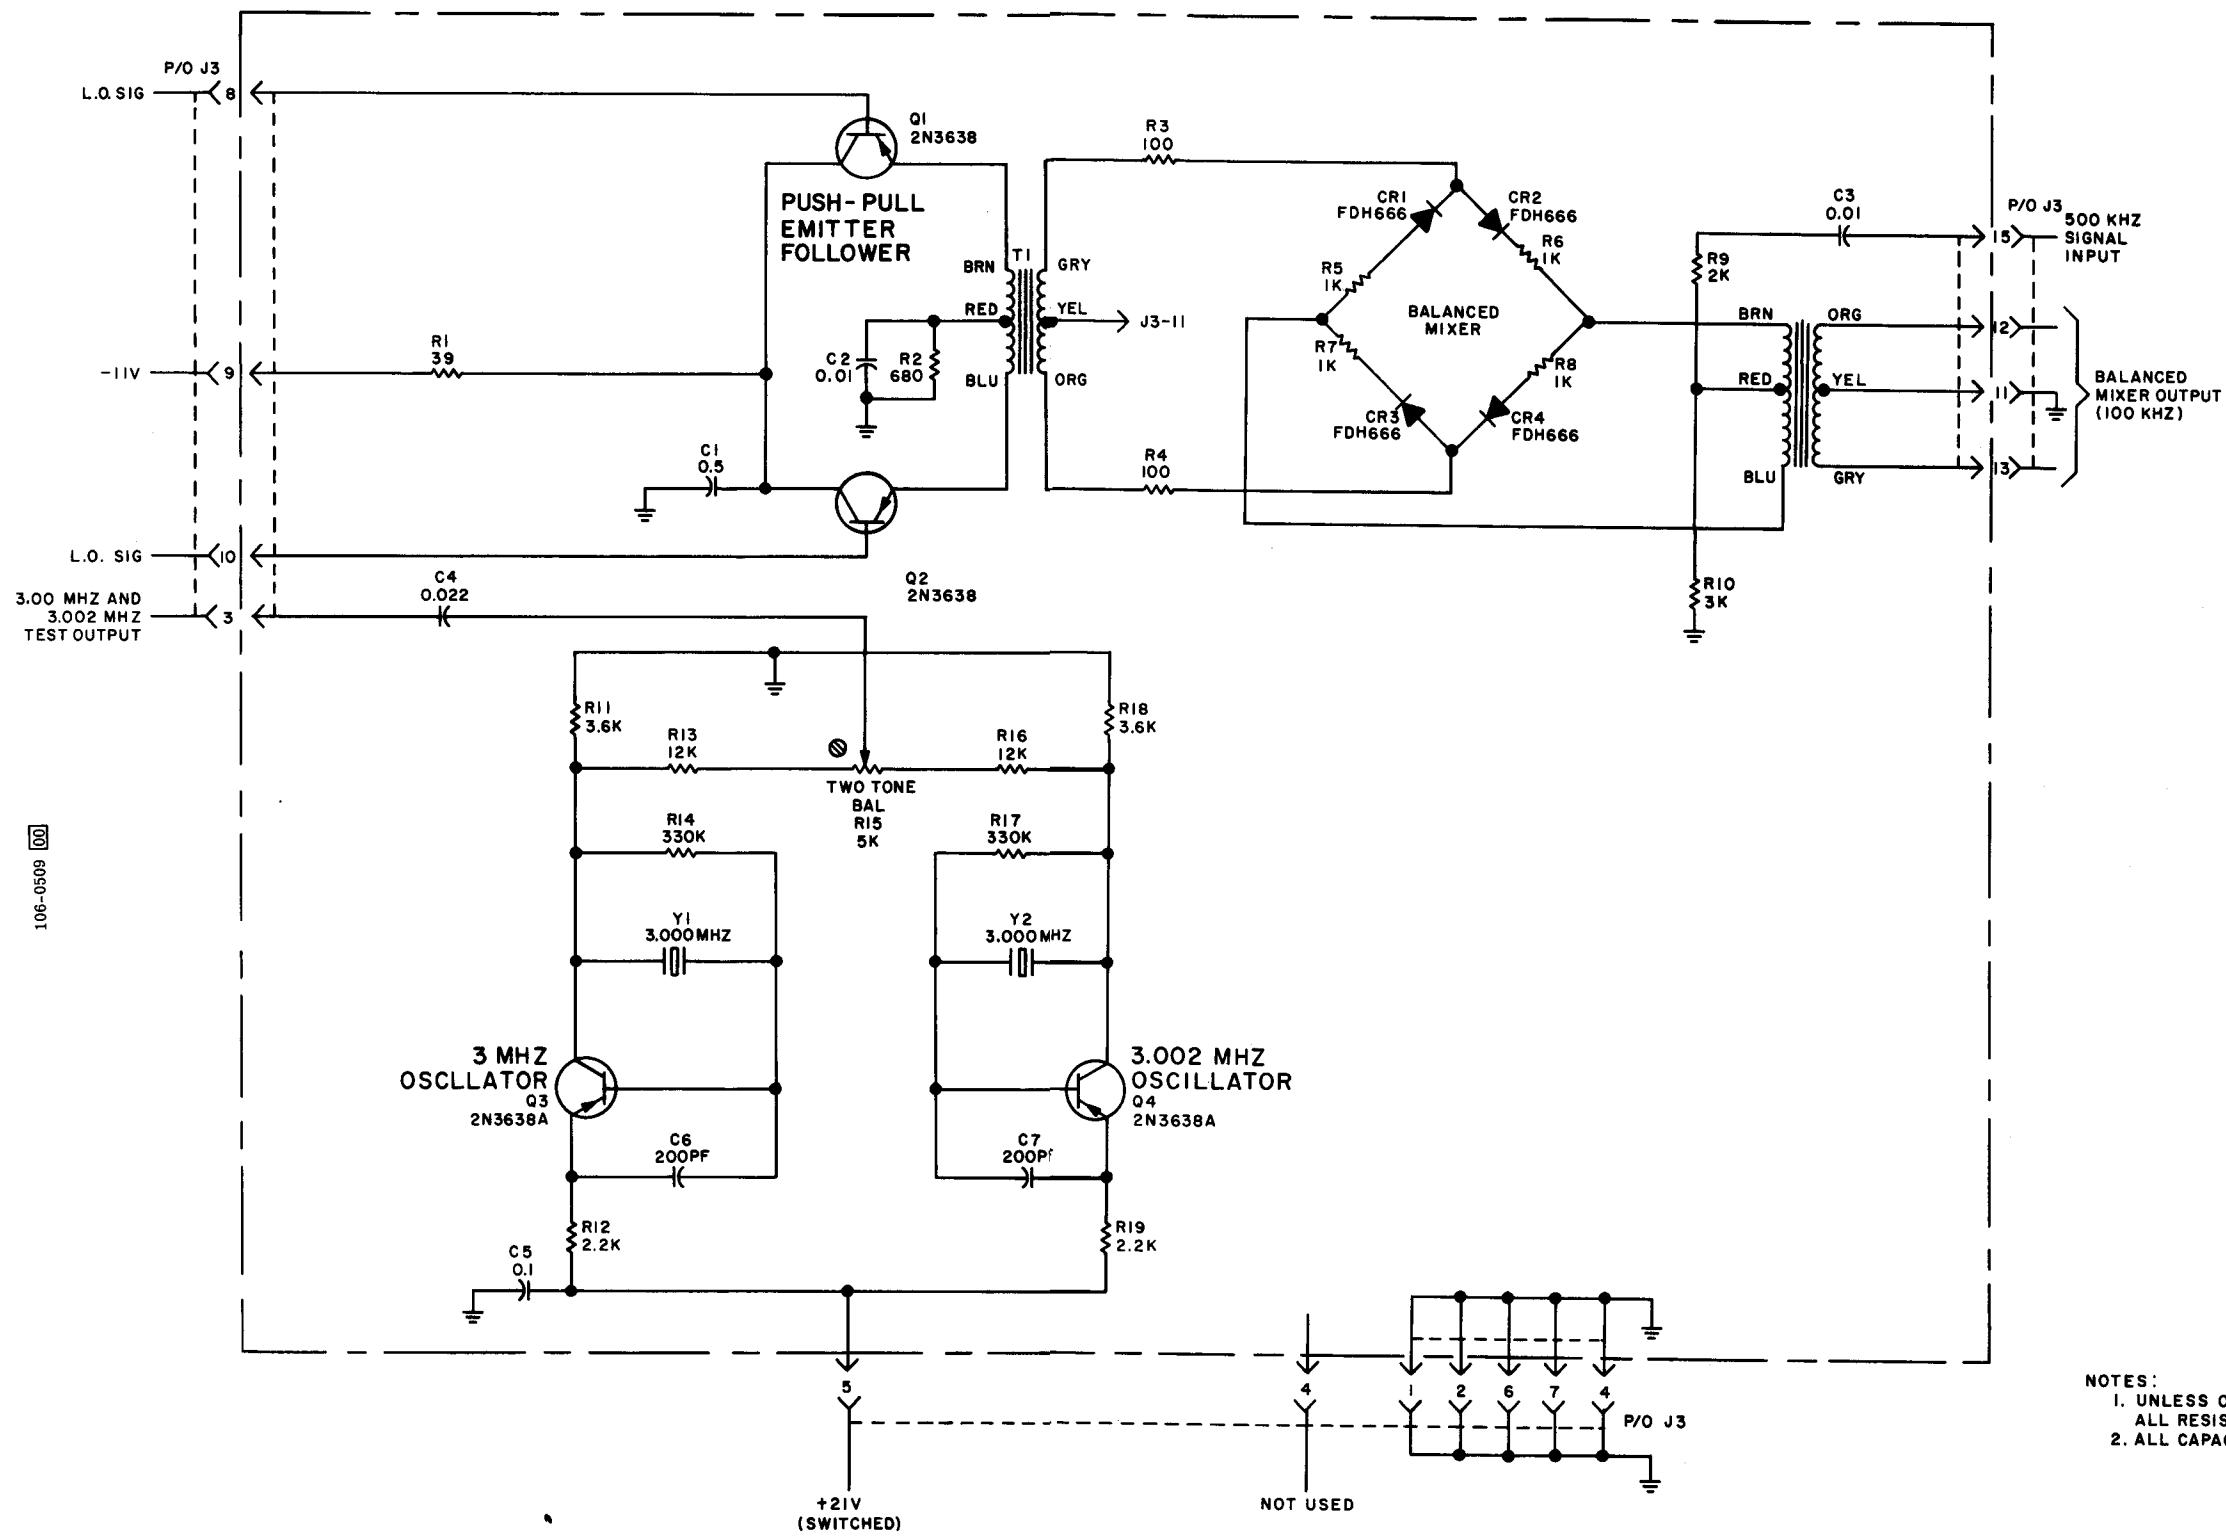


NOTES:  
1. UNLESS OTHERWISE SPECIFIED:  
ALL RESISTORS ARE IN OHMS, 1/4W, ±5%.  
2. ALL CAPACITORS ARE IN MICROFARADS.

Figure 5-3. Two-tone Generator and  
2nd Mixer Assembly A3,  
Schematic Diagram

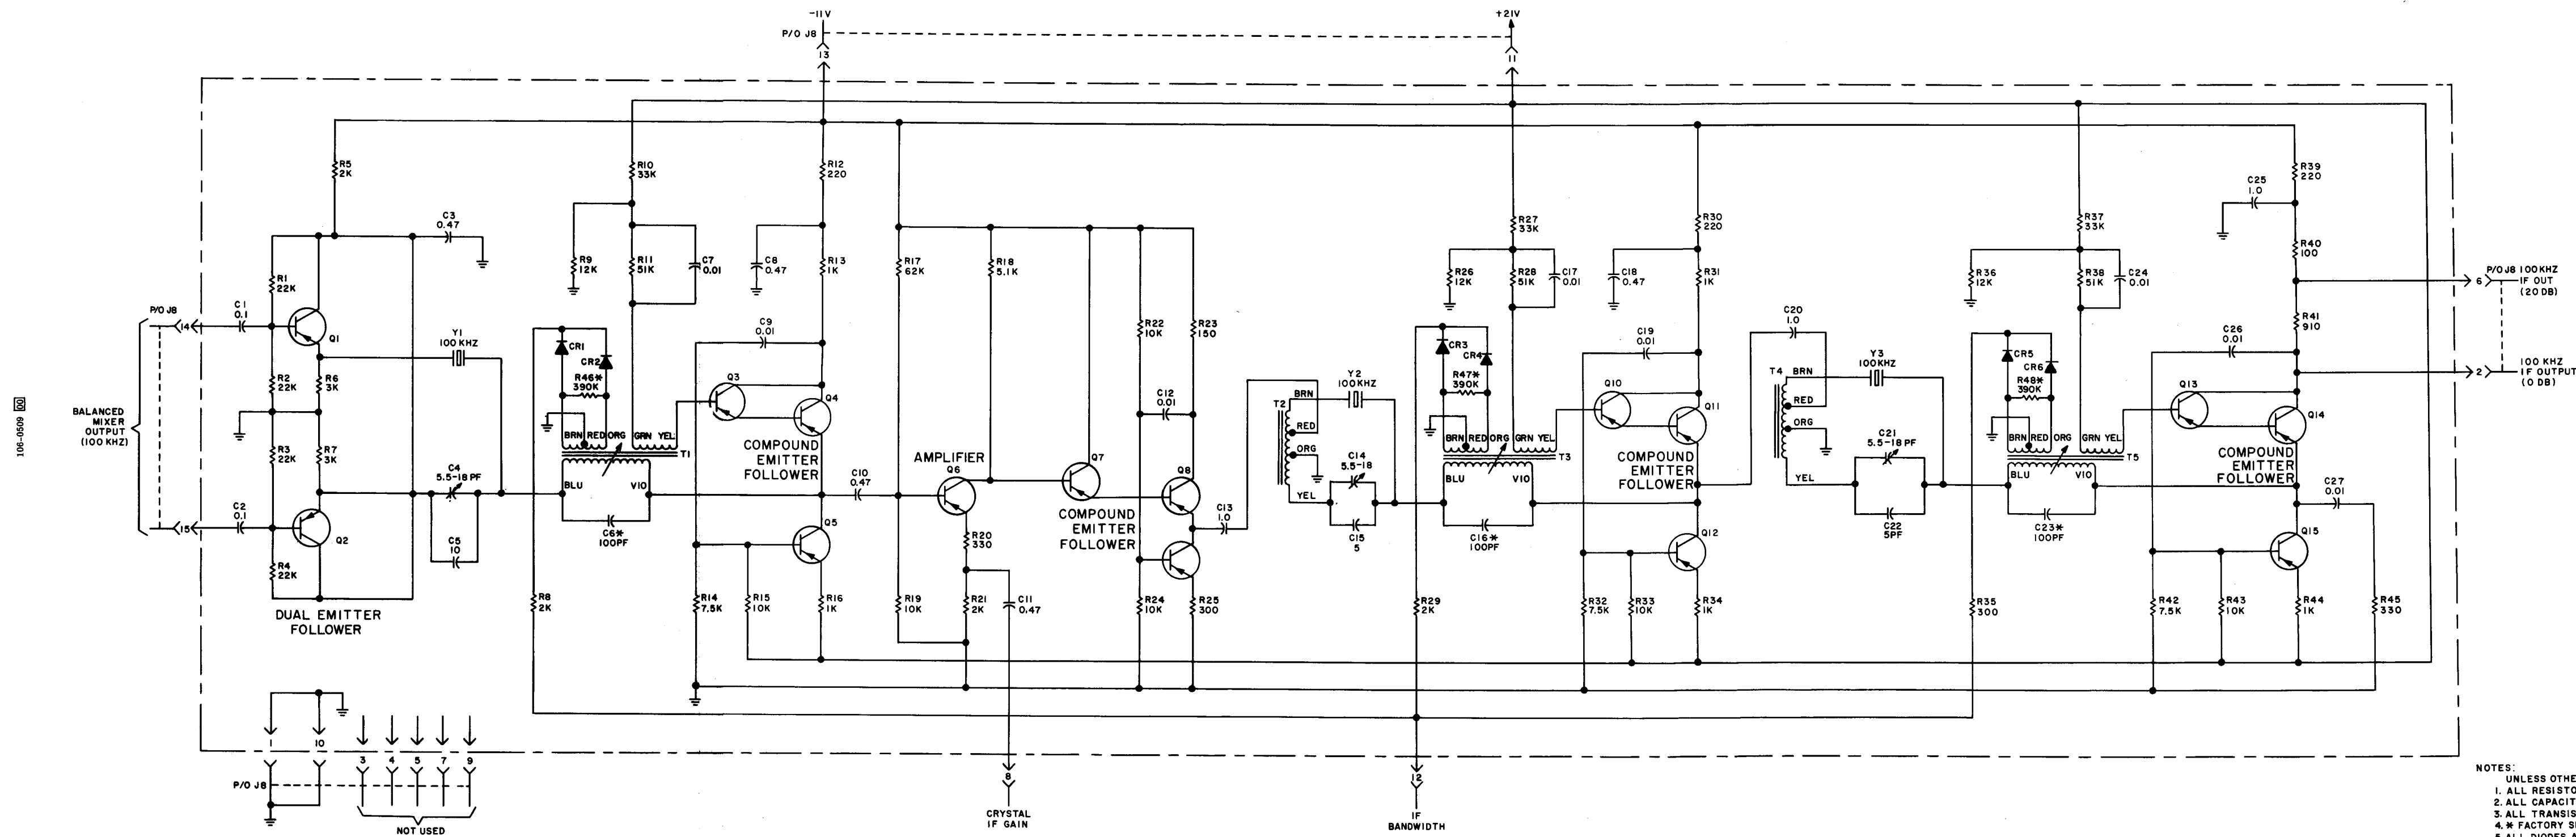

NOTES:  
UNLESS OTHERWISE SPECIFIED:  
1. ALL RESISTORS ARE IN OHMS, 1/4W, ±5%.  
2. ALL CAPACITORS ARE MICROFARADS.  
3. ALL TRANSISTORS ARE TYPE 2N3638.  
4. \* FACTORY SELECTED VALUE (NOMINAL VALUE SHOWN).  
5. ALL DIODES ARE TYPE 1N251.

Figure 5-4. 100-kHz Crystal I-F Amplifier Assembly A8, Schematic Diagram

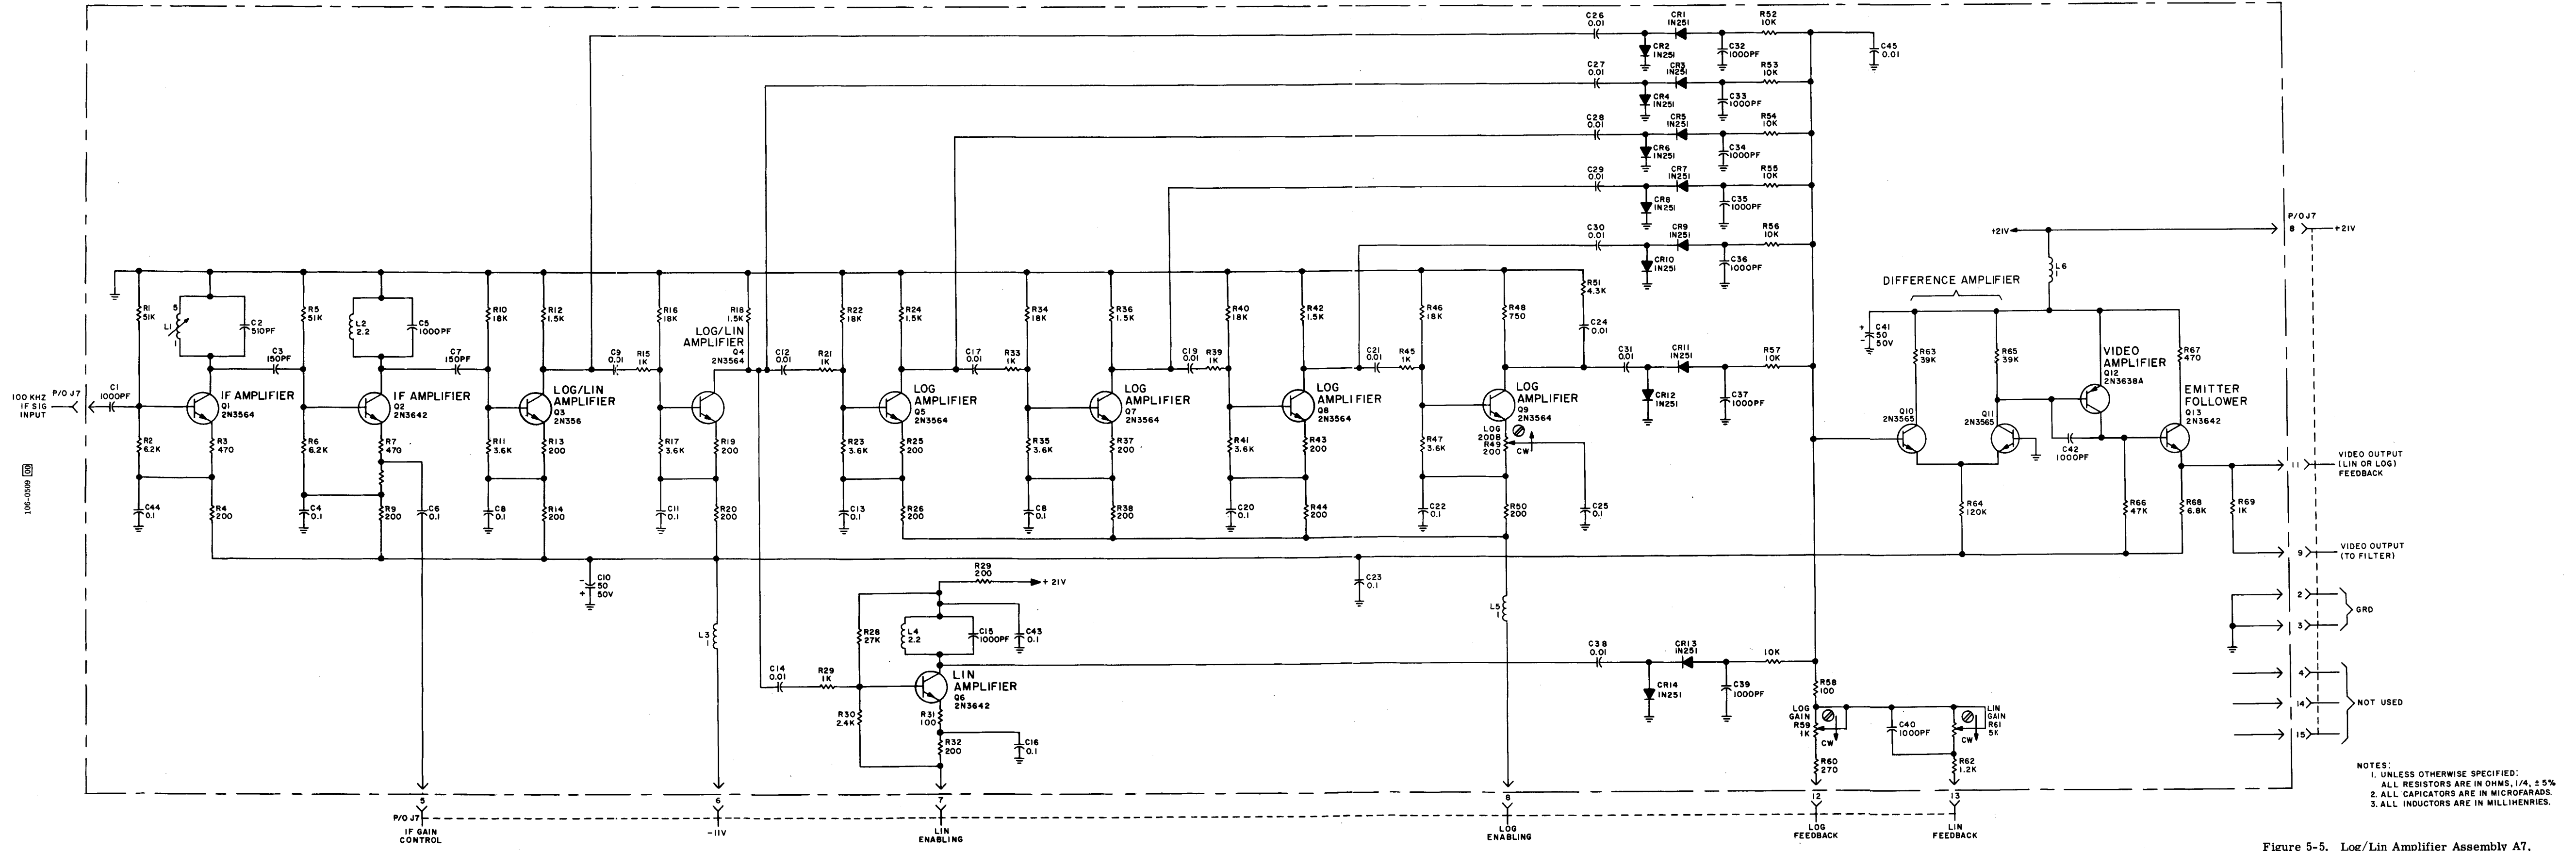

NOTES:  
1. UNLESS OTHERWISE SPECIFIED:  
ALL RESISTORS ARE IN OHMS, 1/4, ± 5%  
2. ALL CAPACITORS ARE IN MICROFARADS.  
3. ALL INDUCTORS ARE IN MILLIHENRIES.

Figure 5-5. Log/Lin Amplifier Assembly A7,  
Schematic Diagram

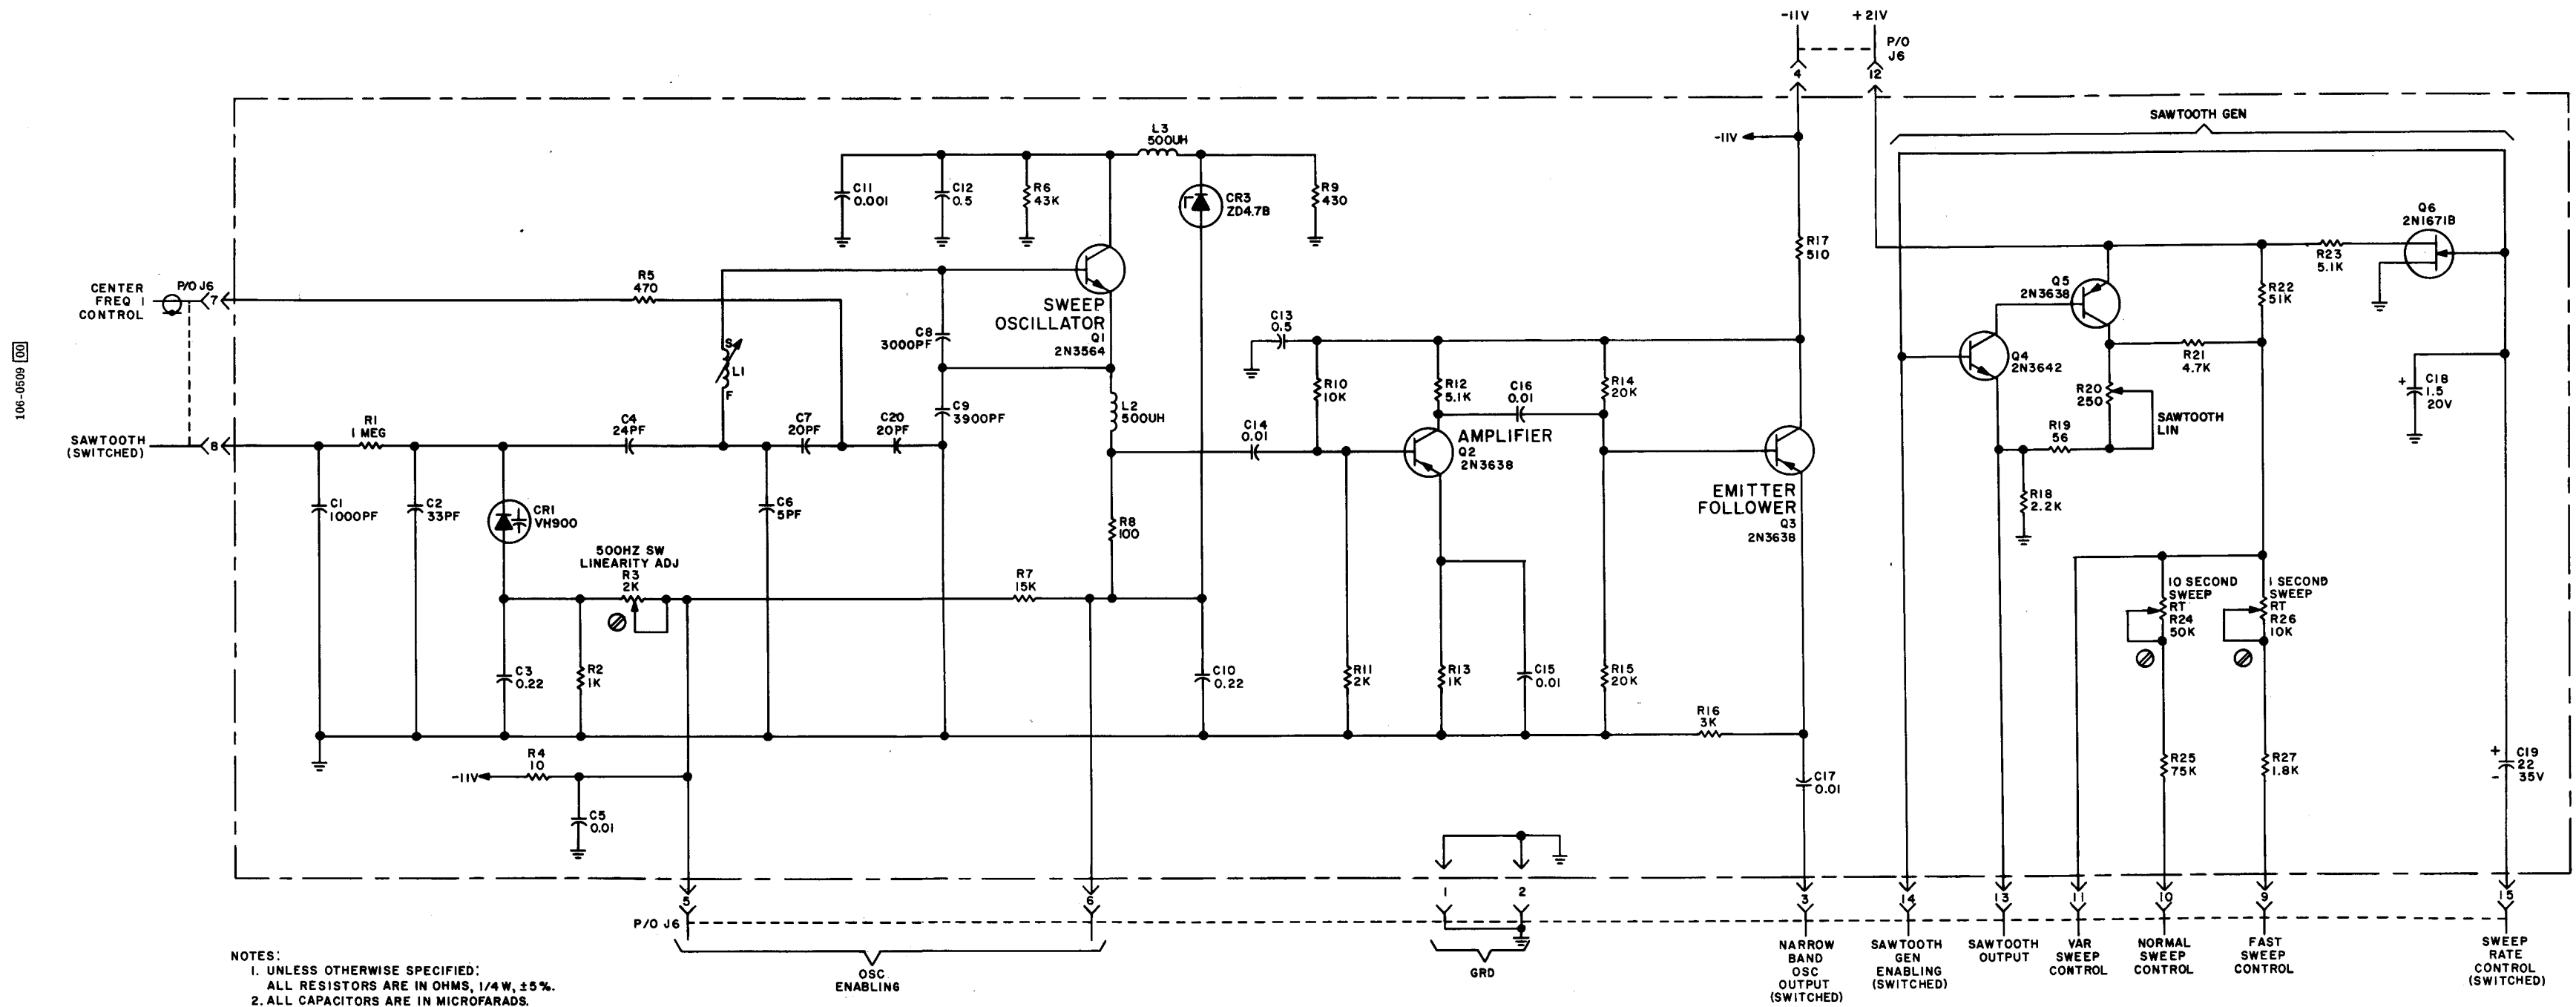


Figure 5-6. Narrow Band Oscillator and Sawtooth Generator Assembly A6, Schematic Diagram

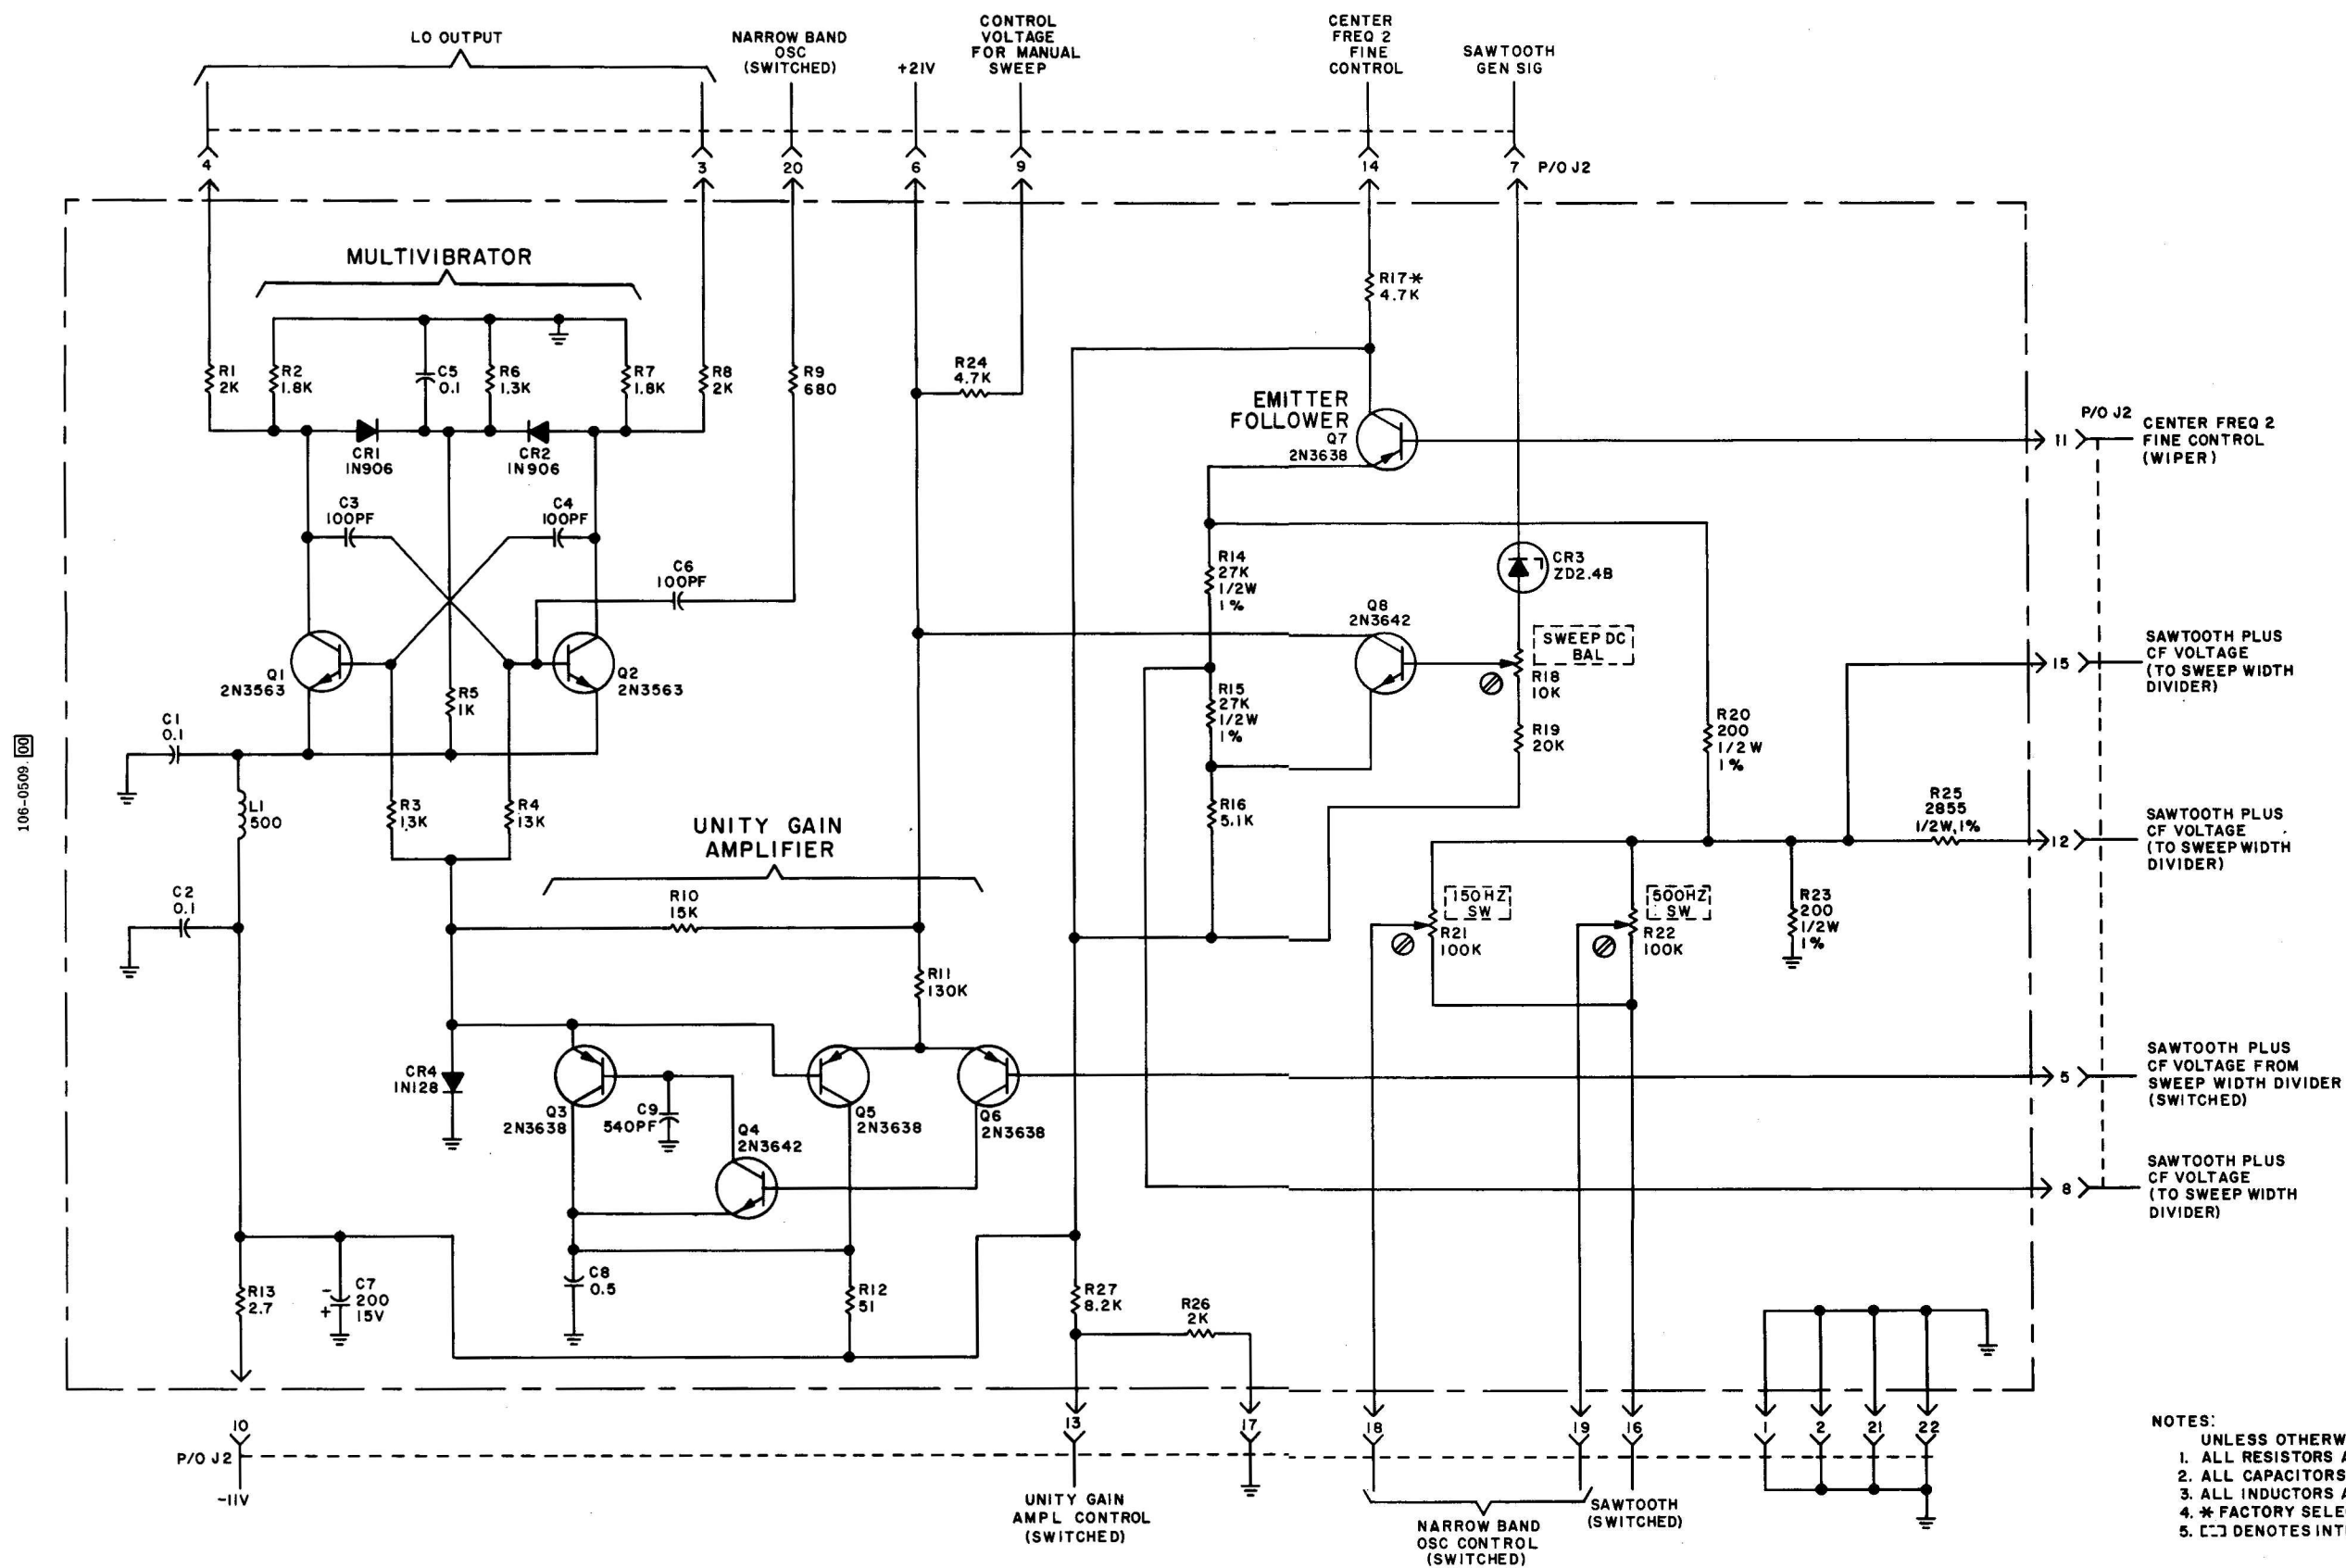


Figure 5-7. Local Oscillator and Control Assembly A2, Schematic Diagram

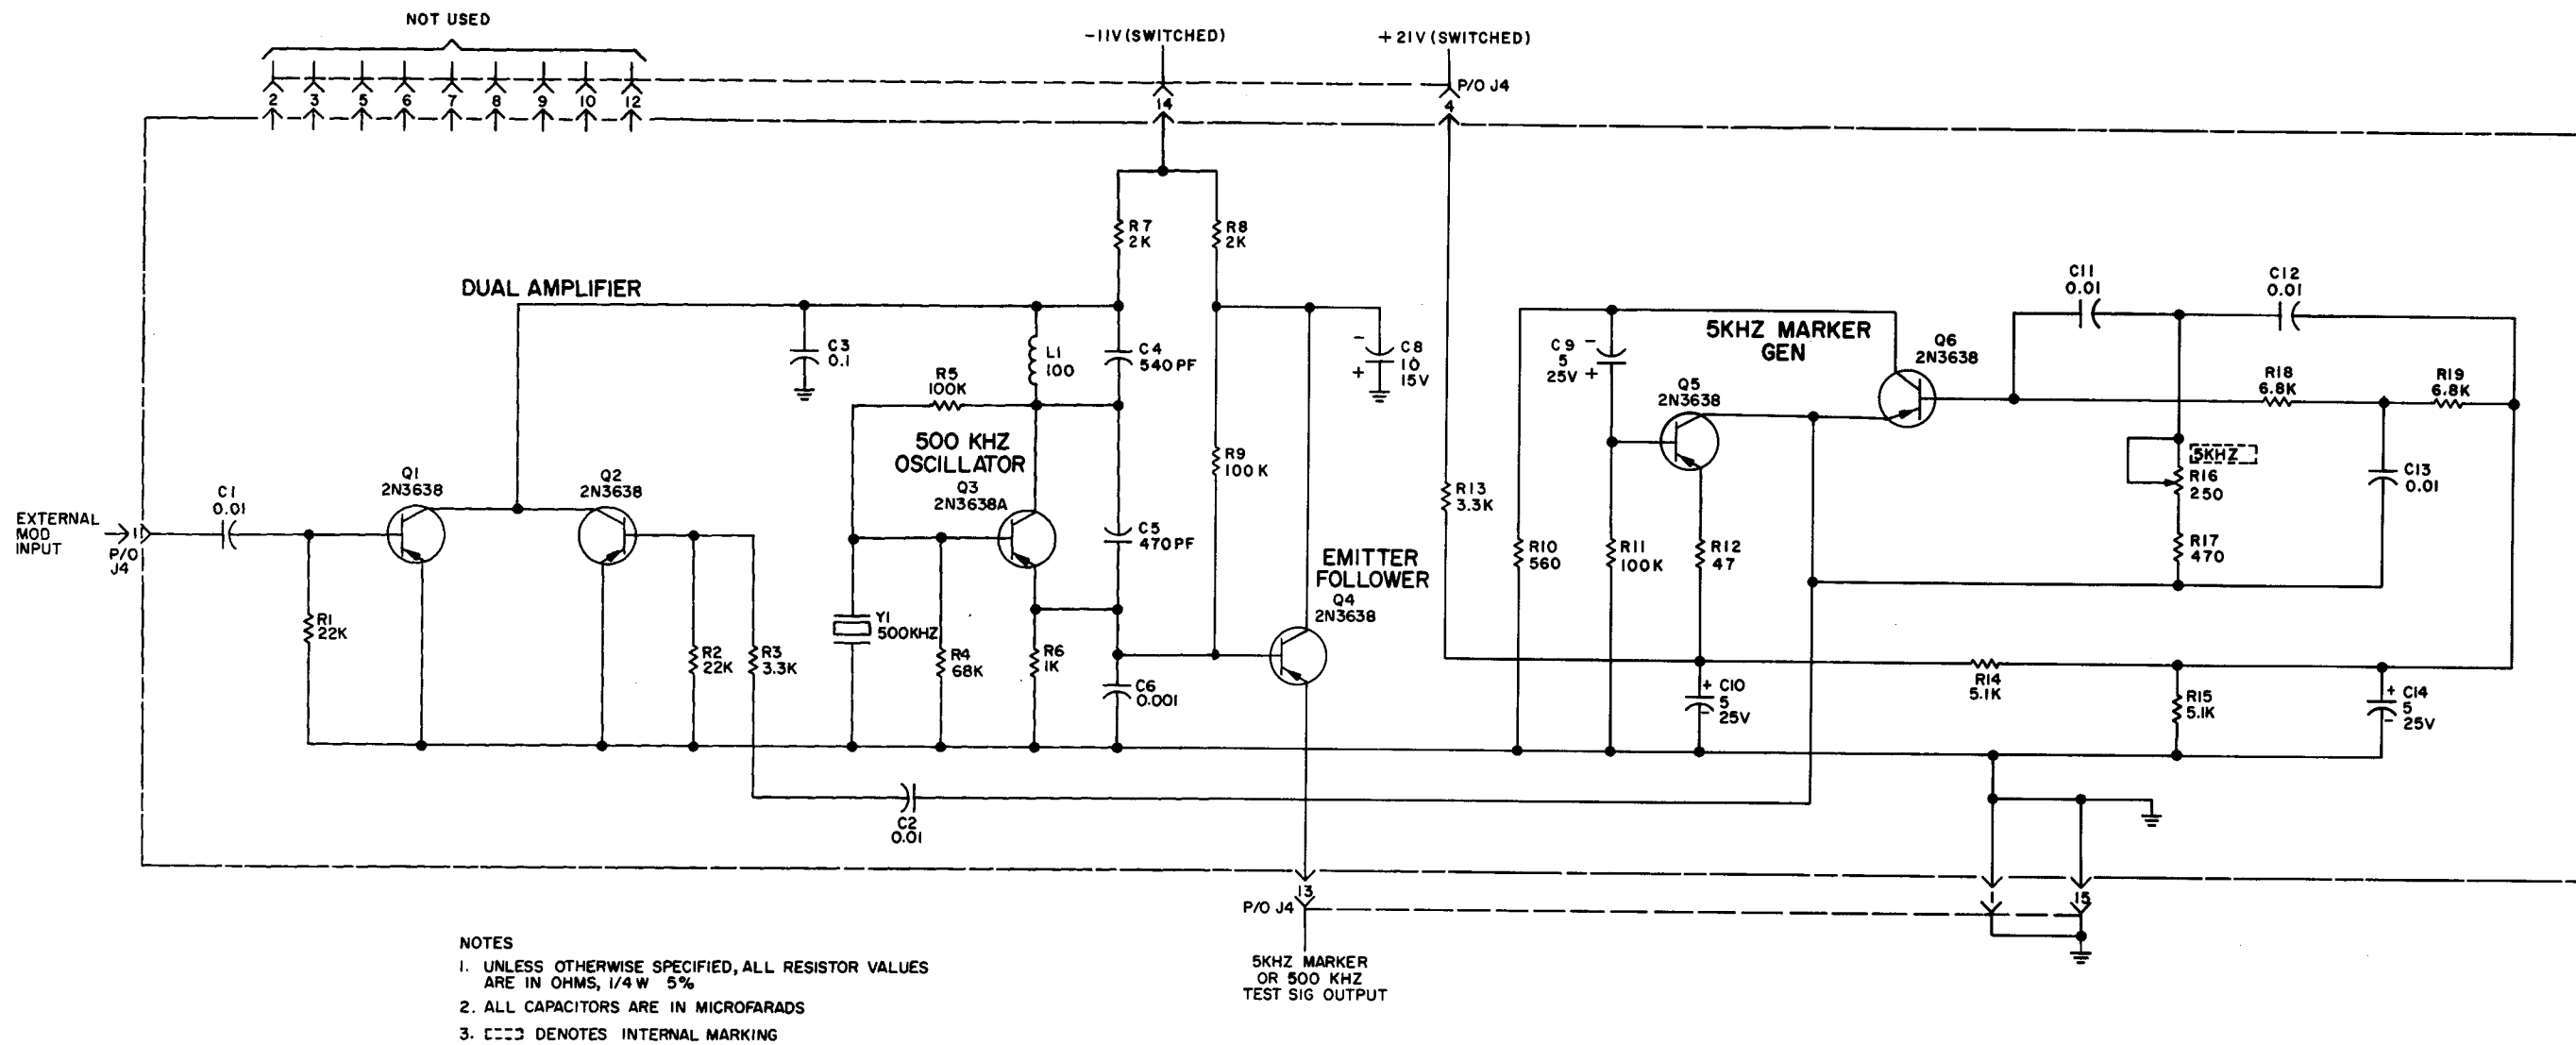


Figure 5-8. Calibration Oscillator and 5-kHz Marker Generator Assembly A4, Schematic Diagram

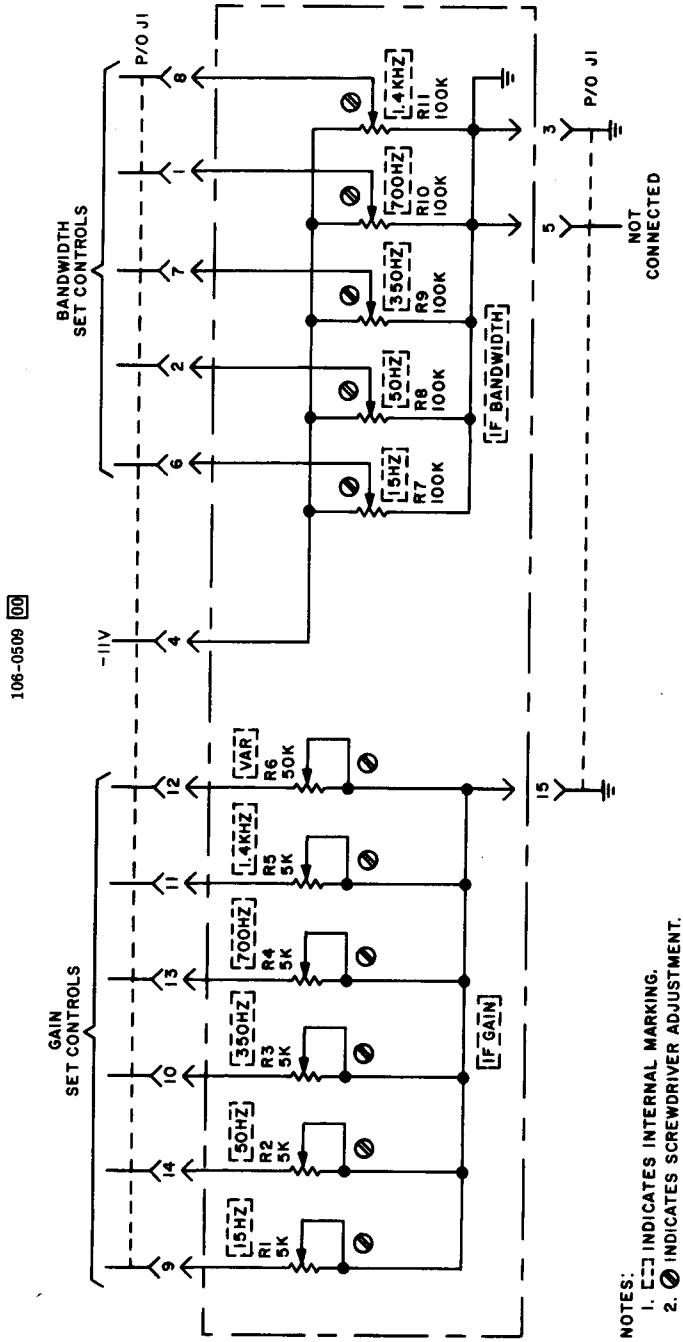


Figure 5-9. Gain and Bandwidth Control, Schematic Diagram

## SECTION VI PARTS LIST

### 6-1. INTRODUCTION.

6-2. This parts list section includes all pertinent data necessary to locate, identify, and procure additional parts for the equipment. Parts are listed alpha-numerically by reference symbol and include all replaceable items such as electronic, electro-mechanical, and mechanical parts of the equipment. In some cases, values, ratings and manufacturer sources shown are nominal and variations may be found. Satisfactory replacement may be made with either the listed component or an exact replacement of the part(s) removed from the equipment.

### 6-3. ORDERING INFORMATION.

6-4. The following instructions will aid in ordering parts from the Parts Lists, table 6-2.

- a. Address all inquiries or orders to:

CUSTOMER SERVICE  
Department 500-1  
The Singer Company  
Metrics Division  
915 Pembroke Street  
Bridgeport, Connecticut 06608

- b. Include the following information:

- 1) Model and Serial Number of instrument.
- 2) Singer Part Number.
- 3) Reference Symbol Number.
- 4) Description (as shown on list).

### 6-5. HOW TO USE THE PARTS LIST.

6-6. Paragraphs 6-7 through 6-11 describe the use and meaning of the five columns included in the parts list (see figure 6-1).

6-7. REF SYMBOL COLUMN. The Ref Symbol Column (1, figure 6-1) contains an alpha-numerical listing of parts as they appear on equipment chassis, illustration, or schematic. The reference designation identifies the parts as to their component function in the instrument.

6-8. DESCRIPTION COLUMN. The Description Column (2, figure 6-1) contains the identification of component parts including all pertinent specifications and Singer part number. When the description column is used for a part which is identical to a part which has already been described; SAME AS (3) is used along with the reference symbol of the previously used part. In these instances, columns 3, 4, 5 are left blank. When the description column is used for a reference symbol for which no part exists; NOT USED (4) is placed in the column. In these instances, columns 3, 4, 5, are left blank.

6-9. MANUFACTURER'S PART NUMBER COLUMN. The Manufacturer's Part Number column (5, figure 6-1) contains the part number as designated by the manufacturer of the part.

6-10. MFR'S CODE COLUMN. The Mfr's Code column (6, figure 6-1) references the manufacturer by an assigned code number as listed in Federal Supply Code Handbook H4-2. For manufacturers not listed in H4-2, a letter code will be assigned. Table 6-1 includes the manufacturer and his code designation.

6-11. MAINT QTY COLUMN. The Maint Qty column (7, figure 6-1) contains the number of additional components recommended to keep the equipment at an optimum performance level. The recommended number of components in the Maint Qty column is based on 2000 hours of equipment operation.



Section VI  
Parts List

SECTION VI  
PARTS LIST

TABLE 6-2. PARTS LIST

| 1                 | 2   | 3 | 4 | 5                             | 6             | 7            |
|-------------------|---|---|---|-------------------------------|---------------|--------------|
| REF SYMBOL        | DESCRIPTION   |   |   | MANUFACTURER'S<br>PART NUMBER | MFR'S<br>CODE | MAINT<br>QTY |
| C109              | CAPACITOR, ELECTROLYTIC, 20uf, MINUS<br>10PCT, PLUS/75PCT, 600V<br>SINGER PART NO. 150-5004-001 |   |   | D40690                        | 56289         | 2            |
| C110 THRU<br>C124 | SAME AS C109  |   |   |                               |               |              |
| C125              | NOT USED  |   |   |                               |               |              |
| DS1               | LAMP, INCANDESCENT<br>SINGER PART NO. 160-6001-004  |   |   | 327                           | 08806         | 2            |
| R1 THRU<br>R14    | RESISTOR, FIXED COMP., 750 ohms, PORM<br>5 PCT, 1/2W SINGER PART NO. 151-1003-751J              |   |   | EB7515                        | 01121         | 1            |

Figure 6-1. Parts List Sample

TABLE 6-1. MANUFACTURER'S CODE

| Number | Name  | Number | Name   |
|--------|---|--------|--|
| 00656  | Aerovox Corp.<br>New Bedford, Mass  | 12060  | Diodes Inc.,<br>Chatsworth, Calif.                           |
| 01002  | General Electric Co.<br>Capacitor Department<br>Hudson Falls, N. Y.                         | 12126  | Kidco Inc., Medford, N. J.                                   |
| 01121  | Allen-Bradley Co<br>Milwaukee, Wis.   | 12697  | Clarostat Mfg. Co., Inc.<br>Dover, N. H.                     |
| 01281  | TRW Semiconductors Inc.<br>Lawndale, Calif.   | 13327  | Solitron Devices Inc.<br>Tappan, N. Y.                       |
| 01295  | Texas Instruments Inc.<br>Semiconductor-Components<br>Division<br>Dallas, Texas             | 16665  | The Singer Co., Metric Div.<br>Bridgeport, Conn.             |
| 02660  | Amphenol-Borg Electronics<br>Corp.<br>Maywood, Ill.   | 43543  | Nytronics Inc.<br>N. Y. Transformer Division<br>Alpha, N. J. |
| 02777  | Hopkins Engineering Co.<br>San Fernando, Calif.   | 56289  | Sprague Electric Co.<br>North Adams, Mass.                   |
| 07263  | Fairchild Camera and<br>Instrument Corp.<br>Semiconductor Division<br>Mountain View, Calif. | 71450  | CTC Corp., Elkhart, Ind.                                     |
|        |   | 71482  | C. P. Clare and Co.<br>Chicago, Ill.                         |
|        |   | 71590  | Centralab Division of<br>Globe-Union Inc.<br>Milwaukee, Wis. |

TABLE 6-1. MANUFACTURER'S CODE (Cont'd)

| Number | Name  | Number | Name   |
|--------|---|--------|--|
| 71753  | Tietzmann Tool Corp.<br>Englewood, Ohio                           | 81349  | Military Specifications  |
| 72136  | Electro-Motive Mfg. Co., Inc.<br>Willimantic, Conn.               | 82142  | Jeffers Electronics Division<br>of Speer Carbon Co.<br>DuBois, Pa. |
| 72982  | Erie Technological Products Inc.<br>Erie, Pa.                     | 82389  | Switchcraft Inc.<br>Chicago, Ill.                                  |
| 73138  | Beckman Instruments Inc.<br>Helipot Division<br>Fullerton, Calif. | 89536  | John Fluke Mfg. Co. Inc.<br>Seattle, Wash.                         |
| 76487  | James Millen Mfg. Co. Inc.<br>Malden, Mass.                       | 91506  | Augat Inc.<br>Attleboro, Mass.                                     |
| 76493  | J. W. Miller Co.<br>Los Angeles, Calif.                           | 95146  | Alco Electronics Mfg. Co.<br>Lawrence, Mass.                       |
| 78488  | Stackpole Carbon Co.<br>St. Marys, Pa.                            | 95354  | Methode Mfg. Co.<br>Chicago, Ill.                                  |
| 80294  | Bourns, Inc.<br>Riverside, Calif.                                 | 99378  | Atlee Corp., Winchester, Mass.                                     |

TABLE 6-2. PARTS LIST

| Ref Symbol | Description   | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|------------|---|----------------------------|------------|-----------|
| C1         | CAPACITOR,ELECTROLYTIC, 30 UF,15V<br>SINGER PART NO. 556074-025                                       | 30D306G015C80              | 56289      | 1         |
| C2         | CAPACITOR,FIXED,METALLIZED, 2 UF,50V<br>SINGER PART NO. 556146-719                                    | 2PP5D                      | 02777      | 1         |
| C3         | CAPACITOR,FIXED,METALLIZED PAPER, 0.1 UF,<br>PORM 20 PCT,200V<br>SINGER PART NO. 556120-120           | P12D                       | 02777      | 1         |
| C4         | CAPACITOR,FIXED,CERAMIC DISC,0.002 UF,PORM<br>10 PCT,500V<br>SINGER PART NO. 150-1002-202KKE          | 871-000R2P0202R            | 72982      | 1         |
| C5         | CAPACITOR,FIXED,DIPPED MICA, 120 PF,PORM<br>5 PCT,500V<br>SINGER PART NO. 150-2002-121EJO             | DM15E121J0500WV4CR         | 72136      | 1         |
| C6         | CAPACITOR,FIXED,ELECTROLYTIC, 10 UF,MINUS 10<br>PCT,PLUS 75 PCT,25V<br>SINGER PART NO. 150-5001-100ES | 40D179A2                   | 56289      | 1         |
| C7         | CAPACITOR,FIXED,ELECTROLYTIC, 5 UF, 50V<br>SINGER PART NO. 556074-169                                 | CE11C050G                  | 56289      | 1         |
| C8         | CAPACITOR,FIXED,DIPPED MICA, 47 PF,PORM<br>5 PCT,500V<br>SINGER PART NO. 150-2002-470EJO              | DM15E470J0500WV4CR         | 72136      | 1         |
| C9<br>C10  | AND CAPACITOR,FIXED,DIPPED MICA, 620 PF,PORM<br>5 PCT,500V SINGER PART NO. 150-2002-621EJO            | DM15E621J0500WV4C9         | 72136      | 1         |
| J1         | CONNECTOR,PRINTED CIRCUIT, 15 CONTACTS<br>SINGER PART NO. 168-3002-005                                | CD-615S                    | 95354      | 1         |
| J2         | CONNECTOR,PRINTED CIRCUIT, 22 CONTACTS<br>SINGER PART NO. 168-3002-007                                | CD-622S                    | 95354      | 1         |
| J3<br>J8   | THRU SAME AS J1   |                            |            |           |
| J9<br>J10  | AND CONNECTOR,JACK, BNC TYPE<br>SINGER PART NO. 168-4006-001  | UG1094/U                   | 81349      | 1         |
| J11        | CONNECTOR,JACK<br>SINGER PART NO. 556146-560  | 57HA3F                     | 82389      | 1         |
| J12        | SAME AS J9  |                            |            |           |
| L1<br>L2   | AND CHOKE,RF 1 MH<br>SINGER PART NO. 556012-196   | J300-1000                  | 76487      | 1         |
| L3<br>L4   | AND CHOKE, 2.2 MH<br>SINGER PART NO. 556146-721   | 73F223AF                   | 76493      | 1         |
| L5         | CHOKE,RF, 220 UH<br>SINGER PART NO. 556012-182  | 70F224A1                   | 76493      | 1         |
| P1         | CONNECTOR,PLUG<br>SINGER PART NO. 556166-045  | 26-159-16                  | 02660      | 1         |
| R1         | RESISTOR,VARIABLE, 10K OHMS,PORM 10 PCT,2W  | 151-0007-066               | 16665      | 1         |
| R2         | RESISTOR,VARIABLE,DUAL CONCENTRIC, 100 OHMS<br>/ 3.5K OHMS,PORM 10 PCT,2W                             | 556146-631                 | 16665      | 1         |

TABLE 6-2. PARTS LIST

| Ref Symbol     | Description   | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|----------------|---|----------------------------|------------|-----------|
| R3             | RESISTOR, FIXED, COMP., 6.2K OHMS, PORM 5 PCT, 1/4W SINGER PART NO. 151-1002-622J | CB6225                     | 01121      | 1         |
| R4             | NON-REPLACEABLE PART OF R2  |                            |            |           |
| R5             | RESISTOR, VARIABLE, 2.5K OHMS, PORM 10 PCT, 2W                                    | 151-0007-064               | 16665      | 1         |
| R6             | RESISTOR, FIXED, COMP., 510 OHMS, PORM 5 PCT, 1/4W SINGER PART NO. 151-1002-511J  | CB5115                     | 01121      | 1         |
| R7             | RESISTOR, VARIABLE, DUAL CONCENTRIC, 100K/100K PORM 10 PCT, 2W                    | 556146-630                 | 16665      | 1         |
| R8             | RESISTOR, FIXED, FILM, 2945 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 556146-647     | TYPE RN60C                 | 81349      | 1         |
| R9             | RESISTOR, FIXED, FILM, 5975 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 556146-646     | TYPE RN60C                 | 81349      | 1         |
| R10            | RESISTOR, VARIABLE, 2K OHMS, PORM PCT SINGER PART NO. 556146-890                  | 20A/2K                     | 89536      | 1         |
| R11            | RESISTOR, VARIABLE, 100K OHMS SINGER PART NO. 556146-722                          | GA2G204P104MA              | 01121      | 1         |
| R12            | SAME AS R6  |                            |            |           |
| R13            | NON-REPLACEABLE PART OF R7  |                            |            |           |
| R14            | RESISTOR, FIXED, COMP., 100K OHMS, PORM 5 PCT, 1/4W SINGER PART NO. 151-1002-104J | CB1045                     | 01121      | 2         |
| R15            | RESISTOR, VARIABLE, 3.5K OHMS SINGER PART NO. 556146-723                          | GA2G204P352MA              | 01121      | 1         |
| S1             | SWITCH, ROTARY, SWEEP WIDTH   | 133-0081-001               | 16665      | 1         |
| S2             | SWITCH, TOGGLE, SPDT<br>SINGER PART NO. <del>556146-724</del> 556147-229          | MST-105E                   | 95146      | 1         |
| S3             | SWITCH, TOGGLE, DPDT<br>SINGER PART NO. <del>133-0069-001</del> 556147-232        | MST-205-N                  | 95146      | 1         |
| S4             | SWITCH, TOGGLE, SPDT<br>SINGER PART NO. <del>556146-725</del> 556147-230          | MST-105D                   | 95146      | 1         |
| S5             | SWITCH, LEVER, SWEEP MODE   | 133-0082-001               | 16665      | 1         |
| S6             | SWITCH, ROTARY, SWEEP RATE  | 133-0080-001               | 16665      | 1         |
| S7             | SWITCH, ROTARY, TEST SIGNAL   | 133-0079-001               | 16665      | 1         |
| A1             | GAIN AND BANDWIDTH CONTROL ASSY   | 103-1597-001               | 16665      | 1         |
| A1R1<br>A1R5   | THRU RESISTOR, VARIABLE, 5K OHMS, PORM 30 PCT, 1/8W                               | 151-0021-005               | 16665      | 1         |
| A1R6           | RESISTOR, VARIABLE, 50K OHMS SINGER PART NO. 556146-633                           | HT-U-201-503               | 71450      | 1         |
| A1R7<br>A1R11  | THRU RESISTOR, VARIABLE, 100K OHMS SINGER PART NO. 556146-632                     | HT-U-201-104               | 71450      | 1         |
| A2             | LOCAL OSC. AND CONTROL ASSY   | 103-1598-001               | 16665      | 1         |
| A2CR1<br>A2CR2 | AND SEMICONDUCTOR DEVICE, DIODE SINGER PART NO. 556118-168                        | IN906                      | 81349      | 1         |

TABLE 6-2. PARTS LIST

| Ref Symbol        | Description   | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|-------------------|---|----------------------------|------------|-----------|
| A2CR3             | SEMICONDUCTOR DEVICE, DIODE<br>SINGER PART NO. 556146-729   | ZD4.7B                     | 12060      | 1         |
| A2CR4             | SEMICONDUCTOR DEVICE, DIODE<br>SINGER PART NO. 556118-045   | IN128                      | 81349      | 1         |
| A2C1 AND<br>A2C2  | CAPACITOR, FIXED, CERAMIC DISC, 0.1 UF, PORM<br>20 PCT, 25V SINGER PART NO. 556120-162                      | 5C7                        | 56289      | 5         |
| A2C3 AND<br>A2C4  | CAPACITOR, FIXED, DIPPED MICA, 100 PF, PORM<br>5 PCT, 500V SINGER PART NO. 150-2002-101EJO                  | DM15E101J0500WV4CR         | 72136      | 1         |
| A2C5              | SAME AS A2C1  |                            |            |           |
| A2C6              | SAME AS A2C3  |                            |            |           |
| A2C7              | CAPACITOR, FIXED, ELECTROLYTIC, 200 UF, MINUS<br>10 PCT, PLUS 75 PCT, 15V<br>SINGER PART NO. 150-5001-201DS | TYPE 40D                   | 56289      | 1         |
| A2C8              | CAPACITOR, FIXED, METALLIZED, 0.5 UF, 50V<br>SINGER PART NO. 556146-720                                     | P5P5D                      | 02777      | 1         |
| A2C9              | CAPACITOR, FIXED, DIPPED MICA, 540 PF, PORM<br>5 PCT, 300V SINGER PART NO. 150-2002-541EJO                  | DM15E541J0300WV4CR         | 72136      | 1         |
| A2L1              | CHOKE, RF 500 UH SINGER PART NO. 556012-022   | J300-500                   | 76487      | 1         |
| A2Q1 AND<br>A2Q2  | TRANSISTOR SINGER PART NO. 556146-251   | 2N3563                     | 81349      | 1         |
| A2Q3              | TRANSISTOR SINGER PART NO. 556146-255   | 2N3638                     | 81349      | 3         |
| A2Q4              | TRANSISTOR SINGER PART NO. 556146-702   | 2N3642                     | 07263      | 3         |
| A2Q5 THRU<br>A2Q7 | SAME AS A2Q3  |                            |            |           |
| A2Q8              | SAME AS A2Q4  |                            |            |           |
| A2R1              | RESISTOR, FIXED, COMP., 2K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-202J                           | CB2025                     | 01121      | 6         |
| A2R2              | RESISTOR, FIXED, COMP., 1.8K OHMS, PORM 5 PCT,<br>1/4W SINGER PART NO. 151-1002-182J                        | CB1825                     | 01121      | 1         |
| A2R3 AND<br>A2R4  | RESISTOR, FIXED, COMP., 13K OHMS, PORM 5 PCT,<br>1/4W SINGER PART NO. 151-1002-133J                         | CB1335                     | 01121      | 1         |
| A2R5              | RESISTOR, FIXED, COMP., 1K OHMS, PORM 5 PCT,<br>1/4W SINGER PART NO. 151-1002-102J                          | CB1025                     | 01121      | 6         |
| A2R6              | RESISTOR, FIXED, COMP., 1.2K OHMS, PORM 5 PCT,<br>1/4W SINGER PART NO. 151-1002-122J                        | CB1225                     | 01121      | 2         |
| A2R7              | SAME AS A2R2  |                            |            |           |
| A2R8              | SAME AS A2R1  |                            |            |           |
| A2R9              | RESISTOR, FIXED, COMP., 680 OHMS, PORM 5 PCT,<br>1/4W SINGER PART NO. 151-1002-681J                         | CB6815                     | 01121      | 1         |
| A2R10             | RESISTOR, FIXED, COMP., 15K OHMS, PORM 5 PCT,<br>1/4W SINGER PART NO. 151-1002-153J                         | CB1535                     | 01121      | 1         |
| A2R11             | RESISTOR, FIXED, COMP., 130K OHMS, PORM 5 PCT,<br>1/4W SINGER PART NO. 151-1002-134J                        | CB1345                     | 01121      | 1         |

Section VI  
Parts List

TABLE 6-2. PARTS LIST

| Ref Symbol       | Description   | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|------------------|---|----------------------------|------------|-----------|
| A2R12            | RESISTOR, FIXED, COMP., 51 OHMS, PORM 5 PCT, 1/4W SINGER PART NO. 151-1002-510J                 | CB5105                     | 01121      | 1         |
| A2R13            | RESISTOR, FIXED, COMP., 2.7 OHMS, PORM 5 PCT, 1/4W SINGER PART NO. 151-1002-2R7J                | CB2R75                     | 01121      | 1         |
| A2R14 AND A2R15  | RESISTOR, FIXED, PREC., 27K OHMS, PORM 1 PCT, 1/2W SINGER PART NO. 556029-461                   |                            |            |           |
| A2R16            | RESISTOR, FIXED, COMP., 5.1K OHMS, PORM 5 PCT 1/4W SINGER PART NO. 151-1002-512J                | CB5125                     | 01121      | 2         |
| A2R17            | RESISTOR, FIXED, COMP., 4.3K OHMS, PORM 5 PCT 1/4W SINGER PART NO. 151-1002-432J                | CB4325                     | 01121      | 1         |
| A2R18            | RESISTOR, VARIABLE, 10 K OHMS SINGER PART NO. 556056-125  | X201R1038                  | 71450      | 1         |
| A2R19            | RESISTOR, FIXED, COMP., 20K OHMS, PORM 5 PCT 1/4W SINGER PART NO. 151-1002-203J                 | CB2035                     | 01121      | 1         |
| A2R20            | RESISTOR, FIXED, PREC., 200 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B2000F              | C1/8E2000HMS PORM 1 PCT    | 12126      | 1         |
| A2R21 AND A2R22  | RESISTOR, VARIABLE, 100K OHMS SINGER PART NO. 556056-128  | X201R1048                  | 71450      | 1         |
| A2R23            | SAME AS A2R20   |                            |            |           |
| A2R24            | RESISTOR, FIXED, COMP., 4.7K OHMS, PORM 5 PCT 1/4W SINGER PART NO. 151-1002-472J                | CB4725                     | 01121      | 1         |
| A2R25            | RESISTOR, FIXED, FILM, 2855 OHMS, PORM 1 PCT, 1/2W SINGER PART NO. 556146-732                   | TYPE RN65D                 | 81349      | 1         |
| A2R26            | SAME AS A2R1  |                            |            |           |
| A2R27            | RESISTOR, FIXED, COMP., 8.2K OHMS, PORM 5 PCT 1/4W SINGER PART NO. 151-1002-822J                | CB8225                     | 01121      | 1         |
| A3               | TWO-TONE GENERATOR AND SECOND MIXER   | 103-1599-001               | 16665      | 1         |
| A3CR1 THRU A3CR4 | SEMICONDUCTOR DEVICE, DIODE SINGER PART NO. 556146-880  | FDH666                     | 07263      | 1         |
| A3C1             | SAME AS A2C8  |                            |            |           |
| A3C2 AND A3C3    | CAPACITOR, FIXED, CERAMIC, DISC, 0.01 UF, PLUS 80 MINUS 20 PCT, 100V SINGER PART NO. 556060-084 | 805-000X5V0103Z            | 72982      | 5         |
| A3C4             | CAPACITOR, FIXED, CERAMIC DISC, 0.022 UF, PLUS 80 MINUS 20 PCT, 25V SINGER PART NO. 556060-105  | C0698250G223Z              | 56289      | 1         |
| A3C5             | SAME AS C3  |                            |            |           |
| A3C6 AND A3C7    | CAPACITOR, FIXED, DIPPED MICA, 200 PF, PORM 5 PCT, 500V SINGER PART NO. 150-2002-201EJO         | DM15E201J0500WV4CR         | 72136      | 1         |
| A3Q1 AND A3Q2    | SAME AS A2Q3  |                            |            |           |
| A3Q3 AND A3Q4    | TRANSISTOR SINGER PART NO. 556146-401   | 2N3638A                    | 81349      | 1         |
| A3R1             | RESISTOR, FIXED, COMP., 39 OHMS, PORM 5 PCT 1/4W SINGER PART NO. 151-1002-390J                  | CB3905                     | 01121      | 1         |

TABLE 6-2. PARTS LIST

| Ref Symbol     | Description   | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|----------------|---|----------------------------|------------|-----------|
| A3R2           | SAME AS A2R9  |                            |            |           |
| A3R3<br>A3R4   | AND RESISTOR, FIXED, COMP., 100 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-101J      | CB1015                     | 01121      | 1         |
| A3R5<br>A3R8   | THRU SAME AS A2R5   |                            |            |           |
| A3R9           | SAME AS A2R1  |                            |            |           |
| A3R10          | RESISTOR, FIXED, COMP., 3K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-302J           | CB3025                     | 01121      | 2         |
| A3R11          | RESISTOR, FIXED, COMP., 3.6K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-362J         | CB3625                     | 01121      | 3         |
| A3R12          | RESISTOR, FIXED, COMP., 2.2K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-222J         | CB2225                     | 01121      | 1         |
| A3R13          | RESISTOR, FIXED, COMP., 12K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-123J          | CB1235                     | 01121      | 2         |
| A3R14          | RESISTOR, FIXED, COMP., 330K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-334J         | CB3345                     | 01121      | 1         |
| A3R15          | RESISTOR, VARIABLE, 5K, OHMS, PORM 30 PCT, 1/8W<br>SINGER PART NO. 556146-541               | X201R502B                  | 71450      | 1         |
| A3R16          | SAME AS A3R13   |                            |            |           |
| A3R17          | SAME AS A3R14   |                            |            |           |
| A3R18          | SAME AS A3R11   |                            |            |           |
| A3R19          | SAME AS A3R12   |                            |            |           |
| A3T1           | TRANSFORMER, MIXER INPUT  | 132-0045-001               | 16665      | 1         |
| A3T2           | TRANSFORMER, MIXER OUTPUT   | 132-0044-001               | 16665      | 1         |
| A3Y1           | CRYSTAL, 3000 KHZ   | 556025-018                 | 16665      | 1         |
| A3Y2           | CRYSTAL, 3002 KHZ   | 556025-019                 | 16665      | 1         |
| A3XY1<br>A3XY2 | AND SOCKET, CRYSTAL SINGER PART NO. 556024-164  | 8000-AG-4                  | 91506      | 1         |
| A4             | CAL. OSCILLATOR AND 5KHZ MARKER ASSY<br>CIRCUIT BOARD                                       | 103-1600-001               | 16665      | 1         |
| A4C1<br>A4C2   | AND SAME AS A3C2  |                            |            |           |
| A4C3           | SAME AS C3  |                            |            |           |
| A4C4           | SAME AS A2C9  |                            |            |           |
| A4C5           | CAPACITOR, FIXED, DIPPED MICA, 470 PF, PORM<br>5 PCT, 500V SINGER PART NO. 150-2002-471EJO  | DM15E471J0500WV4CR         | 72136      | 1         |
| A4C6           | CAPACITOR, FIXED, DIPPED MICA, 1000 PF, PORM<br>5 PCT, 100V SINGER PART NO. 150-2002-102EJO | DM15E102J0100WV4CR         | 72136      | 2         |
| A4C7           | SAME AS A3C2  |                            |            |           |

TABLE 6-2. PARTS LIST

| Ref Symbol     | Description   | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|----------------|---|----------------------------|------------|-----------|
| A4C8           | CAPACITOR, FIXED, ELECTROLYTIC, 10 UF, PLUS 100 MINUS 10 PCT, 15V<br>SINGER PART NO. 556146-642   | CRE457A                    | 00656      | 1         |
| A4C9<br>A4C10  | AND CAPACITOR, FIXED, ELECTROLYTIC, 5 UF, 25V<br>SINGER PART NO. 556166-119                       | TE1202                     | 56289      | 1         |
| A4C11<br>A4C13 | THRU CAPACITOR, FIXED, DIPPED MICA, 10000 PF, PORM 5 PCT, 500V<br>SINGER PART NO. 150-2004-103FJO | DM30F103J0500WV4CR         | 72136      | 1         |
| A4C14          | SAME AS A4C9  |                            |            |           |
| A4L1           | CHOKER, RF 100 UH SINGER PART NO. 556012-191  | 1326-7                     | 82142      | 1         |
| A4Q1<br>A4Q2   | AND SAME AS A2Q3  |                            |            |           |
| A4Q3           | SAME AS A3Q3  |                            |            |           |
| A4Q4<br>A4Q6   | THRU SAME AS A2Q3   |                            |            |           |
| A4R1<br>A4R2   | AND RESISTOR, FIXED, COMP., 22K OHMS, PORM 5 PCT 1/4W<br>SINGER PART NO. 151-1002-223J            | CB2235                     | 01121      | 2         |
| A4R3           | RESISTOR, FIXED, COMP., 3.3K OHMS, PORM 5 PCT 1/4W<br>SINGER PART NO. 151-1002-332J               | CB3325                     | 01121      | 1         |
| A4R4           | RESISTOR, FIXED, COMP., 68K OHMS, PORM 5 PCT 1/4W<br>SINGER PART NO. 151-1002-683J                | CB6835                     | 01121      | 1         |
| A4R5           | SAME AS R14   |                            |            |           |
| A4R6           | SAME AS A2R5  |                            |            |           |
| A4R7<br>A4R8   | AND SAME AS A2R1  |                            |            |           |
| A4R9           | SAME AS R14   |                            |            |           |
| A4R10          | RESISTOR, FIXED, COMP., 560 OHMS, PORM 5 PCT 1/4W<br>SINGER PART NO. 151-1002-561J                | CB5615                     | 01121      | 1         |
| A4R11          | SAME AS R14   |                            |            |           |
| A4R12          | RESISTOR, FIXED, COMP., 47 OHMS, PORM 5 PCT 1/4W<br>SINGER PART NO. 151-1002-470J                 | CB4705                     | 01121      | 1         |
| A4R13          | SAME AS A4R3  |                            |            |           |
| A4R14<br>A4R15 | AND RESISTOR, FIXED, COMP., 5.1K OHMS, PORM 5 PCT 1/4W<br>SINGER PART NO. 151-1002-512J           | CB5125                     | 01121      | 1         |
| A4R16          | RESISTOR, VARIABLE 250 OHMS<br>SINGER PART NO. 556146-649   | X201R2510                  | 71450      | 1         |
| A4R17          | RESISTOR, FIXED, COMP., 470 OHMS, PORM 5 PCT 1/4W<br>SINGER PART NO. 151-1002-471J                | CB4715                     | 01121      | 2         |
| A4R18<br>A4R19 | AND RESISTOR, FIXED, COMP., 6.8K OHMS, PORM 5 PCT 1/4W<br>SINGER PART NO. 151-1002-682J           | CB6825                     | 01121      | 1         |
| A4Y1           | CRYSTAL, 500 KHZ  | 556025-020                 | 16665      | 1         |
| A4XY1          | SAME AS A3XY1   |                            |            |           |



TABLE 6-2. PARTS LIST

| Ref Symbol   | Description   | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|--------------|---|----------------------------|------------|-----------|
| A5           | 500KHZ AMPLIFIER ASSY   | 103-1601-001               | 16665      | 1         |
| A5C1<br>A5C4 | THRU SAME AS A3C2   |                            |            |           |
| A5C5         | SAME AS A2C1  |                            |            |           |
| A5C6         | CAPACITOR, FIXED, ELECTROLYTIC, 50 UF, 25V<br>SINGER PART NO. 556075-009                  | 40D184A2                   | 56289      | 1         |
| A5C7         | CAPACITOR, FIXED, DIPPED MICA, 62 PF, PORM<br>5 PCT, 500V SINGER PART NO. 150-2002-620EJO | DM15E620J0500WV4CR         | 72136      | 1         |
| A5C8         | CAPACITOR, FIXED, COMP., 1.5 PF, PORM 5 PCT,<br>500V SINGER PART NO. 150-4001-1R5J        | TYPE GA /1.5PF             | 78488      | 1         |
| A5C9         | SAME AS A5C7  |                            |            |           |
| A5FL1        | 500KHZ BANDPASS FILTER  | 132-0047-001               | 16665      | 1         |
| A5L1         | CHOKE, RF, MOLDED, 2000 UH<br>SINGER PART NO. 156-7001-007                                | 1312-26J                   | 82142      | 1         |
| A5L2         | SAME AS A2L1  |                            |            |           |
| A5Q1         | SAME AS A2Q3  |                            |            |           |
| A5Q2         | TRANSISTOR SINGER PART NO. 556146-254   | 2N3565                     | 81349      | 1         |
| A5Q3<br>A5Q4 | AND SAME AS A2Q4  |                            |            |           |
| A5R1         | SAME AS A2R16   |                            |            |           |
| A5R2         | RESISTOR, FIXED, COMP., 33K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-333J        | CB3335                     | 01121      | 2         |
| A5R3         | SAME AS A2R1  |                            |            |           |
| A5R4         | RESISTOR, FIXED, COMP., 43K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-433J        | CB4335                     | 01121      | 1         |
| A5R5         | SAME AS A2R27   |                            |            |           |
| A5R6         | SAME AS R3  |                            |            |           |
| A5R7         | RESISTOR, FIXED, COMP., 3.9K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-392J       | CB3925                     | 01121      | 1         |
| A5R8         | RESISTOR, FIXED, COMP., 120 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-121J        | CB1215                     | 01121      | 1         |
| A5R9         | SAME AS A2R16   |                            |            |           |
| A5R10        | SAME AS A2R1  |                            |            |           |
| A5R11        | SAME AS A5R2  |                            |            |           |
| A5R12        | RESISTOR, FIXED, COMP., 1.2K OHMS, PORM 5 PCT,<br>1/4W SINGER PART NO. 151-1002-122J      | CB1225                     | 01121      | 1         |
| A5R13        | SAME AS A3R10   |                            |            |           |
| A5R14        | SAME AS A2R18   |                            |            |           |
| A5R15        | SAME AS A2R1  |                            |            |           |

Section VI  
Parts List

TABLE 6-2. PARTS LIST

| Ref Symbol       | Description   | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|------------------|---|----------------------------|------------|-----------|
| A5R16            | RESISTOR, FIXED, COMP., 1.2K OHMS, PORM 5 PCT, 1/4W SINGER PART NO. 151-1002-122J       | CB1225                     | 01121      | 1         |
| A5R17            | RESISTOR, FIXED, COMP., 82K OHMS, PORM 5 PCT 1/4W SINGER PART NO. 151-1002-823J         | CB8235                     | 01121      | 1         |
| A5R18            | RESISTOR, VARIABLE, 50K SINGER PART NO. 556146-776                                      | PAR-50K                    | 73138      | 1         |
| A5R19            | SAME AS A2R21   |                            |            |           |
| A5R20            | SAME AS A2R5  |                            |            |           |
| A6               | OSCILLATOR AND SAWTOOTH GENERATOR ASSY  | 103-1602-001               | 16665      | 1         |
| A6CR1            | CAPACITOR, VARIABLE SINGER PART NO. 556146-730  | VH900                      | 13327      | 1         |
| A6CR3            | SAME AS A2CR3   |                            |            |           |
| A6C1             | CAPACITOR, FIXED, CERAMIC DISC, 0.001 UF, PORM 10 PCT, 1000V SINGER PART NO. 556060-046 | DD102                      | 71590      | 1         |
| A6C2             | CAPACITOR, FIXED, DIPPED MICA, 33 PF, PORM 5 PCT, 500V SINGER PART NO. 150-2002-330EJO  | DM15E330J0500WV4CR         | 72136      | 1         |
| A6C3             | CAPACITOR, FIXED, METALLIZED PAPER, 0.22 UF, 50V SINGER PART NO. 556146-641             | P22P5D                     | 02777      | 1         |
| A6C4             | CAPACITOR, FIXED, DIPPED MICA, 24 PF, PORM 5 PCT, 500V SINGER PART NO. 150-2002-240EJO  | DM15E240J0500WV4CR         | 72136      | 1         |
| A6C5             | SAME AS A3C2  |                            |            |           |
| A6C6             | CAPACITOR, FIXED, DIPPED MICA, 5 PF, PORM .5 PF 500V SINGER PART NO. 150-2002-5ROCD0    | DM15C5ROD0500WV4CR         | 72136      | 1         |
| A6C7             | CAPACITOR, FIXED, DIPPED MICA, 20 PF, PORM 5 PCT, 500V SINGER PART NO. 150-2002-200CJO  | DM15C200J0500WV4CR         | 72136      | 1         |
| A6C8 AND A6C9    | CAPACITOR, FIXED, DIPPED MICA, 3000PF, PORM 5 PCT, 100V SINGER PART NO. 150-2002-302FJO | DM15F302J0100WV4CR         | 72136      | 1         |
| A6C10            | SAME AS A6C3  |                            |            |           |
| A6C11            | SAME AS A6C1  |                            |            |           |
| A6C12 AND A6C13  | SAME AS A2C8  |                            |            |           |
| A6C14 THRU A6C17 | SAME AS A3C2  |                            |            |           |
| A6C18            | CAPACITOR, FIXED, TANTALUM, 1.5 UF, 20V SINGER PART NO. 556146-643                      | SCM155FP02A2               | 01295      | 1         |
| A6C19            | CAPACITOR, FIXED, TANTALUM, 22 UF, 35V SINGER PART NO. 556146-644                       | SCM226GPO-35C2             | 01295      | 1         |
| A6C20            | SAME AS A6C7  |                            |            |           |
| A6L1             | COIL, VARIABLE, 1500UH SINGER PART NO. 556146-889                                       | VIV-1500                   | 43543      | 1         |
| A6L2 AND A6L3    | SAME AS A2L1  |                            |            |           |

TABLE 6-2. PARTS LIST

| Ref Symbol         | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|--------------------|--|----------------------------|------------|-----------|
| A6Q1               | TRANSISTOR SINGER PART NO. 556146-726  | 2N3564                     | 81349      | 1         |
| A6Q2 AND<br>A6Q3   | SAME AS A2Q3   |                            |            |           |
| A6Q4               | SAME AS A2Q4   |                            |            |           |
| A6Q5               | SAME AS A2Q3   |                            |            |           |
| A6Q6               | TRANSISTOR SINGER PART NO. 556146-261  | 2N1671B                    | 81349      | 1         |
| A6R1               | RESISTOR, FIXED, COMP., 1MEGOHM PORM 5 PCT,<br>1/4W SINGER PART NO. 151-1002-105J  | CB1055                     | 01121      | 1         |
| A6R2               | SAME AS A2R5   |                            |            |           |
| A6R3               | RESISTOR, VARIABLE, 2K OHMS<br>SINGER PART NO. 556146-734                          | 62PAR2K                    | 73138      | 1         |
| A6R4               | RESISTOR, FIXED, COMP., 10 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-100J  | CB1005                     | 01121      | 1         |
| A6R5               | SAME AS A4R17  |                            |            |           |
| A6R6               | SAME AS A5R4   |                            |            |           |
| A6R7               | SAME AS A2R10  |                            |            |           |
| A6R8               | SAME AS A3R3   |                            |            |           |
| A6R9               | RESISTOR, FIXED, COMP., 430 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-431J | CB4315                     | 01121      | 1         |
| A6R10              | RESISTOR, FIXED, COMP., 10K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-103J | CB1035                     | 01121      | 6         |
| A6R11              | SAME AS A2R1   |                            |            |           |
| A6R12              | SAME AS A2R16  |                            |            |           |
| A6R13              | SAME AS A2R5   |                            |            |           |
| A6R14 AND<br>A6R15 | SAME AS A2R19  |                            |            |           |
| A6R16              | SAME AS A3R10  |                            |            |           |
| A6R17              | SAME AS R6   |                            |            |           |
| A6R18              | SAME AS A3R12  |                            |            |           |
| A6R19              | RESISTOR, FIXED, COMP., 56 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-560J  | CB5605                     | 01121      | 1         |
| A6R20              | SAME AS A4R16  |                            |            |           |
| A6R21              | SAME AS A2R17  |                            |            |           |
| A6R22              | RESISTOR, FIXED, COMP., 51K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-513J | CB5135                     | 01121      | 2         |
| A6R23              | SAME AS A2R16  |                            |            |           |
| A6R24              | RESISTOR, VARIABLE, 50K OHMS<br>SINGER PART NO. 556056-129                         | X201R503B                  | 71450      | 1         |

TABLE 6-2. PARTS LIST

| Ref Symbol           | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|----------------------|--|----------------------------|------------|-----------|
| A6R25                | RESISTOR, FIXED, COMP., 75K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-753J         | CB7535                     | 01121      | 1         |
| A6R26                | SAME AS A2R18  |                            |            |           |
| A6R27                | SAME AS A2R2   |                            |            |           |
| A7                   | LOG/LIN I-F AMPLIFIER ASSY   | 103-1603-001               | 16665      | 1         |
| A7CR1 THRU<br>A7CR14 | SEMICONDUCTOR DEVICE, DIODE<br>SINGER PART NO. 556118-046                                  | IN251                      | 81349      | 1         |
| A7C1                 | SAME AS A6C1   |                            |            |           |
| A7C2                 | CAPACITOR, FIXED, DIPPED MICA, 510PF, PORM 5<br>PCT, 500V SINGER PART NO. 150-2002-511EJO  | DM15E511J0500WV4CR         | 72136      | 1         |
| A7C3                 | CAPACITOR, FIXED, DIPPED MICA, 150 PF, PORM<br>5 PCT, 500V SINGER PART NO. 150-2002-151EJO | DM15E151J0500WV4CR         | 72136      | 1         |
| A7C4                 | SAME AS A2C1   |                            |            |           |
| A7C5                 | SAME AS A4C6   |                            |            |           |
| A7C6                 | SAME AS A2C1   |                            |            |           |
| A7C7                 | SAME AS A7C7   |                            |            |           |
| A7C8                 | SAME AS A2C1   |                            |            |           |
| A7C9                 | SAME AS A3C2   |                            |            |           |
| A7C10                | CAPACITOR, FIXED, ELECTROLYTIC, 50 UF, 50V<br>SINGER PART NO. 556073-004                   | TE1307                     | 56289      | 1         |
| A7C11                | SAME AS A2C1   |                            |            |           |
| A7C12                | SAME AS A3C2   |                            |            |           |
| A7C13                | SAME AS A2C1   |                            |            |           |
| A7C14                | SAME AS A3C2   |                            |            |           |
| A7C15                | SAME AS A4C6   |                            |            |           |
| A7C16                | SAME AS A2C1   |                            |            |           |
| A7C17                | SAME AS A3C2   |                            |            |           |
| A7C18                | SAME AS A2C1   |                            |            |           |
| A7C19                | SAME AS A3C2   |                            |            |           |
| A7C20                | SAME AS A7C10  |                            |            |           |
| A7C21                | SAME AS A3C2   |                            |            |           |
| A7C22 AND<br>A7C23   | SAME AS A2C1   |                            |            |           |
| A7C24                | SAME AS A3C2   |                            |            |           |
| A7C25                | SAME AS A2C1   |                            |            |           |
| A7C26 THRU<br>A7C31  | SAME AS A3C2   |                            |            |           |

TABLE 6-2. PARTS LIST

| Ref Symbol     | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|----------------|--|----------------------------|------------|-----------|
| A7C32<br>A7C37 | THRU SAME AS A6C1  |                            |            |           |
| A7C38          | SAME AS A3C2   |                            |            |           |
| A7C39          | SAME AS A6C1   |                            |            |           |
| A7C40          | SAME AS A4C6   |                            |            |           |
| A7C41          | SAME AS A7C10  |                            |            |           |
| A7C42          | SAME AS A4C6   |                            |            |           |
| A7C43<br>A7C44 | AND SAME AS A2C1   |                            |            |           |
| A7C45          | SAME AS A3C2   |                            |            |           |
| A7L1           | CHOKE,VARIABLE   | 132-0214-001               | 16665      | 1         |
| A7L2           | CHOKE,RF SINGER PART NO. 556012-173  | 70F223A1                   | 76493      | 1         |
| A7L3           | SAME AS L1   |                            |            |           |
| A7L4           | SAME AS A7L2   |                            |            |           |
| A7L5<br>A7L6   | AND SAME AS L1   |                            |            |           |
| A7Q1           | SAME AS A6Q1   |                            |            |           |
| A7Q2           | SAME AS A2Q4   |                            |            |           |
| A7Q3<br>A7Q5   | THRU SAME AS A6Q1  |                            |            |           |
| A7Q6           | SAME AS A2Q4   |                            |            |           |
| A7Q7<br>A7Q9   | THRU SAME AS A6Q1  |                            |            |           |
| A7Q10<br>A7Q11 | AND SAME AS A5Q2   |                            |            |           |
| A7Q12          | SAME AS A3Q3   |                            |            |           |
| A7Q13          | SAME AS A2Q4   |                            |            |           |
| A7R1           | SAME AS A6R22  |                            |            |           |
| A7R2           | SAME AS R3   |                            |            |           |
| A7R3           | SAME AS A4R17  |                            |            |           |
| A7R4           | RESISTOR, FIXED, COMP., 200 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-201J | CB2015                     | 01121      | 6         |
| A7R5           | SAME AS A6R22  |                            |            |           |
| A7R6           | SAME AS R3   |                            |            |           |
| A7R7           | SAME AS A4R17  |                            |            |           |
| A7R8           | SAME AS A3R10  |                            |            |           |
| A7R9           | SAME AS A7R4   |                            |            |           |

TABLE 6-2. PARTS LIST

| Ref Symbol          | Description   | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|---------------------|---|----------------------------|------------|-----------|
| A7R10               | RESISTOR, FIXED, COMP., 18K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-183J  | CB1835                     | 01121      | 1         |
| A7R11               | SAME AS A3R11   |                            |            |           |
| A7R12               | RESISTOR, FIXED, COMP., 1.5K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-152J | CB1525                     | 01121      | 2         |
| A7R13 AND<br>A7R14  | SAME AS A7R4  |                            |            |           |
| A7R15               | SAME AS A2R5  |                            |            |           |
| A7R16               | SAME AS A7R10   |                            |            |           |
| A7R17               | SAME AS A3R11   |                            |            |           |
| A7R18               | SAME AS A7R12   |                            |            |           |
| A7R19 AND<br>A7R20  | SAME AS A7R13   |                            |            |           |
| A7R21               | SAME AS A2R5  |                            |            |           |
| A7R22               | SAME AS A7R10   |                            |            |           |
| A7R23               | SAME AS A3R11   |                            |            |           |
| A7R24               | SAME AS A7R12   |                            |            |           |
| A7R25 THRU<br>A7R27 | SAME AS A7R4  |                            |            |           |
| A7R28               | RESISTOR, FIXED, COMP., 27K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-273J  | CB2735                     | 01121      | 1         |
| A7R29               | SAME AS A2R5  |                            |            |           |
| A7R30               | RESISTOR, FIXED, COMP., 2.4K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-242J | CB2425                     | 01121      | 1         |
| A7R31               | SAME AS A3R3  |                            |            |           |
| A7R32               | SAME AS A7R4  |                            |            |           |
| A7R33               | SAME AS A2R5  |                            |            |           |
| A7R34               | SAME AS A7R10   |                            |            |           |
| A7R35               | SAME AS A3R11   |                            |            |           |
| A7R36               | SAME AS A7R12   |                            |            |           |
| A7R37 AND<br>A7R38  | SAME AS A7R4  |                            |            |           |
| A7R39               | SAME AS A2R5  |                            |            |           |
| A7R40               | SAME AS A7R10   |                            |            |           |
| A7R41               | SAME AS A3R11   |                            |            |           |
| A7R42               | SAME AS A7R12   |                            |            |           |
| A7R43 AND<br>A7R44  | SAME AS A7R4  |                            |            |           |

TABLE 6-2. PARTS LIST

| Ref Symbol     | Description   | Manufacturer's Part Number  | Mfr's Code | Maint Qty |
|----------------|---|-----------------------------|------------|-----------|
| A7R45          | SAME AS A2R5  |                             |            |           |
| A7R46          | SAME AS A7R10   |                             |            |           |
| A7R47          | SAME AS A3R11   |                             |            |           |
| A7R48          | RESISTOR, FIXED, COMP., 750 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-751J        | CB7515                      | 01121      | 1         |
| A7R49          | RESISTOR, VARIABLE, 200 OHMS<br>SINGER PART NO. 556146-735                                | 62PR200                     | 73138      | 1         |
| A7R50          | SAME AS A7R4  |                             |            |           |
| A7R51          | SAME AS A2R17   |                             |            |           |
| A7R52<br>A7R57 | THRU SAME AS A6R10  |                             |            |           |
| A7R58          | SAME AS A3R3  |                             |            |           |
| A7R59          | RESISTOR, VARIABLE, 1K OHMS<br>SINGER PART NO. 556146-516                                 | 62PR-1K                     | 73138      | 1         |
| A7R60          | RESISTOR, FIXED, COMP., 270 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-271J        | CB2715                      | 01121      | 1         |
| A7R61          | RESISTOR, VARIABLE, 5 K OHMS<br>SINGER PART NO. 556146-731                                | 62PR5K                      | 73138      | 1         |
| A7R62          | SAME AS A2R6  |                             |            |           |
| A7R63          | RESISTOR, FIXED, COMP., 39K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-393J        | CB3935                      | 01121      | 1         |
| A7R64          | SAME AS A5R8  |                             |            |           |
| A7R65          | SAME AS A7R63   |                             |            |           |
| A7R66          | RESISTOR, FIXED, COMP., 47K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-473J        | CB4735                      | 01121      | 1         |
| A7R67          | SAME AS A4R17   |                             |            |           |
| A7R68          | SAME AS A4R18   |                             |            |           |
| A7R69          | SAME AS A2R5  |                             |            |           |
| A7R70          | SAME AS A6R10   |                             |            |           |
| A8             | 100KHZ CRYSTAL I-F AMPLIFIER ASSY   | 103-1604- <del>00</del> 003 | 16665      | 1         |
| A8CR1<br>A8CR6 | THRU SAME AS A7CR1  |                             |            |           |
| A8C1<br>A8C2   | AND SAME AS A2C1  |                             |            |           |
| A8C3           | CAPACITOR, FIXED, CERAMIC DISC, 0.47 UF, PORM<br>20 PCT, 25V SINGER PART NO. 556120-160   | 5C11                        | 56289      | 1         |
| A8C4           | CAPACITOR, VARIABLE, 5.5 TO 18 PF, 350V<br>SINGER PART NO. 150-4001-002                   | 538-006-NPO, 5.5-18PF       | 72982      | 1         |
| A8C5           | CAPACITOR, FIXED, DIPPED MICA, 10 PF, PORM<br>5 PCT, 500V SINGER PART NO. 150-2002-100CJO | DM15C100J0500WV4CR          | 72136      | 1         |

Section VI  
Parts List

TABLE 6-2. PARTS LIST

| Ref Symbol              | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|-------------------------|--|----------------------------|------------|-----------|
| A8C6                    | SAME AS A2C3      FACTORY SELECTED   |                            |            |           |
| A8C7                    | SAME AS A3C2   |                            |            |           |
| A8C8                    | SAME AS A8C3   |                            |            |           |
| A8C9                    | SAME AS A3C2   |                            |            |           |
| A8C10      AND<br>A8C11 | SAME AS A8C3   |                            |            |           |
| A8C12                   | SAME AS A3C2   |                            |            |           |
| A8C13                   | CAPACITOR, FIXED, METALLIZED PAPER, 1 UF, PORM<br>5 PCT, 50V      SINGER PART NO. 556118-143 | 1PP5D                      | 02777      | 1         |
| A8C14                   | SAME AS A8CM   |                            |            |           |
| A8C15                   | SAME AS A6C6   |                            |            |           |
| A8C16                   | SAME AS A2C3      FACTORY SELECTED   |                            |            |           |
| A8C17                   | SAME AS A3C2   |                            |            |           |
| A8C18                   | SAME AS A8C3   |                            |            |           |
| A8C19                   | SAME AS A3C2   |                            |            |           |
| A8C20                   | SAME AS A8C13  |                            |            |           |
| A8C21                   | SAME AS A8C4   |                            |            |           |
| A8C22                   | SAME AS A6C6   |                            |            |           |
| A8C23                   | SAME AS A2C3      FACTORY SELECTED   |                            |            |           |
| A8C24                   | SAME AS A3C2   |                            |            |           |
| A8C25                   | SAME AS A8C13  |                            |            |           |
| A8C26      AND<br>A8C27 | SAME AS A3C2   |                            |            |           |
| A8Q1      THRU<br>A8Q15 | SAME AS A2Q3   |                            |            |           |
| A8R1      THRU<br>A8R4  | SAME AS A4R1   |                            |            |           |
| A8R5                    | SAME AS A2R1   |                            |            |           |
| A8R6      AND<br>A8R7   | SAME AS A3R10  |                            |            |           |
| A8R8                    | SAME AS A2R1   |                            |            |           |
| A8R9                    | SAME AS A3R13  |                            |            |           |
| A8R10                   | SAME AS A5R2   |                            |            |           |
| A8R11                   | SAME AS A6R22  |                            |            |           |
| A8R12                   | RESISTOR, FIXED, COMP., 220 OHMS, PORM 5 PCT<br>1/4W      SINGER PART NO. 151-1002-221J      | CB2215                     | 01121      | 1         |
| A8R13                   | SAME AS A2R5   |                            |            |           |



TABLE 6-2. PARTS LIST

| Ref Symbol | Description   | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|------------|---|----------------------------|------------|-----------|
| A8R14      | RESISTOR, FIXED, COMP., 7.5K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-752J | CB7525                     | 01121      | 1         |
| A8R15      | NOT USED  |                            |            |           |
| A8R16      | SAME AS A6R10   |                            |            |           |
| A8R16      | SAME AS A2R5  |                            |            |           |
| A8R17      | RESISTOR, FIXED, COMP., 62K OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-623J  | CB6235                     | 01121      | 1         |
| A8R18      | SAME AS A2R16   |                            |            |           |
| A8R19      | SAME AS A6R10   |                            |            |           |
| A8R20      | RESISTOR, FIXED, COMP., 330 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-331J  | CB3315                     | 01121      | 1         |
| A8R21      | SAME AS A2R1  |                            |            |           |
| A8R22      | SAME AS A6R10   |                            |            |           |
| A8R23      | SAME AS A6R8  |                            |            |           |
| A8R24      | SAME AS A6R10   |                            |            |           |
| A8R25      | RESISTOR, FIXED, COMP., 300 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-301J  | CB3015                     | 01121      | 1         |
| A8R26      | SAME AS A3R13   |                            |            |           |
| A8R27      | SAME AS A5R2  |                            |            |           |
| A8R28      | SAME AS A6R22   |                            |            |           |
| A8R29      | SAME AS A2R1  |                            |            |           |
| A8R30      | SAME AS A8R12   |                            |            |           |
| A8R31      | SAME AS A2R5  |                            |            |           |
| A8R32      | SAME AS A8R14   |                            |            |           |
| A8R33      | SAME AS A6R10   |                            |            |           |
| A8R34      | SAME AS A2R5  |                            |            |           |
| A8R35      | SAME AS A8R25   |                            |            |           |
| A8R36      | SAME AS A3R13   |                            |            |           |
| A8R37      | SAME AS A5R2  |                            |            |           |
| A8R38      | SAME AS A6R22   |                            |            |           |
| A8R39      | SAME AS A8R12   |                            |            |           |
| A8R40      | SAME AS A3R3  |                            |            |           |
| A8R41      | RESISTOR, FIXED, COMP., 910 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-911J  | CB9115                     | 01121      | 1         |
| A8R42      | SAME AS A8R14   |                            |            |           |
| A8R43      | SAME AS A6R10   |                            |            |           |

Section VI  
Parts List

TABLE 6-2. PARTS LIST

| Ref Symbol     | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|----------------|--|----------------------------|------------|-----------|
| A8R44          | SAME AS A2R5   |                            |            |           |
| A8R45          | SAME AS A8R20  |                            |            |           |
| A8R46<br>A8R48 | THRU RESISTOR, FIXED, COMP., 390K OHMS, PORM 5 PCT<br>1/4W FACTORY SELECTED<br>SINGER PATT NO. 151-1003-394J | CB3945                     | 01121      | 1         |
| A8T1           | TRANSFORMER, RESOLUTION  | 132-0046-001               | 16665      | 1         |
| A8T2           | TRANSFORMER, INTER STAGE COUPLING  | 556162-174                 | 16665      | 1         |
| A8T3           | SAME AS A8T1   |                            |            |           |
| A8T4           | SAME AS A8T2   |                            |            |           |
| A8T5           | SAME AS A8T3   |                            |            |           |
| A8Y1<br>A8Y3   | THRU CRYSTAL, 100KC MATCHED TRIPLET SET CRYSTAL  | 556162-043                 | 16665      | 1         |
| A8XY1<br>A8XY3 | THRU SOCKET, CRYSTAL   | 117-0381-001               | 16665      | 1         |
| A9             | MIXER ASSY   | 103-1596-001               | 16665      | 1         |
| A9C1           | CAPACITOR, FIXED, CERAMIC, 0.047 UF, PORM 20<br>PCT, SINGER PART NO. 556146-728                              | 65F12AB473                 | 01002      | 1         |
| A9C2<br>A9C3   | AND SAME AS A3C2   |                            |            |           |
| A9C4           | SAME AS A3C4   |                            |            |           |
| A9Q1           | TRANSISTOR SINGER PART NO. 556118-201  | 2N2996                     | 81349      | 1         |
| A9R1           | SAME AS A2R5   |                            |            |           |
| A9R2           | RESISTOR, FIXED, COMP., 220 OHMS, PORM 5 PCT<br>1/4W SINGER PART NO. 151-1002-220J                           | CB2205                     | 01121      | 1         |
| A9R3           | SAME AS A2R12  |                            |            |           |
| A9R4           | SAME AS A2R12  |                            |            |           |
| A9R5           | SAME AS A8R25  |                            |            |           |
| A9R6           | SAME AS A2R5   |                            |            |           |
| A9R7           | SAME AS A5R2   |                            |            |           |
| A9R8           | SAME AS A2R5   |                            |            |           |
| A10            | INPUT ATTENUATOR ASSY  | 103-1508-001               | 16665      | 1         |
| A10C1          | CAPACITOR, FIXED, CERAMIC DISC, 0.05UF, PLUS<br>80 PCT MINUS 20 PCT, 200V<br>SINGER PART NO. 556074-057      | 33C137                     | 56289      | 1         |
| A10C2          | SAME AS A4C6   |                            |            |           |
| A10C3          | CAPACITOR, FIXED, DIPPED MICA, 240 PF, PORM<br>5 PCT, 500V SINGER PART NO. 150-2002-241EJO                   | DM15E241J0500WV4CR         | 72136      | 1         |
| A10R1          | SAME AS A3R10  |                            |            |           |

TABLE 6-2. PARTS LIST


| Ref Symbol         | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|--------------------|--|----------------------------|------------|-----------|
| A10R2              | SAME AS A2R5   |                            |            |           |
| A10R3              | RESISTOR, FIXED, PREC., 62.3 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B62R30F | C1/8E62.30HMPORM1PCT       | 12126      | 1         |
| A10R4              | RESISTOR, FIXED, PREC., 253 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B2530F   | C1/8E2530HMSPOORM1PCT      | 12126      | 1         |
| A10R5 AND<br>A10R6 | SAME AS A10R3  |                            |            |           |
| A10R7              | SAME AS A10R4  |                            |            |           |
| A10R8              | SAME AS A10R3  |                            |            |           |
| A10R9              | RESISTOR, FIXED, PREC., 72.8 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B72R80F | C1/8E72.80HMPORM1PCT       | 12126      | 1         |
| A10R10             | RESISTOR, FIXED, PREC., 139 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B1390F   | C1/8E1390HMSPOORM1PCT      | 12126      | 1         |
| A10R11             | SAME AS A10R9  |                            |            |           |
| A10R12             | RESISTOR, FIXED, PREC., 116.5 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 556146-891      | C1/8E116.5 OHMS 1PCT       | 12126      | 1         |
| A10R13             | RESISTOR, FIXED, PREC., 53.8 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B53R80F | C1/8E53.80HMPORM1PCT       | 12126      | 1         |
| A10R14             | SAME AS A10R12   |                            |            |           |
| A10R15             | RESISTOR, FIXED, PREC., 226 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B2260F   | C1/8E2260HMSPOORM1PCT      | 12126      | 1         |
| A10R16             | RESISTOR, FIXED, PREC., 24.3 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B24R30F | C1/8E24.30HMPORM1PCT       | 12126      | 1         |
| A10R17             | SAME AS A10R15   |                            |            |           |
| A10R18             | RESISTOR, FIXED, PREC., 445 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B4450F   | C1/8E4450HMSPOORM1PCT      | 12126      | 1         |
| A10R19             | RESISTOR, FIXED, PREC., 11.9 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B11R90F | C1/8E11.90HMPORM1PCT       | 12126      | 1         |
| A10R20             | SAME AS A10R18   |                            |            |           |
| A10R21             | RESISTOR, FIXED, PREC., 887 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B8870F   | C1/8E8870HMSPOORM1PCT      | 12126      | 1         |
| A10R22             | RESISTOR, FIXED, PREC., 5.95 OHMS, PORM 1 PCT, 1/8W SINGER PART NO. 151-1008-B5R950F | C1/8E5.950HMPORM1PCT       | 12126      | 1         |
| A10R23             | SAME AS A10R21   |                            |            |           |
| A10S               | (7) ALL THE SAME ST6147-23Y  |                            |            |           |

## ADDENDUM

for

### PANALYZOR MODEL CA-5

1. a. In figure 5-1, add L6 and C11 and modify the existing schematic as illustrated below.

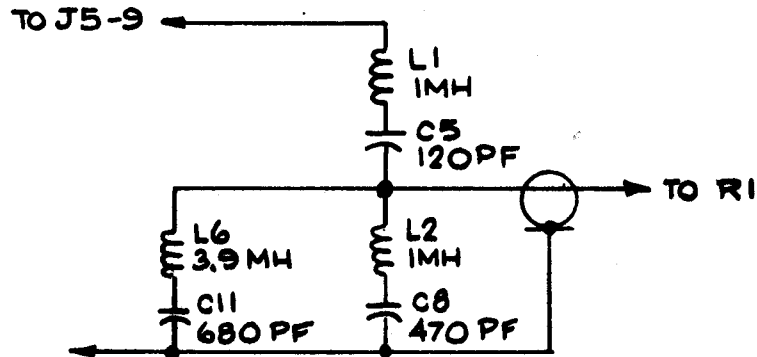

1. b. Add the following entries into table 6-2.

| Ref Symbol | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|------------|--|----------------------------|------------|-----------|
| C11        | CAPACITOR, FIXED, DIPPED MICA 680 PF, PORM 5 PCT, 300 V<br>Singer Part No. 150-2002-681EJO | DM15E681J0<br>300WV4CR     | 7 2136     | 1         |
| L6         | COIL, RF, 3.9 MH<br>Singer Part No. 556012-215   | 393AF                      | 76493      | 1         |

2. a. In figure 5-4, shunt a capacitor (C28, 0.01) across R37.

2. b. In table 6-2, add

| Ref Symbol | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|------------|--------------|----------------------------|------------|-----------|
| A8C28      | SAME AS A3C2 |                            |            |           |

**ADDENDUM**

for

**MODEL CA-5**

1. In figure 5-7, change A2CR3 diode type entry from ZD2.4B to 1N4370A.
2. In table 1-2, change A2CR3 diode type entry from ZD2.4B to 1N4370A.
3. Make the following changes to the List of Replaceable Parts.

| Ref Symbol | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|------------|--|----------------------------|------------|-----------|
| A2CR3      | SEMICONDUCTOR DEVICE,<br>DIODE Singer P/N 556146-881 | 1N4370A                    | 81349      | 1         |
| A6CR3      | SEMICONDUCTOR DEVICE,<br>DIODE Singer P/N 556146-729 | ZD4.7B                     | 12060      | 1         |

## ADDENDUM

for

### MODEL CA-5 and CA-5/GD

1. On figure 5-3, add reference symbol T2 to the unmarked transformer.
2. On figure 5-4, make the following changes:
  - a. Change capacitor A8C5 from "10UF" to "10PF"
  - b. Change capacitor A8C15 from "5UF" to "5PF"
3. On figure 5-5, make the following changes:
  - a. Add resistor A7R8, 3K between the junction of R7 and R9.
  - b. Add resistor A7R70, 10K between the junction of C39 and R57.
4. On figure 5-8, make the following changes:
  - a. Add capacitor A4C7 between the collector of Q3 and the emitter of Q3.
  - b. Add capacitor A4R5 between the junction of Y1 and L1.
5. Make the following changes to the List of Replaceable Parts.
  - a. Delete R14 from the Parts List.
  - b. Add the items noted below to the Parts List.

| Ref Symbol | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|------------|--|----------------------------|------------|-----------|
| C1         | CAPACITOR, FIXED, ELECTROLYTIC, 30UF, PLUS 75, MINUS 10 PCT, 15V<br>SINGER PART NO. 556074-025 | 30D306G015<br>CBO          | 56289      | 1         |
| C2         | CAPACITOR, FIXED, METALLIZED PAPER, 2UF, PORM 5 PCT, 50V<br>SINGER PART NO. 556146-719         | 2PP5D                      | 02777      | 1         |
| C7         | CAPACITOR, FIXED, ELECTROLYTIC, 5UF, PLUS 150, MINUS 10 PCT, 50V<br>SINGER PART NO. 556074-169 | CE11C050G                  | 56289      | 1         |
| R8         | RESISTOR, FIXED, FILM 2945 OHMS, PORM 1 PCT, 1/4W<br>SINGER PART NO. 556146-647                | TYPE RN60C                 | 81349      | 1         |

| Ref Symbol            | Description   | Manufacturer's Part Number  | Mfr's Code | Maint Qty |
|-----------------------|---|-----------------------------|------------|-----------|
| R9                    | RESISTOR, FIXED, FILM, 5975 OHMS,<br>FORM 1 PCT, 1/4W<br>SINGER PART NO. 556146-647               | TYPE RN60C                  | 81349      | 1         |
| A1R6                  | RESISTOR, VARIABLE, 50K OHMS,<br>FORM 30 PCT, 1/4W<br>SINGER PART NO. 556146-633                  | U201R503B                   | 71450      | 1         |
| A1R7<br>THRU<br>R1R11 | RESISTOR, VARIABLE, 100K OHMS,<br>FORM 30 PCT, 1/4W<br>SINGER PART NO. 556146-632                 | U201R104B                   | 71450      | 1         |
| A2C8                  | CAPACITOR, FIXED, METALLIZED<br>PAPER, 0.5UF, FORM 20 PCT,<br>SINGER PART NO. 556146-720          | P5P5D                       | 02777      | 1         |
| A2R6                  | RESISTOR, FIXED, COMP., 1.3K<br>OHMS, FORM 5 PCT, 1/4W<br>SINGER PART NO. 151-1002-123J           | CB1325                      | 01121      | 1         |
| A2R20                 | RESISTOR, FIXED, PREC., 200 OHMS,<br>FORM 1 PCT, 1/2W<br>SINGER PART NO. 151-1008-B2000F          | C1/2E200 OHMS<br>FORM 1 PCT | 12126      | 1         |
| A4C9<br>AND<br>A4C10  | CAPACITOR, FIXED, ELECTROLYTIC,<br>5UF, PLUS 75, MINUS 10 PCT, 25V<br>SINGER PART NO. 556166-119  | TE1202                      | 56289      | 1         |
| A5C6                  | CAPACITOR, FIXED, ELECTROLYTIC,<br>50UF, PLUS 50, MINUS 10 PCT, 25V<br>SINGER PART NO. 556075-009 | 40D184A2                    | 56289      | 1         |
| A6C3                  | CAPACITOR, FIXED, METALLIZED,<br>PAPER, 0.22UF, FORM 20 PCT, 50V<br>SINGER PART NO. 556146-641    | P22P5D                      | 02777      | 1         |
| A6C8                  | CAPACITOR, FIXED, DIPPED MICA,<br>3000PF, FORM 5 PCT, 100V<br>SINGER PART NO. 150-2002-302FJO     | DM15F302JO<br>100WV4CR      | 72136      | 1         |
| A6C9                  | CAPACITOR, FIXED, DIPPED MICA,<br>3900PF, FORM 5 PCT, 100V<br>SINGER PART NO. 150-2002-392FJO     | DM15F392JO<br>100WV4CR      | 72136      | 1         |
| A6C18                 | CAPACITOR, FIXED, TANTALUM,<br>1.5UF, FORM 10 PCT, 20V<br>SINGER PART NO. 556146-643              | SCM155FPO<br>2A2            | 01295      | 1         |

| Ref Symbol | Description   | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|------------|---|----------------------------|------------|-----------|
| A6C19      | CAPACITOR, FIXED, TANTALUM,<br>22UF, PORM 10 PCT, 35V<br>SINGER PART NO. 556146-644               | SCM226GPO<br>35C2          | 01295      | 1         |
| A6Q6       | TRANSISTOR<br>SINGER PART NO. 556146-652  | 2N1671B                    | 81349      | 1         |
| A6R21      | RESISTOR, FIXED, COMP., 4.7K<br>OHMS, PORM 5 PCT, 1/4W<br>SINGER PART NO. 151-1002-472J           | CB4725                     | 01121      | 1         |
| A7C10      | CAPACITOR, FIXED, ELECTROLYTIC,<br>50UF, PLUS 50, MINUS 10 PCT, 50V<br>SINGER PART NO. 556073-004 | TE1307                     | 56289      | 1         |
| A7R64      | RESISTOR, FIXED, COMP., 120K<br>OHMS, PORM 5 PCT, 1/4W<br>SINGER PART NO. 151-1002-124J           | CB1245                     | 01121      | 1         |
| A8C28      | SAME AS A3C2  |                            |            |           |
| A8R15      | SAME AS A6R10   |                            |            |           |
| A9C1       | CAPACITOR, FIXED, CERAMIC,<br>0.047UF, PORM 20 PCT, 50V<br>SINGER PART NO. 556146-728             | 65F12AB473                 | 01002      | 1         |
| A9R2       | RESISTOR, FIXED, COMP., 22 OHMS,<br>PORM 5 PCT, 1/4W<br>SINGER PART NO. 151-1002-220J             | CB2205                     | 01121      | 1         |

Addendum No. 510



## ADDENDUM

for

MODEL CA-5

### I. PURPOSE.

To correct existing errors in handbook.

### II. ADDENDUM.

a. Change step 2c (procedure) of table 4-3 (page 4-8) to read:

"c. Connect the frequency counter input to the X OUT connector on the rear of the MF-5. Set the **FREQ SCALE-Hz/DIV** switch to **VAR** and rotate the **FREQ SCALE** control fully **CW**. Record the frequency counter indication."

b. Change step 2c (acceptable indication) of table 4-3 (page 4-8) to read:

"c. Frequency counter reads 30 Hz minimum."

c. Page 4-20, paragraph 4-27n, change 250 kHz to 250 Hz.

d. Page 4-21, paragraph 4-27q, change A6R2 to read A6R3.

**ADDENDUM**

for

**MODEL CA-5**

**(Effective Serial No. U17258 and above)**

**Make the following changes to the List of Replaceable Parts.**

| <b>Ref Symbol</b> | <b>Description</b>  | <b>Manufacturer's Part Number</b> | <b>Mfr's Code</b> | <b>Maint Qty</b> |
|-------------------|---|-----------------------------------|-------------------|------------------|
| <b>A8C29</b>      | <b>CAPACITOR, FIXED, CER-AMIC DISCS, 0.05 uf, PLUS 80 PCT, MINUS 20 PCT, 200 V<br/>Singer Part No. 556074-057</b> | <b>33C137</b>                     | <b>56289</b>      | <b>1</b>         |
| <b>A10C1</b>      | <b>SAME AS A8C29</b>  |                                   |                   |                  |

**ADDENDUM**

for

**MODEL CA-5**

(Effective Serial No. U15760 and above)

1. In figure 5-2, change A10C3, 240PF to 200 PF.
2. In figure 5-5, add R8 3K to the unmarked resistor in the emitter circuit of Q2.
3. In figure 5-5, change R29, 200 in the collector circuit of Q6 to R27, 200.
4. Make the following changes to the List of Replaceable Parts.

| Ref Symbol | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|------------|--------------|----------------------------|------------|-----------|
| A10C3      | SAME AS A3C6 |                            |            |           |

Addendum No. 526  
(05 to 06)

## **ADDENDUM**

for

### **PANALYZOR, MODEL CA-5**

**(Effective on Serial Numbers U18002, U18016,  
U18028, U18029, U18031 thru U18033, U18035,  
thru U18039, U18041, U18042 and Above)**

#### **I PURPOSE.**

To provide the A2 plug-in printed-circuit board with a better ground connection, by electrically connecting the A2 to the A3 and A4 boards.

#### **II ADDENDUM.**

There are two clips that straddle printed-circuit boards A2, A3, and A4. These clips are hinged on printed-circuit board A4, and the other end of each clip snaps in place along the top horizontal edge of printed-circuit board A2. For proper operation, these clips should be in place at all times.

## ADDENDUM

for

### PANALYZORS MODELS CA-5, CA-5-1 and CA-5/GD

#### I PURPOSE.

To correct the existing errors in this manual.

#### II ADDENDUM.

a. Change the procedure in step 2c of table 4-3 as follows:

"2c. Connect the frequency counter input to the X OUT connector on the rear of the Model MF-5 Main Frame. Set the **FREQ SCALE** Hz/DIV switch on the Panalyzer to the VAR position and rotate the **FREQ SCALE** control fully CW. Record the frequency counter indication."

b. Change step 2c under the Acceptable Indication column of table 4-3 as follows:

"2c. Frequency counter reads 30 Hz minimum."

c. In paragraph 4-27n, change "250 kHz" to read "250 Hz".

d. In paragraph 4-27q, change "A6R2" to read "A6R3".

3. In figure 3-2, remove duplicate control marked "R14 GAIN" connected to the top side of box labelled "EMITTER FOLLOWER Q4" of the 500 kHz IF AMPLIFIER A5. Add the word "GAIN" to control labelled R14 adjacent to the bottom of the same box labelled "EMITTER FOLLOWER Q4".

## ADDENDUM

for

MODELS CA-5 and CA-5-1  
(Effectivity: Serial No. U30198 and up)

1. In figure 5-8, change the value of R17 from 470 to 390 ohms.
2. In table 6-2. change the following entries:

| Ref Symbol | Description  | Manufacturer's Part Number | Mfr's Code | Maint Qty |
|------------|--|----------------------------|------------|-----------|
| A4R17      | RESISTOR, FIXED, COMP.,<br>390 OHMS, PORM 5 PCT, 1/4W<br>SINGER PART NO. 151-1002-391J | CB3915                     | 01121      | 1         |
| A6R5       | RESISTOR, FIXED, COMP.,<br>470 OHMS, PORM 5 PCT, 1/4W<br>SINGER PART NO. 151-1002-471J | CB4715                     | 01121      | 2         |
| A7R3       | SAME AS A6R5   |                            |            |           |
| A7R7       | SAME AS A6R5   |                            |            |           |
| A7R67      | SAME AS A6R5   |                            |            |           |

Addendum No. 566